
# **Speed Controller with Pilot Check Valve** with One-touch Fitting

# ASP Series



Pilot check valve and speed controller are combined.

Realizes momentary intermediate stoppage of a cylinder and able to adjust speed control of it.

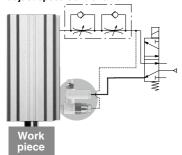

Example of drop prevention circuit

Tubing mount direction is 360° free. Electroless nickel plated is provided as standard.



### Symbol



Made to Order	Made to Order
Lubricant: Vaseline	X12

#### Model

		Pilot port			App	licable	tubing	O.D.			
Model	Port size		Pilot port Metric s					Inch size			
			ø6	ø8	ø10	ø12	ø1/4"	ø5/16"	ø3/8"	ø1/2"	
ASP330F-01	R 1/8	M5 x 0.8	•	•							
ASP430F-02	R 1/4	Rc 1/8	•	•							
ASP530F-03	R 3/8	Rc 1/8		•	•						
ASP630F-04	R 1/2	Rc 1/4			•	•					
ASP430F-F02	R 1/4	G 1/8	•	•							
ASP530F-F03	R 3/8	G 1/8		•	•						
ASP630F-F04	R 1/2	G 1/4			•	•					
ASP330F-N01	NPT 1/8	10-32 UNF					•	•			
ASP430F-N02	NPT 1/4	NPT 1/8					•	•			
ASP530F-N03	NPT 3/8	NPT 1/8						•	•		
ASP630F-N04	NPT 1/2	NPT 1/4							•	•	

Note) Brass parts are all electroless nickel plated

## **Specifications**

Fluid	Air
Proof pressure	1.5 MPa
Max. operating pressure	1 MPa
Min. operating pressure	0.1 MPa
Pilot check valve operating pressure	More than 50% the operating pressure (Over 0.1 MPa)
Ambient and fluid temperature	-5 to 60°C (No freezing)
Applicable tubing material	Nylon, Soft nylon, Polyurethane

Note) Use caution regarding the max, operating pressure when soft nylon or polyurethane tubing is used. (Refer to pages 464 and 465 for details.)

#### Flow Rate and Sonic Conductance

ı	Model	ASP330F	ASP	430F	ASP	530F	ASP630F		
	Metric size	ø6, ø8	ø6	ø8	ø8	ø10	ø10	ø12	
Tubing O.D.	Inch size	ø1/4" ø5/16"	_	ø1/4" ø5/16"	ø5/16"	ø3/8"	_	ø3/8" ø1/2"	
Controlled	Flow rate (L/min(ANR))	180	330	350	600	750	1100	1190	
flow Free flow	Sonic conductance dm³/(s·bar)	0.58	1.04	1.08	1.86	2.32	3.4	3.68	
Critical	Controlled flow	0.15	0.15 0.15		0.5	15	0.15		
pressure ratio	Free flow	0.25	0.2	25	0.2	25	0.25		

Note) Flow rate values are measured at 0.5 MPa and 20°C.

AS-F TMH

ASD AS

AS-FE

KE

AS-FG

AS-FP

AS-FM

AS-D

AS-T

ASP

ASN


AQ

ASV

AK VCHC

ASR ASQ


### How to Order

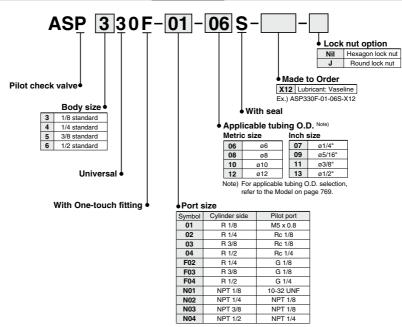


# Needle Valve/ Flow Rate Characteristics

Note) The flow rate characteristics are representative values.


# ASP330F

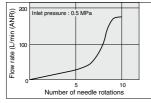


#### ASP430F

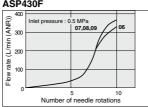


## ASP530F

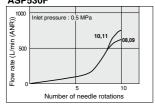

## ASP630F

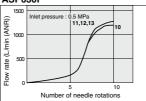


#### **Dimensions**

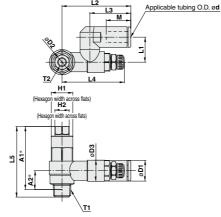

#### **Metric Size**

Model	١			114	H2	D1	D2	-		L2	L3	L4	(1)		A 4 (2)	40 (2)	м	Weight					
wodei	a	T1	T2	H1	Π2	וט	D2	D3	L1	L2	L3	Max.	Min.	L5	A1 (2)	A2 (2)	IVI	(g)					
ASP330F-01-06S	6	R 1/8	M5 x 0.8	12	8	11.6	14.2	11.8	14	38.4	22.9	39.6	34.6	38.6	35.2	10.5	13.7	32					
ASP330F-01-08S	8	11 1/0	WIS X 0.0	12		15.2	14.2 11.0	11.0	15.8	44.7	28.2	38.9	33.9	30.0	33.2	10.5	18.7	35					
ASP430F-02-06S	6	R 1/4	1/8	1/0 17	17 12	12.8	2.8	18.5 15	18	43.4	25.2	41.7	36.7	48.2	42.4	10.9	16.8	65					
ASP430F-02-08S	8	n 1/4	1/0	'/	12	15.2	10.5		19.7	46.4	28.2	41.7	36.7	40.2			18.7	68					
ASP530F-03-08S	8	R 3/8	1/8	19	12	15.2	15.2	15.2	15.2	15.2	15.2	.2 23	00 100	20.3	51.3	28.2	46.9	41.9	55.1	50		18.7	107
ASP530F-03-10S	10	H 3/8	1/8	19	12	18.5	23	19.8	23.1	54.1	32.6	46.9	41.9	55.1	50	14.4	20.8	110					
ASP630F-04-10S	10	R 1/2	1/4	24	4-	18.5	20.6	00.0	00.0			00.5	00.5	05.0	64.2	32.6	64.8	57.3	69.4	61.8	18.3	20.8	212
ASP630F-04-12S	12	H 1/2	1/4	24	17	20.9 28.6	26.5	25.9	66	34.4	64.8	57.3	69.4	61.8	18.3	21.8	215						

Note 1) Reference dimensions Note 2) Reference dimensions of R thread after installation.

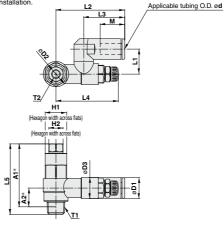

#### Inch Size

								-				L4	(1)		(0)	(0)		Weight										
Model	d	T1	T2	H1	H2	D1	D2	D3	L1	L2	L3	Max.	Min.	L5	A1 (2)	<b>A2</b> (2)	М	(g)										
ASP330F-N01-07S	1/4"	NPT 1/8	10-32 UNF	1/2"	8	13.2	14.2	11.8	15.8	42.2	25.6	38.9	33.9	38.6	35.1	10.5	17	35										
ASP330F-N01-09S	5/16"	INI 1 1/0	10-32 ONI	1/2	0	15.2	14.2	11.0	15.8	44.7	28.2	38.9	33.9	30.0	33.1	10.5	18.7											
ASP430F-N02-07S	1/4"	NDT 4/4	NDT 1/4	NDT 1/4	NDT 1/4	NDT 1/4	NDT 1/4	NDT 1/4	NDT 1/4	NDT 1/4	NPT 1/4	NDT 1/4	NPT 1/8	11/16"	1/2"	13.2	18.5	15	18	43.9	25.6	41.7	36.7	48.2	42.6	10.9	17	68
ASP430F-N02-09S	5/16"	INF I 1/4	INF I I/O	11/10	1/2	15.2	10.5	.5 15	13	13	13	13	13	1.5	.5	15	10	46.4	28.2	41.7	30.7	40.2	42.6	10.9	18.7	00		
ASP530F-N03-09S	5/16"	NPT 3/8	NPT 1/8	19	1/2"	15.2	23	19.8	20.3	51.3	28.2	46.9	41.9	55.1	50.3	14.4	18.7	107										
ASP530F-N03-11S	3/8"	INF I 3/0	INF I I/O	19	1/2	18.5	23	19.0	23.1	54.1	32.6	40.9	41.9	55.1	30.3	14.4	20.8	116										
ASP630F-N04-11S	3/8"	NPT 1/2	NPT 1/4	15/16"	11/16"	18.5	28.6	26.5	25.9	64.2	32.6	64.8	57.3	69.4	61.8	18.3	20.8	220										
ASP630F-N04-13S	1/2"	INF ( 1/2	INF I 1/4	13/10	11/16	21.7	20.6	20.5	26.5	66.3	34.7	04.8	57.3	69.4	61.8	10.3	21.8	230										

Note 1) Reference dimensions Note 2) Reference dimensions of NPT thread after installation.



AS-F

TMH

ASD AS

AS-FE

KE

AS-FG

AS-FP AS-FM

AS-D

AS-T

ASP ASN

AQ


ASV


AK

VCHC ASR ASQ

# **ASP** Series

## Construction

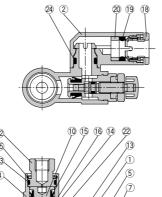

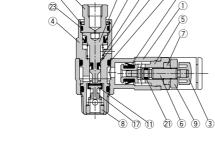

## **Component Parts**

No.	Description	Material	Note
1	Body A	PBT	
2	Elbow body	PBT	
3	Handle	PBT	
4	Pilot body	Brass	Electroless nickel plated
5	Body B	Brass	Electroless nickel plated
6	Needle	Brass	Electroless nickel plated
7	Needle guide	Brass	Electroless nickel plated
8	Guide	Brass	Electroless nickel plated
9	Lock nut	Steel (2)	Zinc chromated (1)
10	Piston	Brass	Electroless nickel plated
11	Valve	Stainless steel, NBR	
12	Cover	Brass	Electroless nickel plated
13	U seal	HNBR	

Note 1) The round lock nut is electroless nickel plated.

Note 2) The round lock nut is made of brass. However, note that only the ASP330F and ASP430F use steel.

# **Component Parts**

No.	Description	Material	Note
14	DY seal	NBR	
15	DY seal	NBR	
16	Spring	Stainless steel	
17	Spring	Stainless steel	
18	Cassette	_	
19	Seal	NBR	
20	Spacer	_	
21	O-ring	NBR	
22	O-ring	NBR	
23	O-ring	NBR	
24	O-ring	NBR	
25	Ring	Stainless steel	



# ASP Series Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 543 to 546 for Flow Control Equipment Precautions.

#### Design/Selection

# **∆**Warning

1. This product cannot be used for accurate and precise intermediate stops of the actuator.

Due to the compressibility of air as a fluid, the actuator will continue to move until it reaches a position of pressure balance, even though the pilot check valve closes with an intermediate stop signal.

2. This product cannot be used to hold a stop position for an extended period of time.

Pilot check valves and actuators are not guaranteed for zero air leakage. Therefore, it is sometimes not possible to hold a stop position for an extended period of time. In the event that holding for an extended time is necessary, a mechanical means for holding should be devised.

3. Consider the release of residual pressure.

Actuators may move suddenly due to residual pressure, which can be dangerous during maintenance procedures.

- 4. When used in a balance control circuit, there are instances in which the check valve cannot release, even though the pilot pressure is 50% of the operating pressure. In these cases, the pilot pressure should be the same as the operating pressure.
- For reference, SMC has conducted endurance tests in which ON, OFF operation of the check valve was performed at the maximum operating pressure, with a confirmed endurance of 10 million operations.

Since the tests were performed under limited conditions, use caution in evaluating the results.

- 6. The check valve has a construction, in which it is closed by the differential pressure generated when the inlet pressure (IN side) or outlet pressure (OUT side) solenoid valve is switched. Be aware that the check valve does not close completely and the outlet pressure (OUT side) may drop when the inlet pressure (IN side) drops gently and the differential pressure becomes smaller than the minimum operating pressure or cracking pressure.
- 7. When free flow is selected for the ASP, chattering may occur if it is operated under conditions where there is low differential pressure on either side of the ASP. Chattering may be reduced by increasing the diameter of the piping or selecting an ASP with a smaller body size; however, if no improvement is seen, we recommend using a perfect spacer in place of the ASP.

#### Installation

# **⚠** Warning

- When mounting, please firmly align the tool with the hexagon width across flats of the pilot body. If the hexagon width across flats is damaged as a result of failure to properly align the tool, the pilot body will be deformed, and poor pilot operation may result.
- 2. Do not apply excessive force or shock to the cover (pilot port portion), fittings, or other parts of the product with tools. Also, do not apply any moment, twisting, pulling, or other external force when connecting a fitting to the cover (pilot port portion) or after mounting. Doing so may result in damage or air leakage.

When connecting piping, use a tube of sufficient length, in accordance with the recommended piping conditions described in Fig. 1. When binding the piping together with a tying band, etc., be sure that external force is not being applied to the piping. (Refer to Fig. 2.)

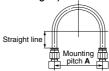


Fig. 1 Recommended piping

Unit: [mm]

AS-F

TMH

ASD

AS

AS-FE

KE

AS-FG

AS-FM

AS-D

AS-T

ASP

ASN

AQ

ASV

AK

VCHC

ASR

				Onit. [mm]
Tubing size	l n	Straight line		
rubing size	Nylon tubing	length		
ø2	_	_	13 or more	10 or more
ø3.2, 1/8"	44 or more	35 or more	25 or more	16 or more
ø4, 5/32"	56 or more	44 or more	26 or more	20 or more
ø3/16"	67 or more	52 or more	38 or more	24 or more
ø6	84 or more	66 or more	39 or more	30 or more
ø1/4"	89 or more	70 or more	57 or more	32 or more
ø8, 5/16"	112 or more	88 or more	52 or more	40 or more
ø10	140 or more	110 or more	69 or more	50 or more
ø3/8"	134 or more	105 or more	69 or more	48 or more
ø12	168 or more	132 or more	88 or more	60 or more
ø1/2"	178 or more	140 or more	93 or more	64 or more
ø16	224 or more	176 or more	114 or more	80 or more

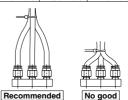


Fig. 2 When using a tying band to bind the piping together

#### Air source

# <u>ſ`</u>Warning

 If moisture enters the inside of the connecting piping, the cover may corrode, and it may lead to a pilot operation malfunction.