# Fine Lock Cylinders/Lock-up Cylinder

# CL Series

# ø16, ø20, ø25, ø32, ø40, ø50, ø63, ø80, ø100, ø125, ø140, ø160


Locking	Spring	Pneumatic	Spring and pneumatic locking
method	locking	locking	
Features	Unlocking Discharging the air causes the lock to operate.	Pressure locking The holding power can be varied according to the air pressure that is applied to the port.	Pressure locking The holding power can be varied according to the air pressure that is applied to the port. Unlocking Discharging the air causes the lock to operate.

(Lock-up cylinders are spring locking only.)

# Locking in both directions is possible.

possible, too.

(The lock-up cylinder can be locked only in one direction.)

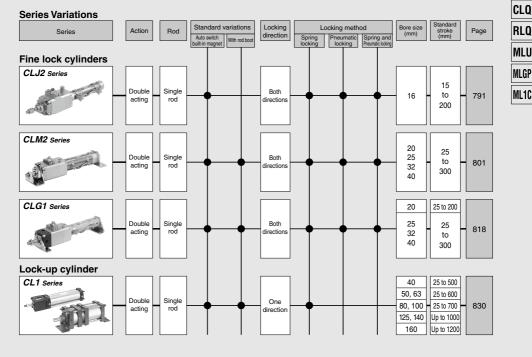

785

D-□ -X□



Be sure to read this before handling the products. The precautions on these pages are for the fine lock cylinders and the lock-up cylinders. Refer to back page 50 for Safety Instructions. For general actuator precautions, refer to Actuator Precautions on pages 3 to 7.

#### Design of Equipment and Machinery

### **∆** Warning

- Construct so that the human body will not come into direct contact with driven objects or the moving parts of locking cylinders. If there is a risk of contact, provide safety measures such as a cover or a system that uses sensors that will activate an emergency stop before contact is made.
- 2. Use a balance circuit in which lurching of the piston is taken into consideration. If the lock is applied at a desired position of a stroke and compressed air is applied to only one side of the cylinder, the piston will lurch at a high speed the moment the lock is disengaged. In such a situation, there is a risk of injury to humans, or equipment damage. To prevent the piston from lurching, use a balance circuit such as the recommended pneumatic circuit (P. 788). If an air-hydro fine lock cylinder is used, make sure to operate the lock portion through air pressure. Never use oil on the lock-up cylinder because the lock-up cylinder is a non-lube type. Failure to observe this could cause the lock to malfunction

#### Selection

#### ▲ Warning

Refer to the following criteria for the maximum load in the locked state, and set.

Holding force (maximum static load) means the maximum capability of holding a static load that is not accompanied by vibration or impact under the condition that no load is applied. Therefore, it does not refer to a load that cannot be held constantly. To ensure braking force, the maximum load must be set as described below.

- 1. For constant static loads, such as for drop prevention:
  - Fine lock series (CLJ2/CLM2/CLG1 series)

35% or less of the holding force (maximum static load)

Note) For applications such as drop prevention, consider situations in which the air source is shut off, and make selections based on the holding force of the spring locked state. Do not use the pneumatic lock for drop prevention purposes.

 Lock-up series (CL1 series) 50% or less of the holding force (maximum static load)

- 2. When kinetic energy acts upon the cylinder in a locked state, such as when effecting an intermediate stop, there are constraints in terms of the allowable kinetic energy. Therefore, refer to the allowable kinetic energy of the respective series. during locking, Furthermore the mechanism must sustain the thrust of the cylinder itself, in addition to absorbing the kinetic energy. Therefore, even within a given allowable kinetic energy level, there is an upper limit to the amount of the load that can be sustained.
  - Fine lock series (CLJ2/CLM2/CLG1 series)

Maximum load at horizontal mounting: 70% or less of the holding force (Maximum static load) for spring lock Maximum load at vertical mounting: 35% or less of the holding force (Maximum static load) for spring lock

 Lock-up series (CL1 series) Maximum load at horizontal mounting: 50% or less of the holding force (Maximum static load)

Maximum load at vertical mounting: 25% or less of the holding force (Maximum static load)

- In a locked state, do not apply impacts, strong vibrations or rotational forces.
   Do not apply a impacts, strong vibrations or rotational forces from external sources, because this could damage or shorten the life of the lock unit.
- The locking of the fine lock cylinder is directional.

Although the fine lock cylinder can be locked in both directions, be aware that its holding force is smaller in one of the directions. CLl2/CLM2/CLG1---- Holding force at piston


rod extended side decreases approx. 15%.

 The locking of the lock-up cylinder is unidirectional.

Because the locking direction of the lock-up cylinder is unidirectional, select the locking direction in accordance with the particular operating conditions. It is also possible to manufacture a bidirectional lock-up cylinder. For details, refer to "Made to Order" on page 1400. Due to the nature of its construction, a lock-up cylinder has a play of approximately 0.5 mm to 1 mm in the axial direction. Therefore, if an external stopper is used to stop the piston rod will shift in the amount of its axial play. **6.** To effect an intermediate stop, take the cylinder's stopping precision and overrun amount into consideration.

Because the lock is applied by mechanical means, the piston will not stop immediately in response to a stopping signal, but only after a time lag. This lag determines the amount of the overrun of the piston stroke. Thus, the range of the maximum and minimum amounts of the overrun is the stopping precision.

- Place the limit switch before the desired stopping position, only in the amount of the overrun.
- The limit switch must have a detection length (dog length) of the overrun amount +  $\alpha$ .
- For SMC's auto switches, the operating range are between 8 and 14 mm. (It varies depending on a switch model.) When the overrun amount exceeds this range, self-holding of the contact should be performed at the switch load side.
- \* For stopping accuracy, refer to CLJ2 series (P. 793), CLM2 series (P. 804), CLG1 series (P. 820), and CL1 series (P. 831) respectively.

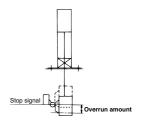

 In order to further improve stopping accuracy, the time from the stop signal to the operation of the lock should be shortened as much as possible.

To accomplish this, use a device such as a highly responsive electric control circuit or solenoid valve driven by direct current, and place the solenoid valve as close as possible to the cylinder.

- 8. Be aware that the stopping accuracy is influenced by changes in the piston speed. The variance in the stopping position increases if the piston speed changes, such as due to load fluctuations during the reciprocal movement of the piston. Therefore, take measures to ensure a constant piston speed immediately stopping preceding the position. Furthermore, the variances in the stopping position increases when the piston is effecting a cushioning stroke or during acceleration after starting its movement.
- 9. When unlocking is performed, if the thrust is applied to the piston, unlocking will not be easily done. To avoid that, ensure that unlocking should be performed before the thrust is applied to the piston.





Be sure to read this before handling the products. The precautions on these pages are for the fine lock cylinders and the lock-up cylinders. Refer to back page 50 for Safety Instructions. For general actuator precautions, refer to Actuator Precautions on pages 3 to 7.

## Mounting

## \land Warning

- 1. Be certain to connect the rod end to the load with the lock released.
  - · If this is performed with the lock engaged, a load that exceeds the allowable rotational force or holding force would be applied to the piston rod, which could damage the locking mechanism. The fine lock and CL1 series with ø40 to ø100 cylinders have a built-in manual unlocking mechanism. Therefore, they can be maintained in the unlocked state without supplying air. However, it is recommended that the piping is connected to the unlocking port, an air pressure of 0.3 MPa or more is supplied, and the work is performed in the unlocked state. For CL1 series with ø125 to ø160 cylinders, simply connect piping to the lock-up port, and supply air pressure of 0.2 MPa or more to disengage the lock in order to attach a load.

## A Caution

 Do not apply offset loads on the piston rod.
 Pay particular attention to aligning the center of gravity of the load with the axial center of the cylinder. If there is a large amount of deviation, the piston rod could become unevenly worn or damaged due to the inertial moment that is created when the piston rod is stopped by the lock.




X Load center of gravity and cylinder shaft center are not matched.



- O Load center of gravity and cylinder shaft center are matched.
- Note) Can be used if all of the generated moment is absorbed by an effective guide.

## **≜**Caution

- 1. Do not turn the piston rod with the rod boot kept locked.
- When turning the piston rod, loosen the band once and do not twist the rod boot. **2.** Set the breathing hole in the rod boot
- downward or in the direction that prevents entry of dust or water content.



#### Adjustment

### **▲**Caution

- 1. Place it in the locked position. (Excluding the CL1 series ø125 to ø160.)
  - The locks are manually disengaged at the time the cylinders are shipped from the factory. Therefore, make sure to change them to the locked state before using the cylinders. For procedures to effect the change, refer to page 789 for the fine lock series. Be aware that the lock will not operate properly if the change is not performed correctly.
  - Adjust the cylinder's air balance. In the state in which a load is attached to the cylinder, disengage the lock and adjust the air pressure at the rod side and the head side of the cylinder to obtain a load balance. By maintaining a proper air balance, the piston rod can be prevented from lurching when the lock is disengaged.
- Adjust the mounting position of detections such as those of the auto switches. To effect an intermediate stop, adjust the mounting position of the auto switch detection by taking the amount of overrun into consideration in relation to the desired stopping position.



D-□ -X□



Be sure to read this before handling the products. The precautions on these pages are for the fine lock cylinders and the lock-up cylinders. Refer to back page 50 for Safety Instructions. For general actuator precautions, refer to Actuator Precautions on pages 3 to 7.

#### **Pneumatic Circuit**

# \land Warning

1. Be certain to use an pneumatic circuit which will apply balancing pressure to both sides of the piston when in a locked stop.

In order to prevent cylinder lurching after a lock stop, when restarting or when manually unlocking, a circuit should be used to which will apply balancing pressure to both sides of the piston, thereby canceling the force generated by the load in the direction of piston movement.

2. The effective area of the lock release solenoid valve should be at least 50% of the effective area of the cylinder driving solenoid valve, and it should be installed as close to the cylinder as possible so that it is closer than the cylinder driving solenoid valve.

If the effective area of the lock release solenoid valve is smaller than the cylinder driving solenoid valve or if it is installed at a distance from the cylinder, the time required for exhausting air for releasing the lock will be longer, which may cause a delay in the locking operation.

The delay in the locking operation may result in problems such as increase of overunning when performing intermediate stop or emergency stop during operation, or if maintaining position from the operation stop state such as drop prevention, workpieces may be dropped depending on the timing of the load action to the operation delay of the lock.

Avoid backflow of the exhaust pressure when there is a possibility of interference of exhaust air, for example for a common exhaust type valve manifold.

The lock may not operate properly when the exhaust air pressure backflows due to interference of the exhaust air when exhausting air for lock release. It is recommended to use an individual exhaust type manifold or individual valves.

4. Allow at least 0.5 seconds from a locked stop (intermediate stop of the cylinder) until release of the lock. When the locked stop time is too short, the piston rod (and load)


When the locked stop time is too short, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.

When restarting, control the switching signal for the unlocking solenoid valve so that it acts before or at the same time as the cylinder drive solenoid valve.

If the signal is delayed, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.


6. Carefully check for dew condensation due to repeated air supply and exhaust of the locking solenoid valve. The operating stroke of the lock part is very small. So, if the piping is long and the air supply and exhaust are repeated, the dew condensation caused by the adiabatic expansion accumulates in the lock part. This may corrode internal parts, causing air leak or lock release fault

#### 7. Basic circuit

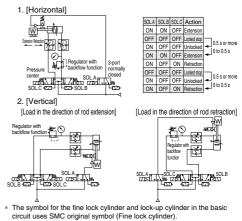


# **▲** Caution

 3-position pressure center solenoid valve and regulator with backflow function can be replaced with two 3-port normally open valves and a regulator with relief function.




[Example] 1. [Horizontal]

ÌSMC



[Load in the direction of rod retraction]



[Load in the direction of rod extension]



 The symbol for the fine lock cylinder and lock-up cylinder in the pneumatic circuit uses SMC original symbol (Fine lock cylinder).



Be sure to read this before handling the products. The precautions on these pages are for the fine lock cylinders and the lock-up cylinders. Refer to back page 50 for Safety Instructions. For general actuator precautions, refer to Actuator Precautions on pages 3 to 7.

## How to Manually Disengage the Lock and Change from the Unlocked to the Locked State


The lock is manually disengaged at the time the cylinder is shipped from the factory. Because the lock will not operate in this state, make sure to change it to the locked state before operation, after having adjusted the axial center for installation.

#### How to Change from Unlocked to Locked State

- 1. CLJ2, CLM2, CLG1 Series
  - Loose locking nut.
     Turn the wrench flats section of the manual unlocking cam to the
  - LOCK position that is marked on the can guide.
  - 3) While keeping the wrench flats section in place, tighten the lock nut.
  - Note) The manual unlocking cam will rotate approximately 180°. Do not rotate the wrench flats section excessively.

#### Locked state

Manually unlocked state



Call guide

# **Warning**

- 1. Never operate the unlocking cam until safety has been confirmed. (Do not turn to the FREE side.)
  - When unlocking is performed with air pressure applied to only one side of the cylinder, the moving parts of the cylinder will lurch at high speed causing a serious hazard.
  - When unlocking is performed, be sure to confirm that personnel are not within the load movement range and that no other problems will occur if the load moves.
- 2. Before operating the unlocking cam, exhaust any residual pressure which is in the system.
- Take measures to prevent the load from dropping when unlocking is performed.
  - · Perform work with the load in its lowest position.

Take measures for drop prevention by strut, etc.

Note) For details about how to manually unlock the lock-up cylinder (ø40 to ø100) and change from the unlocked state to the locked state, refer to page 834.

#### Manually Unlocking

The lock of a fine lock series cylinder can be disengaged manually through the procedure described below. However, make sure to disengage the lock pneumatically before operating the cylinder.

Note) Manual disengagement of the lock could create a greater cylinder sliding resistance than pneumatic disengagement of the lock.

#### 1. CLJ2, CLM2, CLG1 Series

- 1) Loose locking nut.
- Supply air pressure of 0.3 MPa or more to the lock release port.
   Turn the wrench flats section of the manual unlocking cam until it
- stops at the FREE position that is marked on the cam guide. 4) While keeping the wrench flats section in place, tighten the lock nut.


CLJ2

CLM2



## Construction Principle/Applicable Series: CLJ2, CLM2, CLG1, MLGC


## Spring locking type

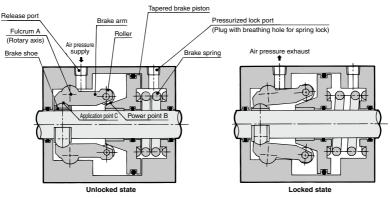

Spring locking (Exhaust locking)


The spring force that is applied to the tapered brake piston becomes amplified through the wedge effect. This force becomes further amplified to the power of AB/AC through the mechanical advantage of a lever and acts on the brake shoe, which in turn, applies a large force to tighten and lock the piston rod. To disengage the lock, air pressure is supplied through the unlocking port, thus disengaging the brake spring force.

#### Pneumatic locking type

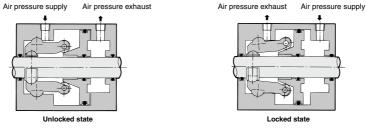

Brake piston is operated by air pressure.


#### Spring and pneumatic locking type

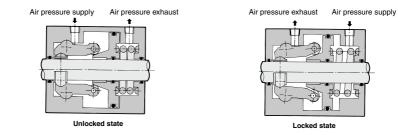

Brake piston is operated by air pressure and spring force.



# Fine Lock Cylinder Double Acting, Single Rod CLJ2 Series

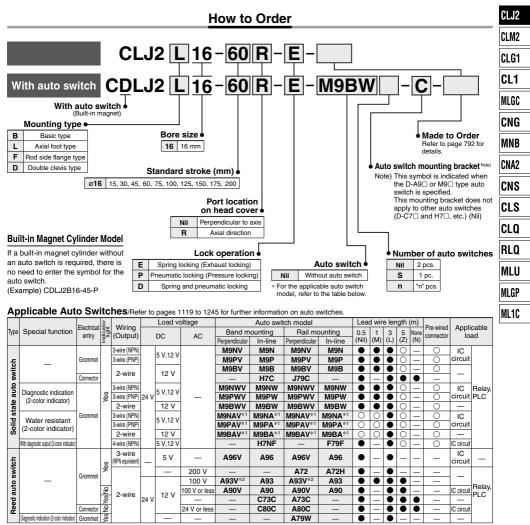

\*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance

Consult with SMC regarding water resistant types with the above model numbers.

\*2 1 m type lead wire is only applicable to D-A93.

\* Lead wire length symbols: 0.5 m ······ Nil (Example) M9NW

1 m ······ M (Example) M9NWM 3 m ······ L (Example) M9NWL

- 3 m ······ L (Example) M9NWL 5 m ······ Z (Example) M9NWZ
- None ······ N (Example) H7CN

\* Since there are other applicable auto switches than listed, refer to page 800 for details.

\* For details about auto switches with pre-wired connector, refer to pages 1192 and 1193.

\* Solid state auto switches marked with "O" are produced upon receipt of order.

\* The D-A9, M9, M9, M9, M7, A80, F7, J7, J7, auto switches are shipped together, (but not assembled)

(However, only the auto switch mounting brackets are assembled for band mounting before shipment.)



791

D-🗆

-X□

## Provided with a compact lock mechanism, it is suitable for intermediate stop, emergency stop, and drop prevention.

## Locking in both directions

The piston rod can be locked in either direction of its cylinder stroke.

#### Maximum piston speed: 500 mm/s

It can be used at 50 to 500 mm/s provided that it is within the allowable kinetic energy range.



# Head Cover Port Location

Either perpendicular to the cylinder axis or in-line with the cylinder axis is available for basic type.





Axial

Perpendicular



Refer to pages	798 to 8	800 for	cylinders with
auto switches.			

· Minimum auto switch mounting stroke · Proper auto switch mounting position (detection at stroke end) and mounting height

· Operating range

· Switch mounting bracket: Part no.

#### Specifications

Bore size (mm)	16	
Action	Double acting, Single rod	
Lubricant	Not required (Non-lube)	
Lock operation	Spring locking (Exhaust locking) Pneumatic locking (Pressure locking) Spring and pneumatic locking	
Fluid	Air	
Proof pressure	1.05 MPa	
Maximum operating pressure	0.7 MPa	
Minimum operating pressure	0.08 MPa	
Ambient and fluid temperature	Without auto switch: -10 to 70°C (No freezing) With auto switch: -10 to 60°C (No freezing)	
Piston speed	50 to 500 mm/s *	
Cushion	Rubber bumper	
Stroke length tolerance	+ 1.0 0	
Mounting	Basic type, Axial foot type, Rod side flange type, Double clevis type	

Constraints associated with the allowable kinetic energy are imposed on the speeds at which the piston can be locked.

The maximum speed of 750 mm/s can be accommodated if the piston is to be locked in the stationary state for the purpose of drop prevention.

#### Fine Lock Specifications

Lock operation	Spring locking Spring and (Exhaust locking) pneumatic locking		Pneumatic locking (Pressure locking)
Fluid	Air		
Maximum operating pressure	0.5 MPa		
Unlocking pressure	0.3 MPa or more		0.1 MPa or more
Lock starting pressure	0.25 MPa or less		0.05 MPa or more
Locking direction	Both directions		

Refer to the minimum auto switch mounting stroke (page 799) for Standard Stroke/those with an auto switch

(mm)

Bore size (mm)	Standard stroke	
16	15, 30, 45, 60, 75, 100, 125, 150, 175, 200	

\* Manufacture of intermediate strokes at 1 mm intervals is possible. (Spacers are not used.)

#### Mounting Bracket and Accessory/For details about part numbers and dimensions, refer to page 797.

	Mounting	Basic type	Axial foot type	Rod side flange type	Double clevis type
ent	Mounting nut	•	•	•	-
Standard equipment	Rod end nut	•	•	•	•
equ	Clevis pin	-	-	-	•
c	Single knuckle joint	•	•	•	•
Option	Double knuckle joint (With pin)*	•	•	•	•
0	T-bracket	-	-	-	•

\* Pins and retaining rings are packaged together with double clevis and double knuckle joint.

#### Mounting Bracket Part No.

Mounting bracket	Part no.	
Foot	CLJ-L016B	
Flange	CLJ-F016B	
T-bracket *	CJ-T016B	

\* T-bracket is used with double clevis (D).

A 792



#### Weight

noight		(9)
Bore size (mm)		16
Standard weight *		320
Additional weight per each 15 mm of stroke		6.5
	Axial foot type	27
Mounting bracket Weight	Rod side flange type	21
	Double clevis type (With pin) **	10

\* Mounting nut and rod end nut are included in the basic weight.

\*\* Mounting nut is not included in double clevis type.

Calculation: (Example) CLJ2L16-60

- Basic weight------320 (ø16)
- Additional weight-----6.5/15 stroke
- Cylinder stroke ......60 stroke
- 320 + 6.5/15 x 60 + 27 = 373 g

#### Stopping Accuracy (Not including tolerance of control system.) (mm)

	Piston speed (mm/s)			
Lock type	50	100	300	500
Spring locking (Exhaust locking)	± 0.4	± 0.5	± 1.0	± 2.0
Pneumatic locking (Pressure locking) Spring and pneumatic locking	±0.2	± 0.3	± 0.5	± 1.5

Condition: Load: 2 kg

Solenoid valve: Lock port mounting

# A Caution

Selection/Recommended Pneumatic Circuit/Caution on Handling

r-----

For detailed specifications of the fine lock

- cylinder, CLJ2 series mentioned above,
- refer to pages 786 to 789.


#### Caution/Allowable Kinetic Energy when Locking

Bore size (mm)	16
Allowable kinetic energy (J)	0.17
I have a set and a set of a set of a set of the set of	anna la la la catta ana anna da

- In terms of specific load conditions, this allowable kinetic energy is equivalent to a load of 3.7 Kg in mass, and a piston speed of 300 mm/sec. Therefore, if the operating conditions are below these values, there is no need to calculate.
- 2. Apply the following formula to obtain the kinetic energy of the load. Ek: Kinetic energy of load (J)  $Ek = \frac{1}{2}mv^2$  m: Load mass (kg)
  - 2 υ: Piston speed (m/s)

 $(\alpha)$ 

- 3. The piston speed will exceed the average speed immediately before locking. To determine the piston speed for the purpose of obtaining the kinetic energy of load, use 1.2 times the average speed as a quide.
- 4. The relationship between the speed and the load is indicated in the graph below. The area below the line is the allowable kinetic energy range.
- There is an upper limit to the size of the load that can be sustained. Thus, a horizontally mounted cylinder must be operated below the solid line, and a vertically mounted cylinder must be operated below the dotted line.

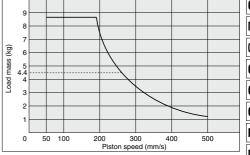


#### Holding Force of Spring Locking (Maximum static load)

Bore size (mm)	16	
Holding force (N)	122	Ī

Note) Holding force at piston rod extended side decreases approximately 15%.

#### Holding Force of Pneumatic Locking (Maximum static load)

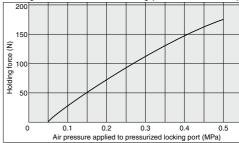

\* When selecting cylinders, refer to the Precautions and allowable kinetic energy when locking on page 786, and then select a cylinder.

## **▲**Caution

@SMC

#### Caution when Locking

Holding force (maximum static load) means the maximum capability of holding a static load that is not accompanied by vibration or impact under the condition that no load is applied. Therefore, it does not refer to a load that cannot be held constantly. When using (selecting) this product, carefully check the following points.


- . If the piston rod slips because the lock's holding force has been exceeded, the brake
- shoe could be damaged, resulting in a reduced holding force or shortened life. • The upper limit of the load that is used under the conditions not associated with the kinetic energy when locking, such as drop prevention must be 35% or less of the
- kinetic energy when locking, such as drop prevention must be 35% or less holding force.
- . Do not use the cylinder in the locked state to sustain a load that involves impact.

D-🗆


-X 🗆

# Construction (Not able to disassemble)

#### Spring locking (Exhaust locking) Spring and pneumatic locking

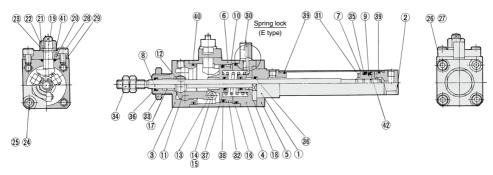

## Pneumatic locking (Pressure locking)

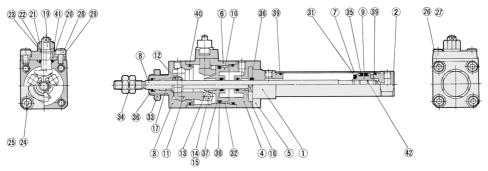

#### **Component Parts**


Com	ponent Faits		
No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Clear anodized
2	Head cover	Aluminum alloy	Clear anodized
3	Cover A	Carbon steel	Nitrided, nickel chrome plated
4	Cover B	Aluminum alloy	Hard anodized
5	Cover C	Aluminum alloy	Hard anodized
6	Intermediate cover	Aluminum alloy	Hard anodized
7	Cylinder tube	Stainless steel	
8	Piston rod	Stainless steel	Hard chrome plated
9	Piston	Aluminum alloy	Chromated
10	Brake piston	Carbon steel	Nitrided
11	Brake arm	Carbon steel	Nitrided
12	Brake shoe	Special friction material	
13	Roller	Carbon steel	Nitrided
14	Pin	Carbon steel	Heat treated
15	Retaining ring	Carbon tool steel	
16	Brake spring	Steel wire	Zinc chromated
17	Bushing A	Bearing alloy	
18	Bushing B	Bearing alloy	
19	Manual lock release cam	Chromium molybdenum steel	Nitrided
20	Cam guide	Carbon steel	Nitrided, platinum silver painted
21	Lock nut	Rolled steel	


No.	Description	Material	Note
22	Plain washer	Rolled steel	
23	Retaining ring	Carbon tool steel	
24	Hexagon socket head cap screw	Chromium molybdenum steel	
25	Spring washer	Steel wire	
26	Hexagon socket head cap screw	Chromium molybdenum steel	
27	Spring washer	Steel wire	
28	Hexagon socket head cap screw	Chromium molybdenum steel	
29	Spring washer	Steel wire	
30	Silencer	Bronze	Type E only
31	Bumper	Urethane	
32	Wear ring	Resin	
33	Mounting nut	Brass	
34	Rod end nut	Rolled steel	
35	Piston seal	NBR	
36	Rod seal A	NBR	
37	Rod seal B	NBR	
38	Brake piston seal	NBR	
39	Cylinder tube gasket	NBR	
40	Intermediate cover gasket	NBR	
41	Cam gasket	NBR	
42	Piston gasket	NBR	



# Basic Type (B)

# CLJ2B16-□□-₽

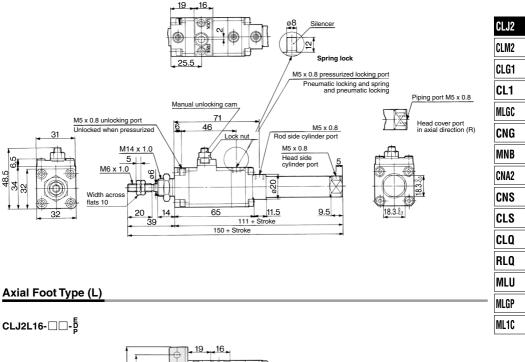

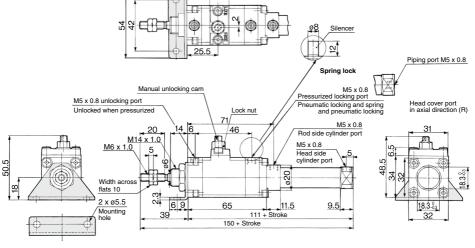


-**X**□

D-🗆


# CLJ2 Series

# Rod Side Flange Type (F)

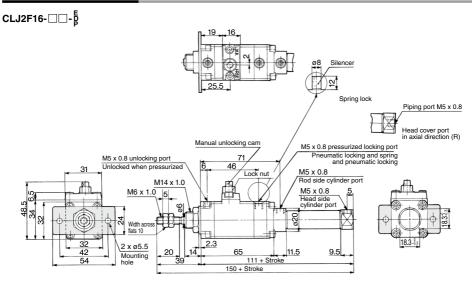


Double Clevis Type (D) \* Clevis pin and retaining ring are shipped together.

# CLJ2D16-□□-┣

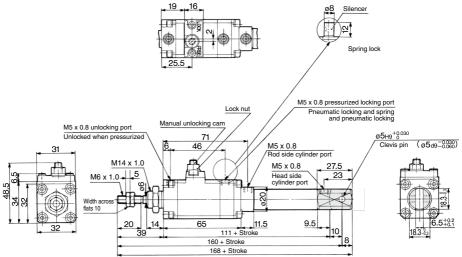

# CLJ2 Series Accessory Bracket Dimensions


## **Accessory Bracket Dimensions**

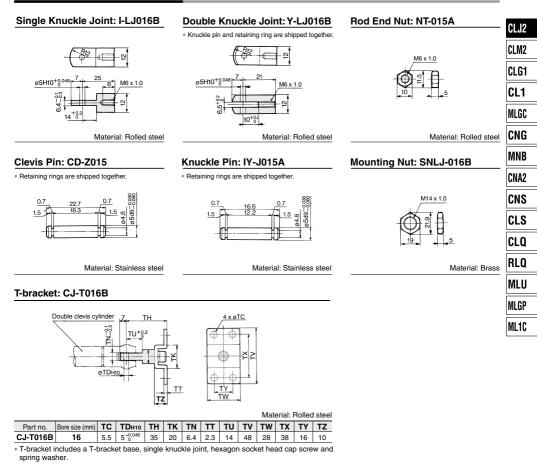

797

# CLJ2 Series Auto Switch Mounting 1

## Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

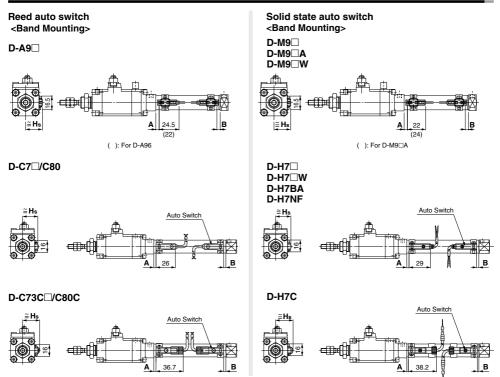

# Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

#### Auto Switch Proper Mounting Position

/1010 011			• • • • • • • •					(11111)
Autto switch model Bore size		⊐ÌŴ(V)	D-A9	□(V)	D-C D-C D-C	73C	D-H D-H D-H D-H D-H	7C 7⊡W 7BA
(mm)	Α	В	Α	В	Α	В	Α	В
16	6.5	6.5	2.5	2.5	3	3	2	2

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

## Auto Switch Mounting Height

Autto switch model Bore size	D-M9□(V) D-M9□W(V) D-M9□A(V) D-A9□(V)	D-C7/C8 D-H7□ D-H7□W D-H7NF D-H7BA	D-C73C D-C80C	D-H7C
(mm)	Hs	Hs	Hs	Hs
16	21	20.5	23	23.5



(mm)

	-				(mm)	
			No. of auto sv	vitches mounted		
Auto switch model	1	2	2	n (n: No. of a	uto switches)	
	•	Different surfaces	Same surface	Different surfaces	Same surface	
D-M9 D-M9 W D-M9 A D-A9	10	15 Note 1)	45 Note 1)	$15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)	45 + 15 (n - 2) (n = 2, 3, 4, 5…)	CLJ2
D-M9⊡V	5	15 Note 1)	35	$15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)	35 + 25 (n - 2) (n = 2, 3, 4, 5…)	CLM2
D-M9⊡WV D-M9⊡AV	10	15 Note 1)	35	$15 + 35 \frac{(n-2)}{2}$	35 + 25 (n - 2)	CLG1
						CL1
D-A9⊡V	5	10	35	$10 + 35 \frac{(1-2)}{2}$	· · ·	
-	-	-		(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5…)	MLGC
D-C7□	10		50	15 + 40 (n-2)	50 + 20 (n - 2)	
D-C80	10	15	50	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5…)	CNG
D-H7□/H7□W D-H7BA	10	15	60	$15 + 45 \frac{(n-2)}{2}$	60 + 22.5 (n - 2)	MNB
						CNA2
	10	15	65	$15 + 50 \frac{(n-2)}{2}$	· · · ·	UNAZ
D-H7C	_			(n = 2, 4, 6) <sup>Note 3)</sup>	(n = 2, 3, 4, 5…)	CNS
	D-M9 D-M9 D-M9 D-M9 D-M9 V D-M9 V D-M9 V D-M9 V D-A9 V D-A9 V D-A9 V D-A9 V D-C7 D-C80 D-H7C/H7 W D-H7RA D-H7NF D-C73C D-C73C D-C73C D-C73C D-C73C	D-M9         1           D-M9         10           D-M9         10           D-M9         5           D-M9         10           D-M9         10           D-M9         10           D-M9         5           D-M9         10           D-A9         5           D-A9         10           D-A9         10           D-A9         10           D-C70         10           D-H7         H7           D-T7F         10	1         Different surfaces           D-M9         Different surfaces           D-M9         10         15 Note 1)           D-A9         5         15 Note 1)           D-M9         V         5         15 Note 1)           D-M9         V         5         15 Note 1)           D-M9         V         5         10           D-M9         AV         10         15 Note 1)           D-M9         AV         5         10           D-A9         V         5         10           D-C7         10         15           D-H7         H7B         10         15           D-H7NF         10         15         D-H7C	Auto switch model         1         2           D-M90         Different surfaces         Same surface           D-M90W         D-M90W         10         15 Note 1)         45 Note 1)           D-M90W         5         15 Note 1)         35           D-M90WV         5         15 Note 1)         35           D-M90WV         5         10         35           D-M90AV         5         10         35           D-M90AV         5         10         35           D-A90V         5         10         35           D-A90V         5         10         35           D-A90V         5         10         35           D-C70         10         15         60           D-H70/H70W         10         15         60           D-H70K         10         15         65	1         Different surfaces         Same surface         Different surfaces           D-M9_DM9_W         10 $15 \text{ Note 1}$ $45 \text{ Note 1}$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-M9_W         5 $15 \text{ Note 1}$ $35$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-M9_W         5 $15 \frac{\text{Note 1}}{15}$ $35$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-M9_WV         10 $15 \frac{\text{Note 1}}{15}$ $35$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-M9_WV         10 $15 \frac{\text{Note 1}}{15}$ $35$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-M9_WV         5         10 $35$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-A9_WV         5         10 $35$ $15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-C7_D         10 $15$ $50$ $15 + 40 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-H7_WF         10 $15$ $60$ $15 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-H7RA         10 $15$ $65$ $15 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)           D-C73C         10 $15$ $65$ <td< td=""><td>No. of auto switches mounted           1         2         n (n: No. of auto switches)           D-M9         Different surfaces         Same surface         Different surfaces         Same surface           D-M9         10         15 Note 1)         45 Note 1)         15 + 35 <math>\frac{(n-2)}{2}</math>         45 + 15 (n - 2)           D-M9         W         5         15 Note 1)         45 Note 1)         15 + 35 <math>\frac{(n-2)}{2}</math>         35 + 25 (n - 2)           D-M9         V         5         15 Note 1)         35         15 + 35 <math>\frac{(n-2)}{(n = 2, 4, 6) Note 3)}</math>         (n = 2, 3, 4, 5)           D-M9         V         5         15 Note 1)         35         15 + 35 <math>\frac{(n-2)}{(n = 2, 4, 6) Note 3)}</math>         (n = 2, 3, 4, 5)           D-M9         V         5         10         35         15 + 35 <math>\frac{(n-2)}{(n = 2, 4, 6) Note 3)}</math>         (n = 2, 3, 4, 5)           D-M9         V         5         10         35         10 + 35 <math>\frac{(n-2)}{(n = 2, 4, 6) Note 3)}</math>         (n = 2, 3, 4, 5)           D-A9         V         5         10         35         10 + 35 <math>\frac{(n-2)}{(n = 2, 4, 6) Note 3)}</math>         (n = 2, 3, 4, 5)           D-C7         D.0         10         15         50         15 + 40 <math>\frac{(n-2)}{2}</math>         60 + 22.5 (n - 2)      &lt;</td></td<>	No. of auto switches mounted           1         2         n (n: No. of auto switches)           D-M9         Different surfaces         Same surface         Different surfaces         Same surface           D-M9         10         15 Note 1)         45 Note 1)         15 + 35 $\frac{(n-2)}{2}$ 45 + 15 (n - 2)           D-M9         W         5         15 Note 1)         45 Note 1)         15 + 35 $\frac{(n-2)}{2}$ 35 + 25 (n - 2)           D-M9         V         5         15 Note 1)         35         15 + 35 $\frac{(n-2)}{(n = 2, 4, 6) Note 3)}$ (n = 2, 3, 4, 5)           D-M9         V         5         15 Note 1)         35         15 + 35 $\frac{(n-2)}{(n = 2, 4, 6) Note 3)}$ (n = 2, 3, 4, 5)           D-M9         V         5         10         35         15 + 35 $\frac{(n-2)}{(n = 2, 4, 6) Note 3)}$ (n = 2, 3, 4, 5)           D-M9         V         5         10         35         10 + 35 $\frac{(n-2)}{(n = 2, 4, 6) Note 3)}$ (n = 2, 3, 4, 5)           D-A9         V         5         10         35         10 + 35 $\frac{(n-2)}{(n = 2, 4, 6) Note 3)}$ (n = 2, 3, 4, 5)           D-C7         D.0         10         15         50         15 + 40 $\frac{(n-2)}{2}$ 60 + 22.5 (n - 2)      <

## **Minimum Auto Switch Mounting Stroke**

Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

#### Note 1) Auto switch mounting.

			1
	With 2 aut Different surfaces (1)	o switches Same surface (1)	CLQ
			RLQ
Auto switch model			MLU
	D-M9⊟(V) // <sup>422</sup> *- -B D-M9⊟(V) D-M9⊟A(V)		MLGP
	The proper auto switch mounting position is 5.5 mm inward from the switch holder edge. The above A and B indicate values for band mounting in the table of page 798	The auto switch is mounted by slightly displacing it in a direction (cylinder tube circumferential exterior) so that the auto switch and lead wire do not interfere with each other.	ML1C
D-M9□/M9□W/M9□A	Less than 20 stroke Note2)	Less than 55 stroke Note2)	]
D-A90/A93	_	Less than 50 stroke Note2)	

Note 2) Minimum stroke for auto switch mounting in types other than those mentioned in Note 1.

## **Operating Range**

	(mm)
Auto switch model	Bore size (mm)
Auto switch model	16
D-A9□	7
D-M9□ D-M9□W	3
D-C7□/C80 D-C73C/C80C	7
D-H7□/H7□W/H7BA/H7NF	4
D-H7C	9

 Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approximately ±30% dispersion). It may vary substantially depending on an ambient environment.

> D-🗆 -X🗆

CLS

# CLJ2 Series Auto Switch Mounting 2

## Auto Switch Mounting Bracket: Part No.

Auto switch	Auto switch	Bore siz	ze (mm)
mounting	model	10	16
Band	D-M9 D-M9 V D-M9 W D-M9 WV D-A9 D-A9	Note 1) BJ6-010	Note 1) BJ6-016
mounting	D-M9⊟A D-M9⊟AV	Note 2) BJ6-010S	Note 2) BJ6-016S
	D-C7□/C80 D-C73C/C80C D-H7□/H7□W D-H7BA/H7NF	BJ2-010	BJ2-016

Note 1) Set part number which includes the auto switch mounting band (BJ2-□□□) and the holder kit (BJ5-1/Switch bracket: Transparent),Since the switch bracket (made from nylon) are affected in an environment where alcohol, chloroform, methylamines, hydrochhoric acid or sulfuric acid is splashed over, so it cannot be used. Please consult SMC regarding other chemicals.

Note 2) Set part number which includes the auto switch mounting band (BJ2-□□S) and the holder kit (BJ4-1/Switch bracket: White).

Note 3) For the D-M9□A (V) type auto switch, do not install the switch bracket on the indicator light.


#### [Mounting screw set made of stainless steel]

The following set of mounting screws made of stainless steel is available. Use it in accordance with the operating environment. (Please order the auto switch

mounting bracket separately, since it is not included.) BBA4: For D-C7/C8/H7 types


Note 2) Refer to page 1226 for the details of BBA4.

 Note 2) refer to page 1226 for the details of BBA4.
 D-H7BAL auto switch is set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, BBA4 is attached.



Auto switch type	Part no.	Electrical entry (Fetching direction)	Features
Reed	D-C73, C76		_
	D-C80	Orement (In line)	Without indicator light
0.111.111	D-H7A1, H7A2, H7B	Grommet (In-line)	_
Solid state	D-H7NW, H7PW, H7BW		Diagnostic indication (2-color indicator)

# Fine Lock Cylinder Double Acting, Single Rod CLM2 Series

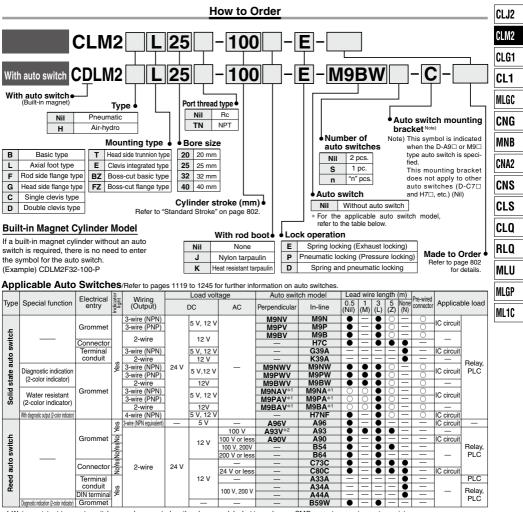

\*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

\*2 1 m type lead wire is only applicable to D-A93.

\* Lead wire length symbols: 0.5 m ......Nil (Example) M9NW

1 m ······M (Example) M9NWM

3 m ······ L (Example) M9NWL

5 m ······ Z (Example) M9NWZ

None ...... N (Example) H7CN

\* Since there are other applicable auto switches than listed above, refer to page 817 for details

\* For details about auto switches with pre-wired connector, refer to pages 1192 and 1193.

\* D-A9=(V)/M9=W(V)/M9=A(V) auto switches are shipped together (not assembled). (Only auto switch mounting brackets are assembled at the time of shipment.)

\* Solid state auto switches marked with "O" are produced upon receipt of order.

\* Do not indicate suffix "N" for no lead wire on D-A3 A/A44A/G39A/K39A models.



801

**SMC** 

# Provided with a compact lock mechanism, it is suitable for intermediate stop, emergency stop, and drop prevention.

#### Locking in both directions

The piston rod can be locked in either direction of its cylinder stroke.

# Maximum piston speed: 500 mm/s

It can be used at 50 to 500 mm/s provided that it is within the allowable kinetic energy range.





#### Specifications

Bore size (mm)	20	25	32	40	
Action		Double actin	g, Single rod		
Туре		Air cy	linder		
Lock operation		Spring locking (I g (Pressurized loc			
Fluid		A	ir		
Proof pressure		1.5	MPa		
Maximum operating pressure	1.0 MPa				
Minimum operating pressure	0.08 MPa				
Ambient and fluid temperature	Without auto switch: -10 to 70°C (No freezing) With auto switch: -10 to 60°C (No freezing)				
Lubrication	Not required (Non-lube)				
Piston speed	50 to 500 mm/s *				
Cushion	Rubber bumper (Standard equipment)				
Stroke length tolerance		+1.4	4		
Piping/Screw-in type	Rc 1/8		Rc 1/4		
Mounting	Basic type, Axial foot type, Rod side flange type, Head side flange type, Single clevis type, Double clevis type, Head side trunnion type, Clevis integrated type, Boss- cut basic type, Boss-cut flange type				

Constraints associated with the allowable kinetic energy are imposed on the speeds at which the piston can be locked. The maximum speed of 750 mm/s can be accommodated if the piston is to be locked in the stationary state for the purpose of drop prevention.

### **Fine Lock Specifications**

Lock operation	Spring locking (Exhaust locking)	Spring and pneumatic locking	Pneumatic locking (Pressure locking)	
Fluid	Air			
Maximum operating pressure	0.5 MPa			
Unlocking pressure	0.3 MP	0.1 MPa or more		
Lock starting pressure	0.25 M	0.05 MPa or more		
Locking direction		Both directions		

\* Refer to page 804 for the allowable kinetic energy when locking, holding force of spring locking and stopping accuracy.

Standard Stroke / Refer to the minimum auto switch mounting stroke (page 816) for those with an auto switch.

Bore size (mm)	Standard stroke <sup>(1)</sup> (mm)	Maximum stroke (mm)
20		
25	25, 50, 75, 100, 125, 150	1000
32	200, 250, 300	1000
40		

Note1) Intermediate strokes other than listed above are produced upon receipt of order. Manufacture of intermediate strokes at 1 mm intervals is possible. (Spacers are not used.)

Note 2) Applicable strokes should be confirmed according to the usage. For details, refer to the CM2 series of the "Air Cylinders Model Selection" on front matter pages of the Best Pneumatics No. 2-1. In addition, the products that exceed the standard stroke might not be able to fulfill the specifications due to the deflection etc.

#### **Rod Boot Material**

Symbol	Rod boot material	Maximum ambient temperature
J	Nylon tarpaulin	70°C
к	Heat resistant tarpaulin	110°C *

\* Maximum ambient temperature for the rod boot itself.

Refer to pages 814 to 817 for cylinders with auto switches.

- Minimum auto switch mounting stroke
- Proper auto switch mounting position (detection at stroke end) and mounting height
- Operating range

Switch mounting bracket: Part no.

# Fine Lock Cylinder **CLM2** Series

#### Mounting Bracket and Accessory

	Standa Iounting	rd equi Rod	pment			Opt	ion								
M	lounting	Pod			Option										
Mounting	nut	end nut	Clevis pin	Single knuckle joint	Double <sup>(3)</sup> knuckle joint	Clevis <sup>(4)</sup> pivot bracket	Rod boot	Pivot <sup>(6)</sup> bracket	Pivot <sup>(7)</sup> bracket pin						
Basic type	<b>(</b> 1 pc.)	•	-	•	•	-	•	I	-						
Axial foot type	•(2)	٠	-	٠	•	-	•	-	-						
Rod side flange type	•(1)	•	-	•	•	-	•	-	-						
Head side flange type	•(1)	٠	-	•	•	-	٠	-	-						
Clevis integrated type	_(1)	٠	-	٠	•	•	•	-	-						
Single clevis type	_(1)	•	-	•	•	-	•	•	•						
Double clevis type (3)	-(1)	٠	•(5)	•	•	-	٠	-	-						
Head side trunnion type	<b>(</b> 1) <sup>(2)</sup>	•	-	٠	•	-	•	•	٠						
Boss-cut basic type	•(1)	٠	-	٠	•	-	٠	-	-						
Boss-cut flange type	•(1)	٠	-	•	•	-	٠	-	-						
Note					With pin	With pin									

Note 1) Mounting nut is not equipped with clevis integrated type, single clevis type and double clevis type.

Note 2) Trunnion nuts are attached for head side trunnion type.

Note 3) Pin and retaining ring (ø40: cotter pin) are shipped together with double clevis and double knuckle joint.

Note 4) Pin and retaining ring are shipped together with clevis pivot bracket.

Note 5) Clevis pins come with retaining rings (cotter pins for ø40).

Note 6) Pivot brackets do not come with pins and retaining rings

Note 7) Pivot bracket pins come with retaining rings.

Weight

Note 8) For part numbers and dimensions of accessories (Options), refer to pages 811 to 813.

weight					(kg
	Bore size (mm)	20	25	32	40
	Basic type	0.55	0.87	0.94	1.30
	Axial foot type	0.70	1.03	1.10	1.57
	Flange type	0.61	0.96	1.03	1.42
	Clevis integrated type	0.53	0.85	0.93	1.26
Basic weight	Single clevis type	0.60 0.9	0.91	0.98	1.39
noight	Double clevis type	0.60	0.93	0.99	1.43
	Trunnion type	0.59	0.94	1.00	1.40
	Boss-cut basic type	0.54	0.59 0.94 1.00 1.40		
	Boss-cut flange type	0.60	0.94	1.01	1.39
Additiona	al weight per each 50 mm of stroke	0.04	0.06	0.08	0.13
	Clevis bracket (With pin)	0.07	0.07	0.14	0.14
	Single knuckle joint	0.06	0.06	0.06	0.23
Option bracket	Double knuckle joint (With pin)	0.07	0.07	0.07	0.20
braditot	Pivot bracket	0.06	0.06	0.06	0.06
	Pivot bracket pin	0.02	0.02	0.02	0.03
Calaulatian.	(Example) CI M2I 22-100-E				

Calculation: (Example) CLM2L32-100-E • Basic weight ...... 1.10 (Foot, ø32)

Additional weight ...... 0.08/50 stroke

• Cylinder stroke ...... 100 stroke 1.10 + 0.08 x 100/50 = 1.26 kg

#### Mounting Bracket Part No.

Bore size (mm)	20	25	25 32					
Axial foot *	CM-L020B	CM-L	CM-L040B					
Flange	CM-F020B	CM-F	CM-F040B					
Single clevis	CM-C020B	CM-C	CM-C032B					
Double clevis **	CM-D020B	CM-D	CM-D032B CM-E					
Trunnion (with nut)	CM-T020B	CM-T	CM-T032B					

\* When ordering foot bracket, order 2 pieces per cylinder.

\*\* Clevis pin and retaining ring (ø40: cotter pin) are shipped together with double clevis type.

#### Boss-cut type

Boss for the head side cover bracket is eliminated and the total length of cylinder is shortened.



#### Comparison of the full length dimension (Versus standard type) (mm)

ø <b>20</b>	ø <b>25</b>	ø <b>32</b>	ø <b>40</b>							
<b>▲</b> 13	<b>▲</b> 13	<b>▲</b> 13	<b>▲</b> 16							

#### Mounting type

#### Air-hydro

(ka)



Low hydraulic cylinder 1 MPa or less

Through the concurrent use of a CC series air-hydro unit, it is possible to operate at a constant or low speeds or to effect an intermediate stop, just like a hydraulic unit, while using pneumatic equipment such as a valve.



#### Specifications

Fluid	Turbine oil (Lock portion is air)
Action	Double acting, Single rod
Bore size (mm)	ø20, ø25, ø32, ø40
Maximum operating pressure	1.0 MPa
Minimum operating pressure	0.2 MPa
Piston speed	15 to 300 mm/s
Cushion	Rubber bumper (Standard equipment)
Piping	Screw-in type
Mounting	Basic type, Axial foot type, Rod side flange type Head side flange type, Single clevis type Double clevis type, Head side trunnion type Clevis integrated type, Boss-cut type

\* Auto switch capable

 For an exterior dimension diagram to identify the mounting support types, refer to pages 806 to 810 as the dimensions are identical to those of standard.



Boss-cut basic type (BZ) Boss-cut flange type (FZ)

# CLM2 Series

#### 🕂 Caution/Allowable Kinetic Energy when Locking

		•		
Bore size (mm)	20	25	32	40
Allowable kinetic energy (J)	0.26	0.42	0.67	1.19


 In terms of specific load conditions, the allowable kinetic energy indicated in the table above is equivalent to a 50% load ratio at 0.5 MPa, and a piston speed of 300 mm/sec. Therefore, if the operating conditions are below these values, calculations are unnecessary.

2. Apply the following formula to obtain the kinetic energy of the load.

 $Ek = \frac{1}{2} mv^2$  m: Load mass (kg)

υ: Piston speed (m/s)

- The piston speed will exceed the average speed immediately before locking. To determine the piston speed for the purpose of obtaining the kinetic energy of load, use 1.2 times the average speed as a guide.
- 4. The relation between the speed and the load of the respective tube bores is indicated in the diagram below. Use the cylinder in the range below the line.
- 5. Even within a given allowable kinetic energy level, there is an upper limit to the size of the load that can be sustained. Thus, a horizontally mounted cylinder must be operated below the solid line, and a vertically mounted cylinder must be operated below the dotted line.

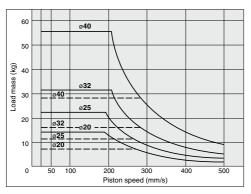

Stopping Accuracy (Not including tolerance of control system.) (mm)

Locking method	Piston speed (mm/s)										
Looking method	<b>20</b> *	50	100	300	500						
Spring locking (Exhaust locking)	±0.3	±0.4	±0.5	±1.0	±2.0						
Pneumatic locking (Pressure locking) Spring and pneumatic locking	±0.15	±0.2	±0.3	±0.5	±1.5						

Conditions: Load: 25% of thrust force at 0.5 MPa

Solenoid valve: Mounted to the lock port

20 mm/s marked with the asterisk is in the case of actuating hydraulically by means of air-hydro type.

#### **▲** Caution


Selection/Recommended Pneumatic Circuit/Caution on Handling	_
For detailed speceifications of the fine lock cylinder, CLM2 series mentioned above, refer to pages 786 to 789.	Ì

#### Holding Force of Spring Locking (Maximum static load)

Bore size (mm)	20	25	32	40
Holding force (N)	196	313	443	784

Note) Holding force at piston rod extended side decreases approximately 15%.

#### Holding Force of Spring Locking (Maximum static load)

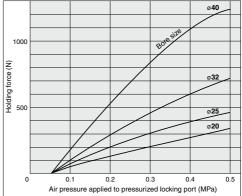

\* When selecting cylinders, refer to the Precautions and allowable kinetic energy when locking on page 786, and then select a cylinder.

# A Caution

#### Caution when Locking

Holding force (maximum static load) means the maximum capability of holding a static load that is not accompanied by vibration or impact under the condition that no load is applied. Therefore, it does not refer to a load that cannot be held constantly. When using (selecting) this product, carefully check the following points.

- If the piston rod slips because the lock's holding force has been exceeded, the brake shoe could be damaged, resulting in a reduced holding force or shortened life.
- Do not use the cylinder in the locked state to sustain a load that involves impact.
- The upper limit of the load that is used under the conditions not associated with the kinetic energy when locking, such as drop prevention must be 35% or less of the holding force.

## A Caution


Operating Precautions

Install a rod boot without twisting.


If the cylinder is installed with its bellows twisted, it could damage the bellows.

## Construction (Not able to disassemble)

## Spring locking (Exhaust locking) Spring and pneumatic locking

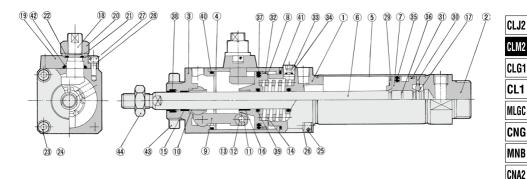


## Pneumatic locking (Pressure locking)

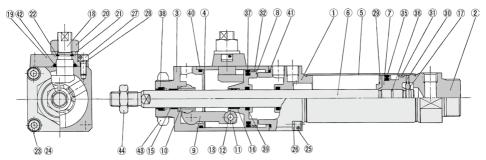

## **Component Parts**

	Description	Material	NI-4-
No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Clear anodized
2	Head cover	Aluminum alloy	Clear anodized
3	Cover	Carbon steel	Nitrided, chrome plated
4	Intermediate cover	Aluminum alloy	Hard anodized
5	Cylinder tube	Stainless steel	
6	Piston rod	Carbon steel	Hard chrome plated
7	Piston	Aluminum alloy	Chromated
8	Brake piston	Carbon steel	Nitrided
9	Brake arm	Carbon steel	Nitrided
10	Brake shoe	Special friction material	
11	Roller	Carbon steel	
12	Pin	Carbon steel	
13	Retaining ring	Carbon tool steel	
14	Brake spring	Spring steel wire	Anti-corrosive treatment
15	Bushing	Bearing alloy	
16	Bushing	Bearing alloy	
17	Retaining ring	Stainless steel	
18	Manual lock release cam	Chromium molybdenum steel	Nickel plated
19	Cam guide	Carbon steel	Nitrided, painted
20	Lock nut	Rolled steel	
21	Flat washer	Rolled steel	
22	Retaining ring	Carbon tool steel	
23	Hexagon socket head cap screw	Chromium molybdenum steel	

No.	Description	Material	Note
24	Spring washer	Steel wire	
25	Hexagon socket head cap screw	Chromium molybdenum steel	
26	Spring washer	Steel wire	
27	Hexagon socket head cap screw	Chromium molybdenum steel	
28	Spring washer	Steel wire	
29	Bumper A	Urethane	
30	Bumper B	Urethane	
31	Wear ring	Resin	
32	Wear ring	Resin	
33	Hexagon socket head plug	Carbon steel	Type E only
34	Element	Bronze	Type E only
35	Piston seal	NBR	
36	Piston gasket	NBR	
37	Brake piston seal	NBR	
38	Rod seal A	NBR	
39	Rod seal B	NBR	
40	Middle cover gasket A	NBR	
41	Middle cover gasket B	NBR	
42	Cam gasket	NBR	
43	Mounting nut	Carbon steel	
44	Rod end nut	Carbon steel	



CNS

CLS

CLQ

RLQ

MLU

MLGP


D-□ -X□

# CLM2 Series

# Basic Type (B)

CLM2B Bore size Stroke

#### Standard type

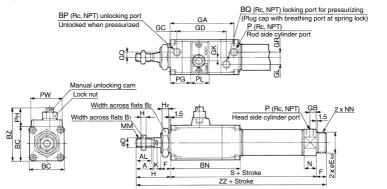



Boss-cut type


Bore (mm) Stroke 20

25


32

40

With rod boot







																									(mm)
1)	Stroke range	Α	AL	B1	B <sub>2</sub>	BC	BN	BP	BQ	ΒZ	D	E	F	GA	GB	GC	GD	GK	GL	GQ	GR	Н	H1	H <sub>2</sub>	I
	Up to 300	18	15.5	13	26	38	80	1⁄8	1⁄8	57.5	8	20 _0_033	13	73.5	8	8	55	3.5	6	4	4	41	5	8	28
	Up to 300	22	19.5	17	32	45	90	1⁄8	1⁄8	69	10	26 _0_033	13	83.5	8	9	64.5	4	9	7	7	45	6	8	33.5
	Up to 300	22	19.5	17	32	45	90	1⁄8	1⁄8	69	12	26 _0	13	83.5	8	9	64.5	4	9	7	7	45	6	8	37.5
	Up to 300	24	21	22	41	52	100.5	1⁄8	1⁄8	76	14	32 _0.039	16	90.5	11	8	70	4	11	8	7	50	8	10	46.5

ZZ

168

182


184

217

NA											
1110	NN	P	PG	PH	PL	PW	S	ZZ	Bore (mm)	n)	ZZ
24	M20 x 1.5	1⁄8	22	19.5	20	38	127	181	20	•	16
30	M26 x 1.5	1⁄8	27	24	24	41	137	195	25		18
34.5	M26 x 1.5	1⁄8	27	24	24	41	139	197	32		18
5 42.5	M32 x 2	1⁄4	29	24	24	41	167	233	40	2	21
5	5 24 5 30 5 34.5	5         24         M20 x 1.5           5         30         M26 x 1.5           5         34.5         M26 x 1.5	5         24         M20 x 1.5         1/8           5         30         M26 x 1.5         1/8           5         34.5         M26 x 1.5         1/8	5         24         M20 x 1.5         1/8         22           5         30         M26 x 1.5         1/8         27           5         34.5         M26 x 1.5         1/8         27	5         24         M20 x 1.5         1/8         22         19.5           5         30         M26 x 1.5         1/8         27         24           5         34.5         M26 x 1.5         1/8         27         24	5         24         M20 x 1.5         1/8         22         19.5         20           5         30         M26 x 1.5         1/8         27         24         24           5         34.5         M26 x 1.5         1/8         27         24         24	5         24         M20 x 1.5         1/8         22         19.5         20         38           5         30         M26 x 1.5         1/8         27         24         24         41           5         34.5         M26 x 1.5         1/8         27         24         24         41	5         24         M20 x 1.5         1/6         22         19.5         20         38         127           5         30         M26 x 1.5         1/8         27         24         24         41         137           5         34.5         M26 x 1.5         1/8         27         24         24         41         139	5         24         M20 x 1.5         1/6         22         19.5         20         38         127         181           5         30         M26 x 1.5         1/6         27         24         24         41         137         195           5         34.5         M26 x 1.5         1/8         27         24         24         41         139         197	5         24         M20 x 1.5         1/6         22         19.5         20         38         127         181         20           5         30         M26 x 1.5         1/6         27         24         24         11         37         195         25           5         34.5         M26 x 1.5         1/6         27         24         24         41         137         195         25           5         34.5         M26 x 1.5         1/6         27         24         24         41         139         197         32	5         24         M20 x 1.5         ½         22         19.5         20         38         127         181         20         2           5         30         M26 x 1.5         ½         27         24         24         11         137         195         25         32         34.5         M26 x 1.5         ½         27         24         24         41         139         197         32         32         32         32         33         34.5         M26 x 1.5         ½         27         24         24         41         139         197         32         32         32         33         34.5         M26 x 1.5         ½         27         24         24         41         139         197         32         32         34 <td< th=""></td<>

			21.0			74 2			1.1.1.		_								
With Ro	od Bo	ot																	(mm)
Bore (mm)	•				h					l					ZZ			JH	JW
Dore (mm)	е		1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	(Reference)	(Reference)
20	36	17	68	81	93	106	131	12.5	25	37.5	50	75	208	221	233	246	271	23.5	10.5
25	36	17	72	85	97	110	135	12.5	25	37.5	50	75	222	232	247	260	285	23.5	10.5
32	36	17	72	85	97	110	135	12.5	25	37.5	50	75	224	237	249	262	287	23.5	10.5
40	46	19	77	90	102	115	140	12.5	25	37.5	50	75	260	273	285	298	323	23.5	10.5

# Axial Foot Type (L)

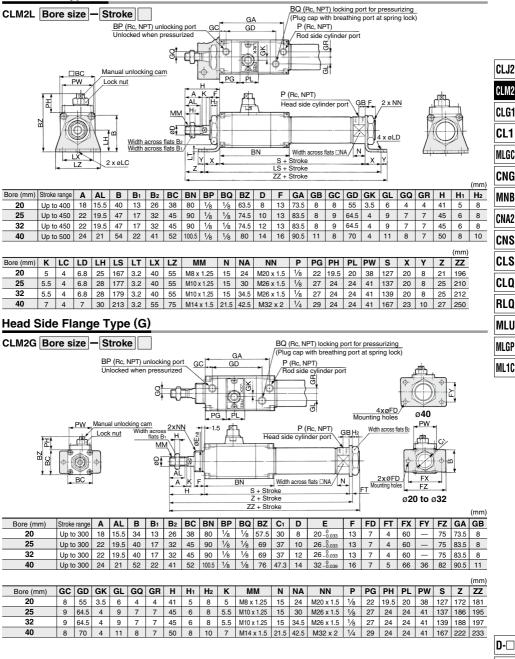



-X

# CLM2 Series


# Rod Side Flange Type (F)














(mm)

Bore (mm)	Stroke range	Α	AL	в	B1	B <sub>2</sub>	BC	BN	BP	BQ	ΒZ	C1	D	E	F	FD	FT	FX	FY	FZ	GA	GB	GC	GD	GK
20	Up to 400	18	15.5	34	13	26	38	80	1⁄8	1⁄8	57.5	30	8	20_0_0_3	13	7	4	60	—	75	73.5	8	8	55	3.5
25	Up to 450	22	19.5	40	17	32	45	90	1/8	1⁄8	69	37	10	26 _0_033	13	7	4	60	—	75	83.5	8	9	64.5	4
32	Up to 450	22	19.5	40	17	32	45	90	1⁄8	1⁄8	69	37	12	26 _0_033	13	7	4	60	—	75	83.5	8	9	64.5	4
40	Up to 500	24	21	52	22	41	52	100.5	1/8	1⁄8	76	47.3	14	32 _0_039	16	7	5	66	36	82	90.5	11	8	70	4

Boss-ci	ut
Bore (mm)	ZZ
20	168
25	182
32	184
40	217

																				(mm)
Bore (mm)	GL	GQ	GR	Н	H1	H <sub>2</sub>	I	κ	MM	Ν	NA	NN	Р	PG	PH	PL	PW	S	Z	ZZ
20	6	4	4	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1⁄8	22	19.5	20	38	127	37	181
25	9	7	7	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1⁄8	27	24	24	41	137	41	195
32	9	7	7	45	6	8	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1⁄8	27	24	24	41	139	41	197
40	11	8	7	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	29	24	24	41	167	45	233

# Single Clevis Type (C)

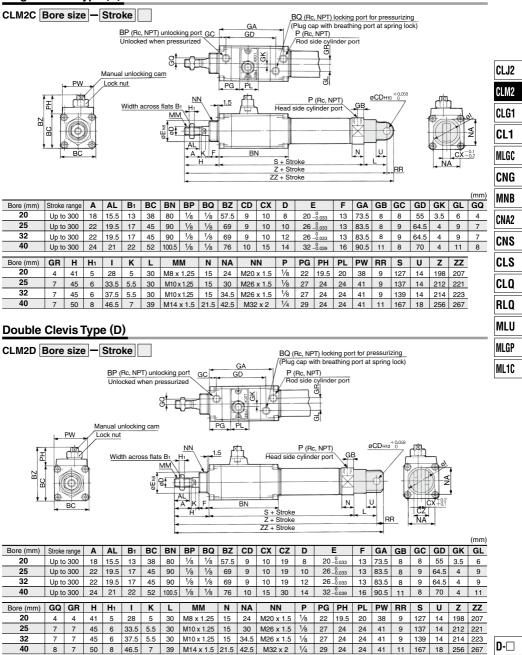


\* Clevis pin and snap ring (ø40: cotter pin) are shipped together.

-X 🗆

# CLM2 Series

# Head Side Trunnion Type (T)

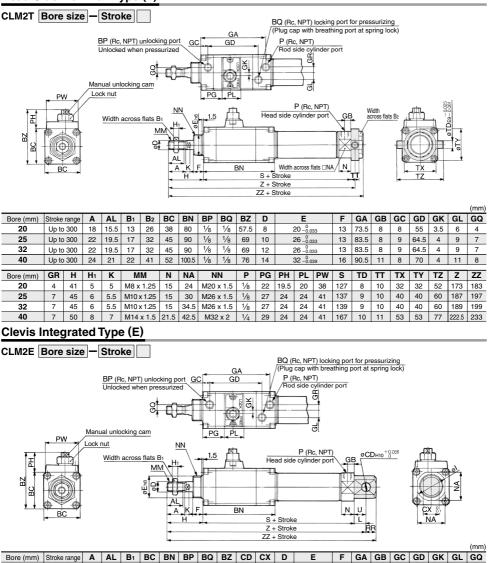

Bore (mm)	Stroke	range	Α	AL	B1	BC	BN	BP	BQ	BZ	CD	СХ	D		E	F	GA	GB	GC	GD	GK	GL	GQ
20	Up to	o 300	18	15.5	13	38	80	1⁄8	1⁄8	57.5	8	12	8	20.	0 -0.033	13	73.5	8	8	55	3.5	6	4
25	Up to	o 300	22	19.5	17	45	90	1⁄8	1/8	69	8	12	10	26.	0-0.033	13	83.5	8	9	64.5	4	9	7
32	Up to	o 300	22	19.5	17	45	90	1⁄8	1/8	69	10	20	12	26-	0-0.033	13	83.5	8	9	64.5	4	9	7
40	Up to	o 300	24	21	22	52	100.5	1⁄8	1⁄8	76	10	20	14	32.	0 -0.039	16	90.5	11	8	70	4	11	8
	_																						
Bore (mm)	GR	Н	H1	Ι	к	L	M	М	Ν	NA	N	Ν	Р	PG	PH	PL	PW	RR	S	U	Z	ZZ	
Bore (mm) 20	<b>GR</b> 4	<b>H</b> 41	<b>H</b> 1 5	<b>I</b> 28	<b>K</b> 5	L 12	<b>М</b> М8 х		N 15	<b>NA</b> 24	_	<b>N</b> x 1.5	<b>P</b>	<b>PG</b> 22	<b>PH</b> 19.5	<b>PL</b> 20	<b>PW</b> 38	<b>RR</b> 9	<b>S</b> 127	<b>U</b> 11.5	<b>Z</b> 180	<b>ZZ</b> 189	
( )	-			<b>I</b> 28 33.5		L 12 12	M8 x				M20		-	-					-	-			
20	4	41	5		5		M8 x M10 x	1.25	15	24	M20 M26	x 1.5	1/8	22	19.5	20	38	9	127	11.5	180	189	]



# CLM2 Series Accessory Bracket Dimensions 1

#### Single Knuckle Joint Single Knuckle Joint (mm) (mm) I-020B/032B I-040B rial. Bolled ste Material: Free cutting sulfur steel Y (Max.) ØND H10 ММ 88 Ø**ND**H10 CLJ2 MM 45 MM CLM2 øND ωī U A<sub>1</sub> U1 CLG1 Ĥ R (Min) NX CL1 A Bore size ММ NDH10 NX<sub>1</sub> U1 R<sub>2</sub> Y z MM NDH10 NX **R**1 U1 Δ н Part no. Α A<sub>1</sub> E1 L MLGC 9+0.058 I-020B 20 18 41 M8 x 1.25 9 + 0.058 9-0.1 14 10 11 66 20 46 16 20 36 M8 x 1.25 9-0.1 10 14 9+0.058 9+0.058 25, 32 22 M10 x 1.25 69 I-032B 25, 32 9-02 45 9=0.1 14 10 14 48 18 20 38 M10 x 1.25 10 14 12<sup>+0.070</sup> M14 x 1.5 12<sup>+0.070</sup> CNG 16-0.1 15.5 20 40 24 50 M14 x 1.5 $16^{-0.1}_{-0.3}$ 20 14 13 92 I-040B 40 69 22 24 55 **Double Knuckle Joint** MNB (mm) Y (Max.) ØND hole H10 CNA2 Axis d9 CNS CLS NX: Ha CLQ R<sub>2</sub> (Min RLO MM ND R<sub>2</sub> Y Ζ Bore size Δ н NX<sub>2</sub> U<sub>2</sub> L $9^{+0.2}_{+0.1}$ 20 18 41 25 M8 x 1.25 9 10 14 11 66 MI U 9+0.2 25, 32 22 45 25 M10 x 1.25 9 10 14 14 69 40 24 50 497 M14 x 1.5 12 16:0.3 13 25 13 92 MLGP **Double Knuckle Joint** (mm) ML1C Y-020B/Y-032B Material: Bolled steel Y-040B Material: Cast iron

ØND hole H10 МN ØND hole H10 M٨ Axis d9 Axis d9 **A**1 U1 A1 U Part no. Lı ММ ND NX NZ R1 Uı ing ring SiZe Α A<sub>1</sub> E1 L Applicable pin ore size Y-020B 20 46 16 20 25 36 M8 x 1.25 9 9<sup>+0.2</sup> +0.1 18 5 14 CDP-1 Type C 9 for axis Y-032B 25.32 48 18 20 25 38 M10 x 1.25 9 9+0.2 18 5 14 CDP-1 Type C 9 for axis Y-040B CDP-3 40 68 22 24 49.7 55 M14 x 1.5 12  $16^{+0.3}_{+0.1}$ 38 13 25 ø3 x 18 ℓ

(mm)

\* Clevis pin and retaining ring (cotter pin for 40) are attached.

# Double Clevis Pin/Material: Carbon steel

#### Bore size/ø20, ø25, ø32 CDP-1







Cotter pin

ø3 x 18 ℓ

Retaining ring: Type C9 for axis

\* Retaining rings (cotter pins for ø40) are attached.



\* Retaining rings (cotter pins for ø40) are attached.

Double Knuckle Pin/Material: Carbon steel



Retaining ring: Type C9 for axis



D-□ -X□

∕⁄ SMC

811


(mm)

# CLM2 Series Accessory Bracket Dimensions 2

# Rod End Nut


# Clevis Pivot Bracket (For CLM2E)

(mm) Material: Rolled steel plate



Part no.	Applicable bore size	В	С	D	d	Н
NT-02	20	13	15.0	12.5	M8 x 1.25	5
NT-03	25, 32	17	19.6	16.5	M10 x 1.25	6
NT-04	40	22	25.4	21.0	M14 x 1.5	8

# **Mounting Nut**



(mm)

Part no.	Applicable bore size	в	С	D	d	н
SN-020B	20	26	30	25.5	M20 x 1.5	8
SN-032B	25, 32	32	37	31.5	M26 x 1.5	8
SN-040B	40	41	47.3	40.5	M32 x 2.0	10


Trunn	ion N	ut				(mm)
	H H		Ċ		erial: Carbor - <b>d</b> _	n steel
Part no.	Applicable bore size	в	С	D	d	н
TN-020B	20	26	28	25.5	M20 x 1.5	10
TN-032B	25, 32	32	34	31.5	M26 x 1.5	10
TN-040B	40	41	45	40.5	M32 x 2	10

# 

Part no.	Applicable bore size	L	LC	LD	LE	LF	LG	LH	LR	LT	LX	LY	LV	Applicable pin part no.
CM-E020B	20, 25	24.5	8	6.8	22	15	30	30	10	3.2	12	59	18.4	CD-S02
CM-E032B	32, 40	34	10	9	25	15	40	40	13	4	20	75	28	CD-S03

Note 1) Clevis pins and retaining rings (cotter pins for e40) are attached. Note 2) It cannot be used for single clevis type (CM2C) and double clevis type (CM2D).

# Clevis Pin (For CLM2E)



(mm)


Material: Carbon steel


Part no.	Applicable bore size	D <sub>d9</sub>	d	L	Lı	m	t	Applicable retaining ring part no.
CD-S02	20, 25	8-0.040	7.6	24.5	19.5	1.6	0.9	Type C 8 for axis
CD-S03	32, 40	10-0.040	9.6	34	29	1.35	1.15	Type C 10 for axis

Note) Retaining rings are attached.

Regarding mounting bracket, accessory made of stainless steel (Some are not available.), refer to page 1286 for -XB12, External stainless steel cylinder.

# Single Clevis

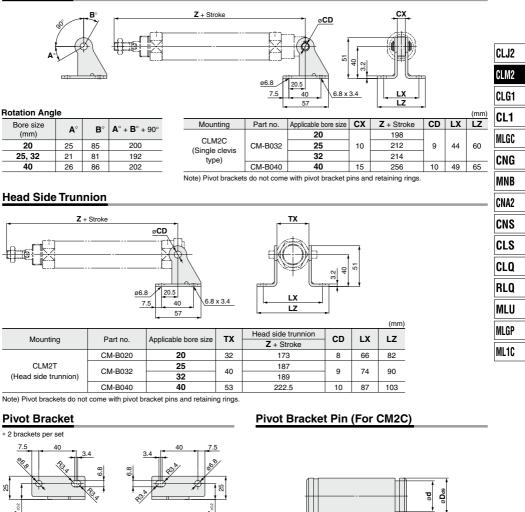



8

9


10

CM-B020 (2)

CM-B032

CM-B040

ß

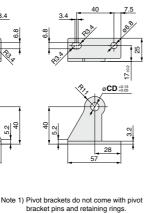

Note 2) Only for trunnion type



								(mm)
Applicable bore size	Part no.	Dd9	d	L	Lı	m	t	Applicable retaining ring part no.
20 to 32	CDP-1	9 <sup>-0.040</sup> -0.076	8.6	25	19.2	1.75	1.15	Type C 9 for axis
40	CD-S03	10-0.040	9.6	34	29	1.75	1.15	Type C 10 for axis

Note) Pivot bracket pins come with retaining rings.

@SMC

813

D-🗆


-X 🗆

# CLM2 Series Auto Switch Mounting 1


Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

#### Reed auto switch


**D-A9**□




## D-C7/C8




## D-B5/B6/B59W




## D-A33A/A34A








## D-C73C/C80C




### Solid state auto switch




\_\_\_\_\_**B** ( ): For D-M9⊡A


#### D-H7□/H7□W/H7NF/H7BA




D-G5NTL



## D-G39A/K39A





в

# Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

Auto Sv		roper	Mount	ting Po	sition	1										(mm)	
Auto switch model	D-M9[ D-M9[ D-M9[	⊐ÌW(V)	D-A9	□(V)		7/C8 73C 80C		B5 B6	D-B	59W	D-G D-K	39A	D-H D-H D-H D-H	7C 7⊡W	D-G	5NT	CLJ2
		( )									D-A	44A	D-H	7NF			CLM2
Bore size	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	01.01
20	10.5	9.5	6.5	5.5	7	6	1	0	4	3	0.5	0	6	5	2.5	1.5	CLG1
25	10.5	9.5	6.5	5.5	7	6	1	0	4	3	0.5	0	6	5	2.5	1.5	CL1
32	11.5	10.5	7.5	6.5	8	7	2	1	5	4	1.5	0.5	7	6	3.5	2.5	ULI
40	17.5	15.5	13.5	11.5	13	12	7	6	10	9	6.5	5.5	12	11	8.5	7.5	MICC

(mm)

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

#### Auto Switch Mounting Height

Auto switch model		D-C7/C8 D-H7□ D-H7□W D-H7NF D-H7BA	D-B5 D-B64 D-B59W D-G5NT D-H7C	D-C73C D-C80C	D-A3⊟A D-G39A D-K39A	D-A44A
Bore size \	Hs	Hs	Hs	Hs	Hs	Hs
20	23	22.5	25.5	25	60	69.5
25	25.5	25	28	27.5	62.5	72
32	29	28.5	31.5	31	66	75.5
40	33	32.5	35.5	35	70	79.5

CLJ2
CLM2
CLG1
CL1
MLGC
CNG
MNB
CNA2
CNS
CLS
CLQ
RLQ
MLU
MLGP
ML1C


D-🗆

# CLM2 Series Auto Switch Mounting 2

# **Minimum Auto Switch Mounting Stroke**

					n: No. of auto switches (mm)
Auto switch			No. of auto switches mounte	d	
model	1		2		n
		Different surfaces	Same surface	Different surfaces	Same surface
	_			$20 + 35 \frac{(n-2)}{2}$	55 + 35 (n – 2)
D-M9□	5	20	55	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
				$20 + 35 \frac{(n-2)}{2}$	55 + 35 (n - 2)
D-M9⊡W	10	20	55	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
				$25 + 35 \frac{(n-2)}{2}$	60 + 35 (n - 2)
D-M9□A	10	25	60	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
D-A9□	5	15	50	$15 + 35 \frac{(n-2)}{2}$	50 + 35 (n - 2)
DAVE		10		(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
				$20 + 35 \frac{(n-2)}{2}$	35 + 35 (n – 2)
D-M9⊡V	5	20	35		(n = 2, 3, 4, 5)
				(n = 2, 4, 6) Note 3) 15 + 35 $\frac{(n - 2)}{2}$	
D-A9⊡V	5	15	25	$15 + 35 \frac{(n-2)}{2}$	25 + 35 (n - 2)
D-A3	5	15	25	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
D-M9□WV				$20 + 35 \frac{(n-2)}{2}$	35 + 35 (n – 2)
D-M9DAV	10	20	35		(n = 2, 3, 4, 5)
D-WOLAV				(n = 2, 4, 6) Note 3)	
D-C7□	5	20	60	$20 + 45 \frac{(n-2)}{2}$	60 + 45 (n - 2)
D-C80	5	20	00	(n = 2, 4, 6) <sup>2</sup> Note 3)	(n = 2, 3, 4, 5)
D-H7□				( )	
D-H7⊟W	10	25	70	$25 + 45 \frac{(n-2)}{2}$	70 + 45 (n – 2)
D-H7BA	10	25	/0	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
D-H7NF					
D-C73C				$30 + 50 \frac{(n-2)}{2}$	80 + 50 (n - 2)
D-C80C	15	30	80	(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
D-H7C				(11 = 2, 4, 6)	( )-/ /- /
D-B5				(n - 2)	70 + 50 (n - 2)
D-B64	10	25	70	$25 + 50 \frac{(n-2)}{2}$	(n = 2, 3, 4, 5)
D-G5□ D-K59□				(n = 2, 4, 6) Note 3)	(11 = 2, 3, 4, 5)
D-R33				(n - 2)	75 . 50 ( 0)
D-B59W	15	30	75	$30 + 50 \frac{(n-2)}{2}$	75 + 50 (n – 2)
				(n = 2, 4, 6) Note 3)	(n = 2, 3, 4, 5)
D-A3□A				(n 2)	
D-G39A	20	35	110	$35 + 30 \frac{(n-2)}{2}$	110 + 100 (n - 2)
D-K39A				(n = 2, 3, 4, 5)	(n = 2, 3, 4, 5)
D-A44A					

Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

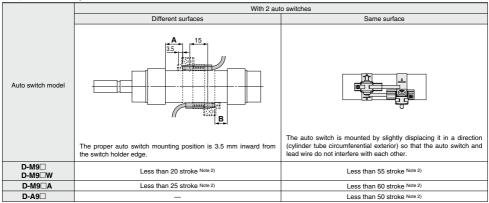

Note 2) Minimum stroke for auto switch mounting in types other than those mentioned in Note 1.

Note 1) Auto switch mounting

# Operating Range

				(mm)
Auto switch model		Bore	size	
Auto switch model	20	25	32	40
D-A9	6	6	6	6
D-M9□ D-M9□W	3.5	3	3.5	3
D-C7□/C80 D-C73C/C80C	7	8	8	8
D-B5□/B64 D-A3□A/A44A	8	8	9	9
D-B59W	12	12	13	13
D-H7□/H7□W/H7BA D-G5NT/H7NF	4	4	4.5	5
D-H7C	7	8.5	9	10
D-G39A/K39A	8	9	9	9

\* Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approximately ±30% dispersion). It may vary substantially depending on an ambient environment.

# Auto Switch Mounting Bracket: Part No.

Auto switch model		Bore size	ze (mm)	
Auto switch model	20	25	32	40
D-M9□(V) D-M9□W(V) D-A9□(V)	Note 1) BM5-020	Note 1) BM5-025	Note 1) BM5-032	Note 1) BM5-040
D-M9□A(V)	Note 2) BM5-020S	Note 2) BM5-025S	Note 2) BM5-032S	Note 2) BM5-040S
D-C7□/C80 D-C73C/C80C D-H7□ D-H7□W D-H7NF D-H7BA	BM2-020A	BM2-025A	BM2-032A	BM2-040A
D-B5□/B64 D-B59W D-G5□/K59 D-G5□W/K59W D-G5BA/G59F	BA2-020	BA2-025	BA2-032	BA2-040
D-G5NT D-A3□A/A44A D-G39A/K39A	BM3-020	BM3-025	BM3-032	BM3-040

s the auto switch mounting band (BM2-L ∴A) and the hold (BJ5-1/Switch bracket: Transparent).

Since the switch bracket (made from nylon) are affected in an environment where alcohol, chloroform, methylamines, hydrochloric acid or sulfuric acid is splashed over, so it cannot be used. Please consult SMC regarding other chemicals.

Note 2) Set part number which includes the auto switch mounting band (BM2-DDAS/Stainless steel screw) and the holder kit (BJ4-1/Switch bracket: White).

Note 3) For the D-M9DA (V) type auto switch, do not install the switch bracket on the indicator light.

Switch bracket


(Resin)

#### [Mounting screw set made of stainless steel]

The following set of mounting screws made of stainless steel is available. Use it in accordance with the operating environment. (Please order the auto switch mounting bracket separately, since it is not included.) BBA4: For D-C7/C8/H7 types

Note 4) Refer to page 1226 for the details of BBA4.

D-H7BA auto switch is set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, BBA4 is attached.

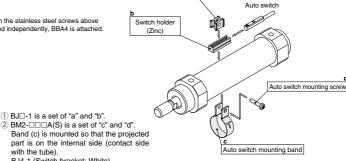

٦

② BM2-□□□A(S) is a set of "c" and "d".

Band (c) is mounted so that the projected part is on the internal side (contact side with the tube). BJ4-1 (Switch bracket: White)

BJ5-1 (Switch bracket: Transparent)

lefer to pages 1119	to 1245 for the detailed s	pecifications.	
Auto switch type	Part no.	Electrical entry (Fetching direction)	Features
Reed	D-B53, C73, C76		-
Reed	D-C80		Without indicator light
	D-H7A1, H7A2, H7B	Grommet (In-line)	_
Solid state	D-H7NW, H7PW, H7BW		Diagnostic indication (2-color
	D-G5NT		With timer

\* Normally closed (NC = b con act) sol id state auto switc hes (D-F9G/F9H types) are also avail ole. Refer to page 1137 for de 



CNS

CLS

CLQ RLQ


MLU

MLGP

ML1C

# Fine Lock Cylinder Double Acting, Single Rod CLG1 Series

How to Order

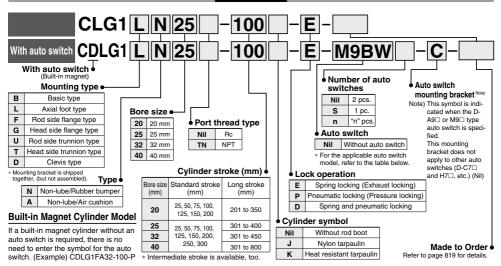

Applicable Auto Switches/Refer to pages 1119 to 1245 for further information on auto switches.

	Created		light	Minima	Lc	ad volta	ge	Auto swit		Lea	d wir	e ler	ngth	(m)	Dra wired	Anal	iaahla					
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)		С	AC	Applicable Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	None (N)	Pre-wired connector		icable ad					
				3-wire				M9NV	M9N	•			Ō	-	0							
				(NPN)		- 14 40 14		_	_	•	-	•	0	1-	0	IC						
		Grommet		3-wire		5 V, 12 V		M9PV	M9P	•	•	•	0		0	circuit						
	_	Grommet		(PNP)				_	_	•	-	•	0	1-	0	1						
ج ا							1	M9BV	M9B	•	•	•	0	-	0							
auto switch				2-wire		12 V		_	_	٠	-	•	0	-	0	_						
s		Connector	1					_	H7C	٠	-	•	ĬŎ	•	-	1						
2			1	3-wire		5 V 10 V	1	M9NWV	M9NW	٠	•	•	0	-	0							
ar I	Diagnostic			(NPN)	24 V		- V 10 V		_	_	٠	-	•	0	-	0	IC	Relay,				
ø	indication			3-wire		5 V, 12 V	-	M9PWV	M9PW	٠	•	•	0	-	0	circuit	PLC					
state	(2-color		Yes	(PNP)				_	_	٠	-	•	0	-	0	1						
s	indicator)		$\geq$	2-wire		12 V	1	M9BWV	M9BW	۲	•	•	0	-	0							
Solid		Grommet		2-wire		12 V		_	_	۲	-	•	0	-	0	-						
S	Water			3-wire (NPN)		5 V, 12 V	1	M9NAV*1	M9NA*1	0	0	•	0	-	0	IC						
	resistant			3-wire (PNP)		5 V, 12 V		M9PAV*1	M9PA*1	0	0	•	0	-	0	circuit						
	(2-color			2-wire		12 V	1	M9BAV*1	M9BA*1	0	0	•	0	-	0							
	indicator)			2-wire		12 V							_	_	۲	-	•	0	-	0	-	
	With diagnostic output (2-color indicator)			4-wire (NPN)		5 V, 12 V	1	_	H7NF	۲	-	•	0	-	0	IC circuit						
			Yes	3-wire (NPN equivalent)	—	5 V	—	A96V	A96	•	-	•	-	-	—	IC circuit	—					
switch			≻				100 V	A93V*2	A93	•		•		-	—	—						
S S		Grommet	No				100 V or less	A90V	A90	•	-	•	-	-	—	IC circuit						
			Yes			12 V	100 V, 200 V	-	B54	•	-	•		-	—		Bolov					
E			No	2-wire	24 V	12 V	200 V or less	_	B64	•	-		-	-	-	—	Relay, PLC					
a,		Connector	Yes				_	—	C73C	•	-		•	•	-							
Reed auto		Grommet Connector	No				24 V or less	—	C80C	•	-		•	•	-	IC circuit						
n c	Diagnostic indication (2-color indicator)	Grommet	Yes			-	_	_	B59W	۲	-	•	-	-	_	—						

\*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee the water resistance. A water-resistant type cylinder is recommended for use in an environment which requires water resistance. However, please contact SMC for water-resistant products of e20 and e25.

\*2 1 m type lead wire is only applicable to D-A93.

\* Lead wire length symbols: 0.5 m ......Nil (Example) M9NW

5 m ······Nil (Example) M9NW 5 m ······Z 1 m ······M (Example) M9NWM None ······N \* Solid state auto switches marked with "O" are produced upon receipt of order.

3 m ······ L (Example) M9NWL

\* Since there are other applicable auto switches than listed above, refer to page 829 for details.

\* For details about auto switches with pre-wired connector, refer to pages 1192 and 1193.

\* D-A9□(V)/M9□(V)/M9□W(V)/M9□A(V) auto switches are shipped together (not assembled). (Only auto switch mounting brackets are assembled at the time of shipment.)

(Example) M9NWZ

<sup>)</sup> M9NWM None ······ N (Example) H7CN

# Fine Lock Cylinder Double Acting, Single Rod **CLG1** Series

Provided with a compact lock mechanism, it is suitable for intermediate stop, emergency stop, and drop prevention.

#### Locking in both directions

The piston rod can be locked in either direction of its cylinder stroke.

#### Maximum piston speed: 500 mm/s

It can be used at 50 to 500 mm/s provided that it is within the allowable kinetic energy range.





Symbol	Specifications
-XA🗆	Change of rod end shape

20 25 32 40

0.61 0.97 1.06

N/I	od	
111	uu	

Series	Туре	Action	Cushion	Bore size (mm)	Lock operation
CLG1□N	Non-lube	Double	Rubber bumper	20, 25	Spring locking (Exhaust locking) Pneumatic locking (Pressure locking)
CLG1□A	INOTI-TUDE	acting	Air cushion	32, 40	Spring and pneumatic locking

#### Specifications

20	25	32	40				
Air							
Not required (Non-lube)							
1.5 MPa							
	11	ИРа					
Without auto switch: -10 to 70°C (No freezing) With auto switch: -10 to 60°C (No freezing)							
	50 to 500	mm/sec *					
Up to 1	1000 st <sup>+1.4</sup> m	m to 1500 st <sup>+</sup>	<sup>1.8</sup> mm				
	Rubber bump	er, Air cushio	n				
Basic type, Axial foot type, Rod side flange type, Mounting ** Head side flange type, Rod side trunnion type, Head side trunnion type, Clevis type (Used when							
	Without With an Up to Basic type Head side	Not require 1.5 1.7 0.00 Without auto switch: With auto switch: 50 to 500 Up to 1000 st <sup>+</sup> 1 <sup>4</sup> m Rubber bump Basic type, Axial foot ty Head side flange type, Head side flange type,	Air Not required (Non-lube) 1.5 MPa 1 MPa 0.08 MPa Without auto switch: -10 to 60°C (No fr 50 to 500 mm/sec <sup>*</sup> Up to 1000 st <sup>+1</sup> 0 <sup>4</sup> mm to 1500 st <sup>+1</sup> Rubber bumper, Air cushiol Basic type, Axial foot type, Rod side fur				

piston can be locked. The maximum speed of 1000 mm/s can be accommodated if the piston is to be locked in the stationary state for the purpose of drop prevention.

\*\* The long stroke type is applicable to the axial foot type, and the rod side flange type.

#### Fine Lock Specifications

Spring locking (Exhaust locking)         Spring and pneumatic locking         Pneumatic locking						
Air						
0.5 MPa						
0.3 MPa o	0.1 MPa or more					
0.25 MPa	0.05 MPa or more					
Both directions						
	Spring locking (Exhaust locking) 0.3 MPa o	Spring locking (Exhaust locking) Spring and pneumatic locking Air 0.5 MPa 0.3 MPa or more 0.25 MPa or less				

#### Accessorv

(kg)

1.35

1.57

1.58 1.40 1.58 0.27 0.25 0.10 0.13 0.15

0.02

N	lounting	Basic type	Axial foot type				Head side trunnion type	Clevis type
Standard	Rod end nut	٠	•	•	•	•	•	•
	Clevis pin	_	—	_	_	—	_	•
Option	Single knuckle joint	•	•	•	•	•	•	•
	Double knuckle joint* (With pin)	•	•	•	•	•	•	٠
	Pivot bracket	—	—	_	_	•		•
	Rod boot	۲	•	•	•	•		•

Pin and retaining ring are shipped together with double knuckle joint.

\* For part numbers and dimensions, refer to page 825. (For rod boots, refer to pages 821 and 823.)

	, Refer to the minimum auto switch mounting stroke (page 827) for those
Standard Stroke	/ with an auto switch

Ctanada C						
Bore size (mm)	Standard stroke (mm)	Long stroke (mm)	Maximum manufacturable stroke (mm)			
20	25, 50, 75, 100, 125, 150, 200	201 to 350				
25	25, 50, 75, 100,	301 to 400	1500			
32	125, 150, 200,	301 to 450				
40	250, 300	301 to 800	]			

\* Intermediate stroke is available, too. Spacers are not used.

\* Long strokes are applicable for the axial foot and rod side flange types. If other mounting brackets are used or the length exceeds the long stroke limit, the maximum stroke should be determined based on the stroke selection table (technical data).

#### Calculation: (Example)

Weight

g

Bore size (mm)

Basic type

- CLG1LA20-100 (Foot Type, ø20, 100 st)
- Basic weight-----0.72

Additional weight for long stroke 0.01 0.01 0.02 0.03

- Additional weight-----0.05/50 st
- Air cylinder stroke------ 100 st Additional weight of air cushion ..... 0.01 kg
- 0.72 + 0.05 x 100/50 + 0.01 = 0.83 kg
- Refer to pages 826 to 829 for cylinders with auto switches. · Minimum auto switch mounting stroke
- · Proper auto switch mounting position
- (detection at stroke end) and mounting heiaht
- Operating range
- · Switch mounting bracket: Part no. ∕⊘SMC

#### Rod Boot Material

Symbol	Rod boot material	Maximum ambient temperature
J Nylon tarpaulin		70°C
к	Heat resistant tarpaulin	110°C *

\* Maximum ambient temperature for the rod boot itself.

2 2 iC G B CNA2 CNS CLS CLQ RLO MLU MLGP ML1C

D-

-X□

	0		0.72	1.10	1.22
			0.73	1.15	1.23
Clevis type		Trunnion type	0.62	0.99	1.09
		Clevis type	0.66	1.05	1.21
ſ	Rod :	side pivot bracket	0.11	0.13	0.20
l	Head	l side pivot bracket	0.08	0.09	0.17
	Single knuckle joint		0.05	0.09	0.09
ſ	Doubl	e knuckle joint (with pin)	0.05	0.09	0.09
ſ	Additiona	al weight per each 50 mm of stroke	0.05	0.07	0.09
ſ	Additional weight with air cushion		0.01	0.01	0.02

# CLG1 Series

#### ▲ Caution/Allowable Kinetic Energy when Locking

Bore size (mm)	20	25	32	40
Allowable kinetic energy (J)	0.26	0.42	0.67	1.19


- In terms of specific load conditions, the allowable kinetic energy indicated in the table above is equivalent to a 50% load ratio at 0.5 MPa, and a piston speed of 300 mm/sec. Therefore, if the operating conditions are below these values, calculations are unnecessary.
- 2. Apply the following formula to obtain the kinetic energy of the load.

Ek: Kinetic energy of load (J)

 $Ek = \frac{1}{2} mv^2$  m: Load mass (kg)

 $\upsilon$  : Piston speed (m/s) (Average speed x 1.2 times)

- 3. The piston speed will exceed the average speed immediately before locking. To determine the piston speed for the purpose of obtaining the kinetic energy of load, use 1.2 times the average speed as a guide.
- 4. The relation between the speed and the load of the respective tube bores is indicated in the diagram below. Use the cylinder in the range below the line.
- 5. Even within a given allowable kinetic energy level, there is an upper limit to the size of the load that can be sustained. Thus, a horizontally mounted cylinder must be operated below the solid line, and a vertically mounted cylinder must be operated below the dotted line.

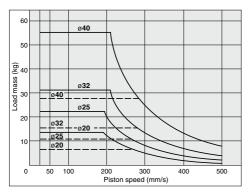


#### Holding Force of Spring Locking (Maximum static load)

Bore size (mm)	20	25	32	40
Holding force (N)	196	313	443	784

Note) Holding force at piston rod extended side decreases approximately 15%.

#### Holding Force of Pneumatic Locking (Maximum static load)

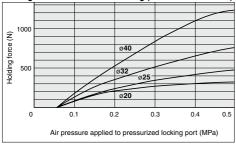

\* When selecting cylinders, refer to the Precautions and allowable kinetic energy when locking on page 786, and then select a cylinder.

# **▲**Caution

#### Caution when Locking

Holding force (maximum static load) means the maximum capability of holding a static load that is not accompanied by vibration or impact under the condition that no load is applied. Therefore, it does not refer to a load that cannot be held constantly.

- When using (selecting) this product, carefully check the following points.
- If the piston rod slips because the lock's holding force has been exceeded, the brake shoe could be damaged, resulting in a reduced holding force or shortened life.
- The upper limit of the load that is used under the conditions not associated with the kinetic energy when locking, such as drop prevention must be 35% or less of the holding force.
- Do not use the cylinder in the locked state to sustain a load that involves impact.

Stopping Accuracy (Not including tolerance of control system.) (in	mm)
--	-----

	Piston speed (mm/s)			
Locking method	50	100	300	500
Spring locking (Exhaust locking)	±0.4	±0.5	±1.0	±2.0
Pneumatic locking (Pressure locking) Spring and pneumatic locking	±0.2	±0.3	±0.5	±1.5

Condition/load: 25% of thrust force at 0.5 MPa Solenoid valve: Mounted to the lock port

## ▲ Caution

#### Selection/Recommended Pneumatic Circuit/Caution on Handling

For detailed speceifications of the fine lock cylinder, CLG1 series mentioned above, refer to pages 786 to 789.

#### **Operating Precautions**

### ▲ Warning

1. Do not operate the cushion valve in the fully closed or fully opened state.

Using it in the fully closed state will cause the cushion seal to be damaged. Using it in the fully opened state will cause the piston rod assembly or the cover to be damaged.

- 2. Operate within the specified cylinder speed.
- Otherwise, cylinder and seal damage may occur.
- Carefully check the cushion performance in a low speed range. The performance and effect at around 50 mm/s may vary depending on the individual difference of each product.
- 4. If a cylinder is actuated at high speed when mounted with one side fastened and one side free (basic type, flange type, direct mount type), the bending moment may act on the cylinder due to vibration at the stroke end, causing damage to the cylinder. In such cases, install a mounting bracket to suppress vibration of the cylinder body, or reduce piston speed until the cylinder body does not vibrate at the stroke end. Also, use a mounting bracket when moving the cylinder body, or mounting a long stroke cylinder horizontally with one-sided fastening.

#### **∆**Caution

1. Install a rod boot without twisting.

- If the cylinder is installed with its bellows twisted, it could damage the bellows.
- Tighten clevis bracket mounting bolts with the following proper tightening torque.
  - ø20: 1.5N·m, ø25 to 32: 2.9N·m, ø40: 4.9N·m,
  - ø50: 11.8N·m, ø63 to 80: 24.5N·m, ø100: 42.2N·m


#### Mounting Bracket Part No.

Mounting blacket	Bore size (mm)					
Wounting blacket	20	25	32	40		
Axial foot *	CNG-L020	CNG-L025	CNG-L032	CNG-L040		
Flange	CNG-F020	CNG-F025	CNG-F032	CNG-F040		
Trunnion pin	CG-T020	CG-T025	CG-T032	CG-T040		
Clevis **	CG-D020	CG-D025	CG-D032	CG-D040		
Rod side pivot bracket	CNG-020-24	CNG-025-24	CNG-032-24	CNG-040-24		
Head side pivot bracket	CG-020-24A	CG-025-24A	CG-032-24A	CG-040-24A		


<sup>\*</sup> When ordering foot bracket, order 2 pieces per cylinder.


- \*\* For the clevis type, clevis pins, retaining rings and mounting bolts are included.
- \*\*\* Mounting bolts are shipped together for the foot and flange types.

### **Basic Type: CLG1BN**

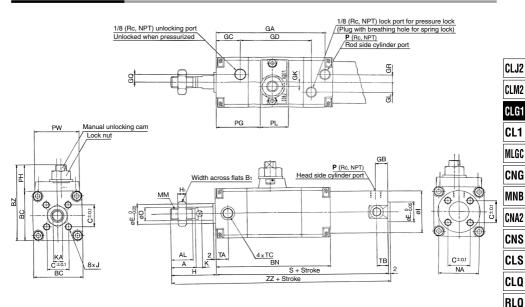

CLG1 With rod boot (Mounting bracket: Basic type)





Bore size (mm)	Stroke range	AL	A	B1	вс	вN	ΒZ	с	D	Е	GA	GВ	GC	GD	GΚ	GL	GQ	GR	I	J	к	КА	ММ
20	Up to 200	15.5	18	13	38	91	57.5	14	8	12	84	10	19	54	3.5	5.5	4	4	26	M4 x 0.7 depth 7	5	6	M8 x 1.25
25	Up to 300	19.5	22	17	45	101	69	16.5	10	14	94	10	20	62	4	9	7	7	31	M5 x 0.8 depth 7.5	5	8	M10 x 1.25
32	Up to 300	19.5	22	17	45	102	69	20	12	18	95	10	21	62	4	9	7	7	38	M5 x 0.8 depth 8	5.5	10	M10 x 1.25
40	Up to 300	27	30	19	52	111	76	26	16	25	103	10	23	67	4	11	8	7	47	M6 x 1 depth 12	6	14	M14 x 1.5

Bore size	Stroke	H1	NA	Р	DC	РН	ы	DW	c	ТА	тв	тс		hout boot			Wi	th re	od bo	oot		
(mm)	range	<b>H</b> 1	INA	F	FG	ГП	FL	<b>F VV</b>	3	IA	п	10	н	ZZ	IJ	JH (Reference)	JW (Reference)	е	f	h	l	ZZ
20	Up to 200	5	24	1/8	33	19.5	20	38	141	11	11	M5 x 0.8	35	178	27	15.5	10.5	30	18	55		198 (206)
25	Up to 300	6	29	1/8	38	24	24	41	151	11	11	M6 x 0.75	40	193	32	16.5	10.5	30	19	62	1/4	215 (223)
32	Up to 300	6	35.5	1/8	39	24	24	41	154	11	10	M8 x 1	40	196	38	18.5	10.5	35	19	62	stroke	218 (226)
40	Up to 300	8	44	1/8	44	24	24	41	169	12	10	M10 x 1.25	50	221	48	21.5	10.5	35	19	70		241 (250)

\* For long stroke refer to page 823.

\*\* The minimum stroke for cylinders with a rod boot is 20 mm.


MLU

MLGP ML1C

# CLG1 Series

### With Mounting Bracket

#### Foot type: CLG1LN



#### Foot Type

Ć

Bore size (mm)	вz	м	w	x	Y	LС	LD	LH	LS	LT	LX	LΖ	Without rod boot	With rod boot
20	63.5	3	10	15	7	4	6	25	117	3	50	62	182 + stroke	202 + 1.25 stroke
25	74.5	3.5	10	15	7	4	6	28	127	3	57	70	197.5 + stroke	219.5 + 1.25 stroke
32	74.5	3.5	10	16	8	4	7	28	128	3	60	74	200.5 + stroke	222.5 + 1.25 stroke
40	83	4	10	16.5	8.5	4	7	33	142	3	68	84	226 + stroke	246 + 1.25 stroke

\* For long stroke, refer to page 823.

Head side flange type: CLG1GN

zz

# Rod Side Flange Type

 
 Bore size (mm)
 B
 BZ FD
 FT
 FX
 FY
 FZ

 20
 38
 575
 5.5
 6
 52
 25
 65

 25
 45
 69
 5.5
 7
 60
 30
 75

 32
 45
 69
 6.6
 7
 60
 30
 75

 40
 52
 76
 6.6
 8
 66
 68
 8

\* For long stroke, refer to page 823.

#### Head Side Flange Type


	Bore size (mm)	Without rod boot	With rod boot							
	20	182 + stroke	202 + 1.25 stroke							
	25	198 + stroke	220 + 1.25 stroke							
	32	201 + stroke	223 + 1.25 stroke							
	40	227 + stroke	247 + 1.25 stroke							
Rod Side Trunnion Type										

With rod boot

Rod side trunnion type: CLG1UN

Rod side flange type: CLG1FN

( øl



#### Bore size (m) TDes TR TS TZ Z


111

(O)

(	mm)				. –	z	Z
	20	8-0.025 -0.047	51	40	59.6	46	66 + 0.25 stroke
	25	10-0.025	58	47	68	51	73 + 0.25 stroke
	32	12-0.032	62.5	47	75.7	51	73 + 0.25 stroke
	40	14-0.032	72.5	54	85.7	62	82 + 0.25 stroke

#### Head Side Trunnion Type

# Head side trunnion type: CLG1TN




+0.10

**SMC** 

		Bore size	TDes	TR	те	77	Without	rod boot	With ro	od boot
B	Bracket mounting	(mm)			15	12	Z	ZZ	Z	ZZ
<u>н</u> S.	1range	20	8-0.025 -0.047	39	28	47.6	165 + stroke	178 + stroke	185 + 1.25 stroke	198 + 1.25 stroke
1	<u>@</u>	25	10 -0.025	43	33	53	180 + stroke	193 + stroke	202 + 1.25 stroke	215 + 1.25 stroke
1	0.D.)	32	12 -0.032 -0.059	54.5	40	67.7	184 + stroke	196 + stroke	206 + 1.25 stroke	218 + 1.25 stroke
പ്പ	bin x	40	14 -0.032	65.5	49	78.7	209 + stroke	221 + stroke	229 + 1.25 stroke	241 + 1.25 stroke


# Clevis type: CLG1DN



### Clevis Type

CDH10	cz	L	RR	тт	тz							
8 +0.058	29	14	11	3.2	43.4							
	33	16	13	3.2	48							
	40	20	15	4.5	59.4	<ul> <li>* Clevis pin and retaining</li> </ul>						
14 +0.070	49	22	18	4.5	71.4	ring are atta						
W	ithou	ıt ro	d bo	ot		With rod boot						
Z				ΖZ		Z	ZZ					
190 + s	troke	ə 2	201 -	+ st	roke	210 + 1.25 stroke	221 + 1.25 stroke					
207 + s	troke	ə 2	20 -	+ st	roke	229 + 1.25 stroke	242 + 1.25 stroke					
214 + s	troke	ə 2	29 -	+ st	roke	236 + 1.25 stroke	251 + 1.25 stroke					
241 + stroke		e 259 + stroke		261 + 1.25 stroke	279 + 1.25 stroke							
	$\frac{\text{CDH10}}{8 + 0.058}$ $\frac{10 + 0.058}{0}$ $12 + 0.070$ $14 + 0.070$ $W$ $\frac{2}{190 + s}$ $207 + s$ $214 + s$	8+0.058         29           10+0.058         33           12+0.070         40           14+0.070         49           Withou         2           190 + stroke         207 + stroke           207 + stroke         214 + stroke	B +0.058         29         14           10 +0588         33         16           12 +0.070         40         20           14 +0.070         49         22           Without ro           207 + stroke           207 + stroke         2           214 + stroke         2	B *0.052         P         14         11           10 *0.058         29         14         11           10 *0.058         33         16         13           12 *0.077         40         20         15           14 *0.070         49         22         18           Without         rod box         201         220           190 + stroke         2207         stroke         220           214 + stroke         229         214         300	CDJ10         CZ         L         II         III         IIII         IIII         IIII         IIII         IIII         IIII         IIII         IIII         IIIII         IIIIIIII         IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	CD140         C2         C         F         I <thi< th="">         I         I         <thi< th=""></thi<></thi<>	$\begin{array}{c c c c c c c c c c c c c c c c c c c $					

### Basic Type with Air Cushion: CLG1BA

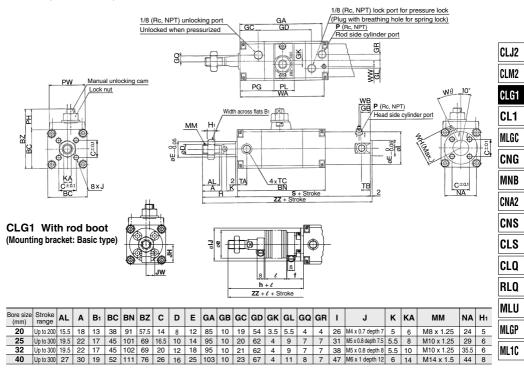


\* Refer to page 822 for mounting bracket, since the dimensions except GA, P, WA, WB, WH, WW, W0 are the same.

Bore size	Stroke	Б	PG	РН	PL	PW	~	тл	тв	тс			WD		Wθ	With rod I				Wit	h rod	boot			
(mm)	range	Р	PG	РП	PL	PW	3	IA	ю	IC.	WA	** **	WD	vип	w a	н	ZZ	IJ	JH (Reference)	JW (Reference)	е	f	h	l	ZZ
20	Up to 200	M5 x 0.8	33	19.5	20	38	141	11	11	M5 x 0.8	86	5.5	15	23	$30^{\circ}$	35	178	27	15.5	10.5	30	18	55		198 (206)
25	Up to 300	M5 x 0.8	38	24	24	41	151	11	11	M6 x 0.75	96	6	15	25	30°	40	193	32	16.5	10.5	30	19	62	1/4	215 (223)
32	Up to 300	1/8	39	24	24	41	154	11	10	M8 x 1	97	6	15	28.5	$25^{\circ}$	40	196	38	18.5	10.5	35	19	62	stroke	218 (226)
40	Up to 300	1/8	44	24	24	41	169	12	10	M10 x 1.25	106	8	15	33	20°	50	221	48	21.5	10.5	35	19	70		241 (250)
* Tho mi	* The minimum stroke for cylinders with a red best is 20 mm																								

\* The minimum stroke for cylinders with a rod boot is 20 mm.


Long Stroke/Refer to pages 821 to 823 for mounting dimensions except the table below.

### Basic type



Bore size (mm)	Stroke range	GВ	s	Without rod boot	With rod boot ZZ	тв	wв
20	201 to 350	12	149	186	206	11	16
25	301 to 400	12	159	201	223	11	16
32	301 to 450			204	226	11	16
40	301 to 800	13	178	230	250	12	16


### Foot type



Bore size (mm)	Stroke range	GВ	s	LS	Without rod boot	With rod boot ZZ
20	201 to 350	12	149	125	190	210
25	301 to 400	12	159	135	205.5	227.5
32	301 to 450				208.5	230.5
40	301 to 800	13	178	151	235	255

**SMC** 


#### Rod side flange type

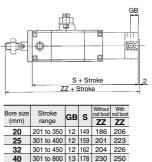




### Construction

#### With rubber bumper: CLG1BN



#### With air cushion: CLG1BA



#### **Component Parts**

	nponent Parts		
No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Clear hard anodized
2	Tube cover	Aluminum alloy	Hard anodized
3	Cover	Carbon steel	Nitrided
4	Intermediate cover	Aluminum alloy	Clear hard anodized
5	Piston rod	Carbon steel	Hard chromated
6	Piston	Aluminum alloy	Chromated
7	Brake piston	Carbon steel	Nitrided
8	Brake arm	Carbon steel	Nitrided
9	Brake shoe	Special friction material	
10	Roller	Carbon steel	Nitrided
11	Pin	Carbon steel	Heat treated
12	Retaining ring	Carbon tool steel	
13	Brake spring	Spring steel wire	Anti-corrosive treatment: Types C, E only
14	Bushing	Bearing alloy	
15	Bushing	Bearing alloy	
16	Manual lock release cam	Chromium molybdenum steel	Nitrided, nickel plated
17	Cam guide	Carbon steel	Nitrided, painted
18	Lock nut	Rolled steel	
19	Flat washer	Rolled steel	
20	Retaining ring	Carbon tool steel	
21	Hexagon socket head cap screw	Chromium molybdenum steel	
22	Spring washer	Steel wire	
23	Hexagon socket head cap screw	Chromium molybdenum steel	
24	Spring washer	Steel wire	
25	Hexagon socket head cap screw	Chromium molybdenum steel	
26	Spring washer	Steel wire	
27	Bumper A	Urethane	
28	Bumper B	Urethane	
29	Retaining ring	Stainless steel	
30	Wear ring	Resin	
31	Wear ring	Resin	
32	Hexagon socket head plug	Carbon steel	Type E only
33	Element	Bronze	Type E only
34	Rod end nut	Rolled steel	
35	Piston seal	NBR	
36	Piston gasket	NBR	
37	Rod seal A	NBR	
38	Rod seal B	NBR	
39	Brake piston seal	NBR	
40	Intermediate cover gasket	NBR	
41	Cam gasket	NBR	

No.	Description	Material	Note
42	Cylinder tube gasket	NBR	
43	Head cover	Aluminum alloy	Clear hard anodized
44	Cylinder tube	Aluminum alloy	Hard anodized
45	Cushion ring A	Aluminum alloy	Anodized
46	Cushion ring B	Aluminum alloy	Anodized
47	Seal retaining	Rolled steel	Zinc chromated
48	Cushion valve A	Chromium molybdenum steel	Electroless nickel plated
49	Cushion valve B	Rolled steel	Electroless nickel plated
50	Valve retaining	Rolled steel	Electroless nickel plated
51	Lock nut	Rolled steel	Electroless nickel plated
52	Retaining ring	Stainless steel	
53	Cushion seal A	Urethane	
54	Cushion seal B	Urethane	
55	Cushion ring gasket A	NBR	
56	Cushion ring gasket B	NBR	
57	Valve seal A	NBR	
58	Valve seal B	NBR	
59	Valve retaining gasket	NBR	

#### **Replacement Parts: Seal Kit**

Bore size (mm)	Kit no.	Contents
20	CG1N20-PS	
25	CG1N25-PS	Set of nos. above 35, 38, 42
32	CG1N32-PS	Set of hos. above 35, 36, 42
40	CG1N40-PS	


\* Since the lock section for CLG1 series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.

 Seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is needed.

Grease pack part no.: GR-S-010 (10 g)

**SMC** 






#### Long stroke


# CLG1 Series **Accessory Bracket Dimensions**

### Single Knuckle Joint



Part no.	Applicable bore size (mm)	Α	<b>A</b> 1	E1	L1	ММ	<sup>R</sup> <b>R</b> 1	Uı	NDH10	NX
I-G02	20	34	8.5	016	25	M8 x 1.25	10.3	11.5	8+0.058	8 -0.2
I-G03	25, 32	41	10.5	□20	30	M10 x 1.25	12.8	14	10 <sup>+0.058</sup>	10 -0.2
I-G04	40	42	14	ø22	30	M14 x 1.5	12	14	10+0.058	18 -0.3

# Rod Side Pivot Bracket

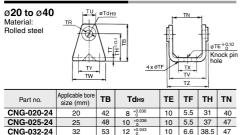

CNG-040-24	40		60	14 0	,43	10	6.6	42.5	55
Part no.	Applicable bore size (mm)	TR	тт	τυ	т	тw	тх	тγ	τΖ
CNG-020-24	20	13	3.2	21.2	47.8	42	26	28	50
CNG-025-24	25	15	3.2	21.3	54.8	42	28	28	57
CNG-032-24	32	17	4.5	25.6	57.4	48	28	28	61.4
CNG-040-24	40	21	4.5	26.3	65.4	56	36	30	71.4

# **Knuckle Pin**

CNG-032-24

#### Material: Carbon steel

									-
Part n	10.	Applicable bore size (mm)	Dd9	L	d	L1	m	t	Applicable retaining ring
IY-G	)2	20	8 -0.040	21	7.6	16.2	1.5	0.9	Type C 8 for axis
IY-G	)3	25, 32	10-0.040	25.6	9.6	20.2	1.55	1.15	Type C 10 for axis
IY-G	)4	40	10-0.040	41.6	9.6	36.2	1.55	1.15	Type C 10 for axis

\* Retaining rings are included.


# **Clevis Pin**

#### Material: Carbon steel


LU I	h	2 8
m []]		m
_t	L	- <u>\t</u>

Part no.	Applicable bore size (mm)	Dd9	L	d	L1	m	t	Applicable retaining ring
CD-G02	20	8 -0.040	43.4	7.6	38.6	1.5	0.9	Type C 8 for axis
CD-G25	25	10-0.040	48	9.6	42.6	1.55	1.15	Type C 10 for axis
CD-G03	32	12-0.050	59.4	11.5	54	1.55	1.15	Type C 12 for axis
CD-G04	40	14-0.050	71.4	13.4	65	2.05	1.15	Type C 14 for axis
<ul> <li>Retaining rings are included.</li> </ul>								

#### Double Knuckle Joint \* Knuckle pin and retaining ring are packaged.

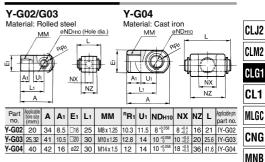

# Head Side Pivot Bracket



	-					1	z	-		RLQ
Part no.	Applicable b size (mm		тв	Td	TE	TF	TH	1	TN	IILU
CG-020-24A		' <u>'</u>	36	8	10	5.5	25	5 ()	29.3)	MLU
CG-025-24A	25		43	10	10	5.5	30	) (	33.1)	
CG-032-24A	32		50	12	10	6.6	35	5 (•	40.4)	MLGP
CG-040-24A	40		58	14	10	6.6	40	) (	49.2)	
										ML1C
Part no.	Applicable bore size (mm)	TF	דד   א	TU	тν	тw	ТΧ	ТΥ	ΤZ	
CG-020-24A	20	13	3 3.2	2 18.1	35.8	42	16	28	38.3	
CG-025-24A	25	15	i 3.2	2 20.7	39.8	42	20	28	42.1	
CG-032-24A	32	17	4.5	5 23.6	49.4	48	22	28	53.8	
CG-040-24A	40	21	4.5	5 27.3	58.4	56	30	30	64.6	

# Rod End Nut

Material Carbon	- \3		d	В	°	
Part no.	Applicable bore size (mm)	в	с	D	d	н
NT-02	20	13	15.0	12.5	M8 x 1.25	5
NT-03	25, 32	17	19.6	16.5	M10 x 1.25	6
NT-G04	40	19	21.9	18	M14 x 1.5	8



CNA2

CNS


CLS

CLQ

# CLG1 Series Auto Switch Mounting 1


Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

# Reed auto switch D-A9




#### Solid state auto switch D-M9□


D-M9⊡A D-M9⊡W




#### D-C7/C8




# D-G5NT



# D-C73C/C80C



#### D-B5/B6/B59W



#### Auto Switch Proper Mounting Position


Auto switch model Bore size	D-M9 D-M90 D-M90	⊐W(V)	D-A9	⊡(V)	D-C D-C D-C		D- D-		D-B	59W	D-H7 D-H7 D-H7 D-H7 D-H7	7C 7⊡W 7BA	D-65 D-K5 D-65 D-65 D-65 D-65	59F
(mm)	Α	В	Α	В	Α	В	Α	В	Α	В	Α	в	Α	В
20	10.5	27	6.5	23	7	23.5	1	17.5	4	20.5	6	22.5	2.5	19
20	10.5	(35)	0.5	(31)	'	(31.5)		(25.5)	4	(28.5)	0	(30.5)	2.5	(27)
25	10.5	27	6.5	23	7	23.5	-	17.5	4	20.5	6	22.5	2.5	19
25	10.5	(35)	0.5	(31)		(31.5)		(25.5)	4	(28.5)	0	(30.5)	2.5	(27)
32	10.5	29	6.5	25	7	25.5	-	19.5	4	22.5	6	24.5	2.5	21
32	10.5	(37)	0.5	(33)		(33.5)		(27.5)	4	(30.5)	0	(32.5)	2.5	(29)
40	10.5	32	9.5	28	10	28.5	4	22.5	7	25.5	9	27.5	5.5	24
40	13.5	(41)	9.5	(37)	10	(37.5)	4	(31.5)		(34.5)	9	(36.5)	5.5	(33)

\* ( ): Values for long strokes

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.


826

### D-H7⊡/H7⊡W D-H7NF/H7BA



D-H7C

**SMC** 



#### (mm) Auto Switch Mounting Height

'	Auto switch model Bore size	D-M9□(V) D-M9□W(V) D-M9□A(V) D-A9□(V)	D-C7/C8 D-H7 D-H7 D-H7 D-H7NF D-H7BA	D-C73C D-C80C	D-B5/B6 D-B59W D-G59F D-G5/K5 D-G50W D-G50W D-G5BA D-K59W
	(mm)	Hs	Hs	Hs	Hs
,	20	25	24.5	27	27.5
)	25	27.5	27	29.5	30
)	32	31	30.5	33	33.5
)	40	35.5	35	37.5	38

(mm)

					n: No. of auto switches (mm)	1
		1	lo. of auto switches mounte			
Auto switch model	1	2 Different surfaces			1 Carra avréasa	
		Different surfaces	Same surface	Different surfaces	Same surface	
D-M9□	5	15 Note 1)	40 Note 1)	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6···) Note 3)	55 + 35 (n - 2) (n = 2, 3, 4, 5…)	
D-M9⊡W	10	15 Note 1)	40 Note 1)	$\frac{20 + 35 \frac{(n-2)}{2}}{(n = 2, 4, 6)^{\text{Note 3}}}$	55 + 35 (n - 2) (n = 2, 3, 4, 5)	C C
D-M9⊡A	10	25	40 Note 1)	$25 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)	60 + 35 (n - 2) (n = 2, 3, 4, 5…)	
D-A9□	5	15	30 Note 1)	$15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6···) Note 3)	50 + 35 (n - 2) (n = 2, 3, 4, 5…)	N
D-M9⊡V	5	20	35	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6···) Note 3)	35 + 35 (n - 2) (n = 2, 3, 4, 5…)	
D-A9⊡V	5	15	25	$15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6···) <sup>Note 3)</sup>	25 + 35 (n - 2) (n = 2, 3, 4, 5…)	
D-M9□WV D-M9□AV	10	20	35	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6···) Note 3)	35 + 35 (n - 2) (n = 2, 3, 4, 5…)	
D-C7⊡ D-C80	5	20	60	$20 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6···) Note 3)	60 + 45 (n - 2) (n = 2, 3, 4, 5…)	
D-H7□ D-H7□W D-H7BA D-H7NF	10	25	70	$25 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6) <sup>Note 3)</sup>	70 + 45 (n - 2) (n = 2, 3, 4, 5…)	F
D-C73C D-C80C D-H7C	5	30	80	$30 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)	80 + 50 (n - 2) (n = 2, 3, 4, 5…)	
D-B5 D-B64 D-G5 D-K59	5	25	70	$25 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6) <sup>Note 3)</sup>	70 + 50 (n - 2) (n = 2, 3, 4, 5…)	N
D-B59W	10	30	75	$30 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6) Note 3)	75 + 50 (n - 2) (n = 2, 3, 4, 5…)	

# **Minimum Auto Switch Mounting Stroke**

Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

Note 1) Auto switch mounting

	With 2 aut	o switches
	Different surfaces	Same surface
Auto switch model		
	The proper auto switch mounting position is 3.5 mm inward from the switchholder edge.	The auto switch is mounted by slightly displacing it in a direction (cylinder tubecircumferential exterior) so that the auto switch and lead wire do not interfere witheach other.
D-M9□ D-M9□W	Less than 20 stroke Note2)	Less than 55 stroke Note2)
D-M9□A	Less than 20 stroke Note2)	Less than 60 stroke Note2)
D-A9□	_	Less than 50 stroke Note2)

Note 2) Minimum stroke for mounting auto switches in the other mounting types mentioned in note 1.

D-□ -X□

# CLG1 Series Auto Switch Mounting 2

# **Operating range**

				(mm)		
Auto switch model	Bore size (mm)					
Auto Switch model	20	25	32	40		
D-A9	7	6	8	8		
D-M9□ D-M9□W	4.5	5	4.5	5.5		
D-C7□/C-80 D-C73C/C-80C	8	10	9	10		
D-B5□/B64	8	10	9	10		
D-B59W	13	13	14	14		
D-H7⊟/H7⊟W D-H7BA/H7NF	4	4	4.5	5		
D-H7C	7	8.5	9	10		
D-G5NT	4	4	4.5	5		

\* Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approximately ±30% dispersion).

It may vary substantially depending on an ambient environment.

# Auto Switch Mounting Bracket: Part No.

Auto switch	Bore size (mm)						
model	20	25	32	40			
D-M9□(V) D-M9□W(V) D-A9□(V)	Note 1) BMA3-020	Note 1) BMA3-025	Note 1) BMA3-032	Note 1) BMA3-040			
D-M9□A(V)	Note 2) BMA3-020S	Note 2) BMA3-025S	Note 2) BMA3-032S	Note 2) BMA3-040S			
D-C7□/C80 D-C73C/C80C D-H7□ D-H7□W D-H7NF D-H7NF D-H7BA	BMA2-020A	BMA2-025A	BMA2-032A	BMA2-040A			
D-B5□/B64 D-B59W D-G5□/K59 D-G5□W/K59W D-G5BA/G59F D-G5NT	BA-01	BA-02	BA-32	BA-04			

Note 1) Set part number which includes the auto switch mounting band (BMA2-□□□A) and the holder kit (BJ5-1/Switch bracket: Transparent).

Since the switch bracket (made from nylon) are affected in an environment where alcohol, chloroform, methylamines, hydrochloric acid or sulfuric acid is splashed over, so it cannot be used. Please consult SMC regarding other chemicals.

Note 2) Set part number which includes the auto switch mounting band (BMA2-□□AS/ Stainless steel screw) and the holder kit (BJ4-1/Switch bracket: White).

Note 3) For the D-M9□A (V) type auto switch, do not install the switch bracket on the indicator light.

#### [Mounting screw set made of stainless steel]

The following set of mounting screws made of stainless steel is available. Use it inaccordance with the operating environment. (Please order the auto switch


mounting bracket separately, since it is not included.)

BBA3: For D-B5/B6/G5/K5 types

BBA4: For D-C7/C80/H7 types

Note 4) Refer to page 1225 for the details of BBA3.

D-H7BA/G5BA auto switches are set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, BBA3 or BBA4 is attached.

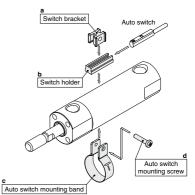

(1) BJ□-1 is a set of "a" and "b". BJ4-1 (Switch bracket: White)

- BJ5-1 (Switch bracket: Transparent)
- (2) BMA2-□□□A(S) is a set of "c" and "d". Band (c) is mounted so that the projected part is on the internal side (contact side with the tube).



							st: Stroke (mm)	
Mounting bracket	В	asic, Foot, Flange,	Clevis			Trunnion		
No. of auto switches	1 (Rod cover side)	2 (Different surface	es) (Same surfa	ce) (Rod cov	1 ver side)	2 (Different surfaces	2 (Same surface)	
Switch mounting surface	Port side	Port side	Port side					CLJ2
								CLM2
								CLG1
Switch model								CL1
D-A9 D-M9 D-M9	10 st or more	15 to 44 st	45 st or mo	re 10 st o	or more	15 to 44 st	45 st or more	MLGC
D-C7□/C80	10 st or more	15 to 49 st	50 st or mo	re 10 st o	r more	15 to 49 st	50 st or more	CNG
D-H7⊡/H7⊡W D-H7BA/H7NF	10 st or more	15 to 59 st	60 st or mo	re 10 st o	r more	15 to 59 st	60 st or more	MNB
D-C73C/C80C/H7C	10 st or more	15 to 64 st	65 st or mo	re 10 st o	r more	15 to 64 st	65 st or more	
D-B5□/B64/G5NT	10 st or more	15 to 74 st	75 st or mo	re 10 st o	r more	15 to 74 st	75 st or more	CNA2
D-B59W	15 st or more	20 to 74 st	75 st or mo	re 15 st o	r more	20 to 74 st	75 st or more	
							_	CNS
Besides the model Refer to pages 11				switches are	e applica	able.		CLS
Auto switch type	Part	· · ·	trical entry (Fetching direction)	Features	Арр	licable bore size	1	CLQ
Reed	D-B53, C73, C7	76		_			i	
Reed	D-C80			Without indicator	light		Ī	RLQ

# Cylinder Bracket/Stroke: Auto Switch Mounting Surface

Auto switch type	Part no. D-B53, C73, C76	Electrical entry (Fetching direction)	Features	Applicable bore size	
Reed	D-C80	-	Without indicator light		
Solid state	D-H7A1, H7A2, H7B	Grommet (In-line)	_	ø20 to ø40	
	D-H7NW, H7PW, H7BW		Diagnostic indication (2-color indicator)		
	D-G5NT		With timer		


MLU Mlgp Ml1C

# Lock-up Cylinder **Double Acting, Single Rod** CL1 Series

# ø40, ø50, ø63, ø80, ø100, ø125, ø140, ø160

The CL1 series lock-up cylinder is a self-locking type that contains a ring that is tilted by a spring force, which is further tilted by the load that is applied to the cylinder, thus locking the piston rod. This cylinder is suitable for intermediate stops, emergency stops, or for drop prevention.

How to Order

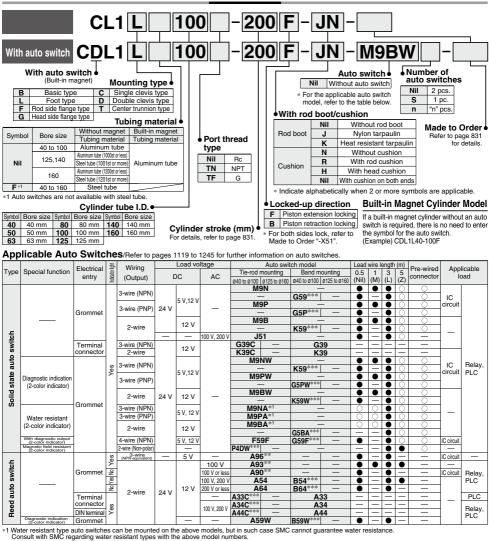

\* Lead wire length symbols: 0.5 m ......Nil (Example) M9NW 1 m .....M

\* Solid state auto switches marked with "O" are produced upon receipt of order. \*\* D-A9□/A9□V cannot be mounted on ø50. \*\*\* The following auto switches cannot be mounted on ø125 to ø160. D-G39C, K39C, Å3□C, Å44C, G5□, K59, G5□W, K59W, G5BA, G59F, G5NT, B5□, B64, B59W, P4DW.

(Example) M9NWM (Example) M9NWL 3 m ······ L (Example) M9NWL 5 m ······ Z (Example) M9NWZ

\* Since there are other applicable auto switches than listed, refer to page 850 for details.

For details about auto switches with pre-wired connector, refer to pages 1192 and 1193.
\* D-A9□/M9□/M9□A auto switches are shipped together (not assembled). (Only auto switch mounting brackets for the models listed above are assembled at the time of shipment.)

830



# Lock-up Cylinder **CL1 Series**



Bore size (mm)	ø40 to ø100	ø125 to ø160			
Proof pressure	1.5 MPa	1.57 MPa			
Maximum operating pressure	1.0 MPa	0.97 MPa			
Minimum operating pressure	0.08 MPa				
Piston speed	50 to 200 mm/s*				
Ambient and fluid temperature	Without auto switch -10 to 70°C With auto switch -10 to 60°C (No freezing)	Without auto switch 0 to 70°C With auto switch 0 to 60°C (No freezing)			
Lubrication	Not required	d (Non-lube)			
Cushion	Air cu	Ishion			
Stroke length tolerance	Up to 250+1.0. 251 to 1000+1.4. 1	001 to 1500 <sup>+1.8</sup> 1501 to 1600 <sup>+2.2</sup>			
Mounting	Basic type, Axial foot type, Rod side flange type Head side flange type, Single clevis type Double clevis type, Center trunnion type				
	Double clevis type,				

\* Make sure to operate the cylinder in such a way that the piston speed does not exceed 200 mm/s during locking.

The maximum speed of 500 mm/s can be accommodated if the piston is to be locked in the stationary state for the purpose of drop prevention.

#### Max. Load and Lock Holding Force (Max. static load)

Bor	e size (mm)	40	50	63	80	100	125	140	160
Max. load	Horizontal Mounting	588	981	1470	2450	3820	6010	7540	9850
(N)	Vertical Mounting	294	490	735	1230	1910	3000	3770	4920
Holding force	e (Max. static load) (N)*	1230	1920	3060	4930	7700	12100	15100	19700

The holding force (max. static load) indicates the maximum capability to hold a static load without loads, vibration or impact. This does not indicate a load that can be held in ordinary conditions. The maximum load is limited depending on the mounting orientation.
Defense the Cleance Constitute Depending on the mounting orientation.

Refer to the CL series Specific Product Precautions 1 on page 786 for selecting cylinders.

Refer to the minimum auto switch mounting stroke (pages 844 and 846) for those with an auto switch.

#### Cylinder Stroke (ø40 to ø100)/

			- 11
Bore size (mm)	Standard stroke (mm)	Long stroke (L, F only)	Ľ
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	800	
50, 63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	1200	
80, 100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700	ø80: 1400, ø100: 1500	Ľ

Note 1) Strokes other than listed above are produced upon receipt of order. Spacers are not used for intermediate strokes.

Note 2) Long strokes are applicable for the axial foot and rod side flange types. If other mounting brackets are used or the length exceeds the long stroke limit, the maximum stroke should be determined based on the stroke selection table (technical data).

#### Cylinder Stroke (ø125 to ø160)

Tube material	Aluminum alloy	Aluminum alloy Carbon steel piping			
Bore size (mm)			Foot type, Rod side flange type		
125, 140 Up to 1000		Up to 1000	Up to 1600		
160 Up to 1200		Up to 1200	Up to 1600		

#### Cylinder Stroke/ Cylinder with Auto Switch (Built-in magnet) Befer to the minimum auto switch mounting stroke (pages 844 and 846) for those with an auto switch. Unit: mm

Bore size (mm)	Basic type, Head side flange type, Single clevis type,Double clevis type, Center trunnion type,	Foot type, Rod side flange type
125, 140 Up to 1000		Up to 1400
160	Up to 1200	Up to 1400







# -X51 Both-directions lock-up cylinder Made to Order Specifications

Click here for details				
Symbol	Symbol Specifications			
-XA🗆	Change of rod end shape			
-XC3 Special port location				
-XC14	Change of trunnion bracket mounting position (ø40 to 100 only)			

#### Lock-up Unit Specifications

Lock operation	Spring lock
Lock-up	0.2 MPa or more
release pressure	(at no load)
Lock-up start pressure	0.05 MPa or less
Lock-up	One direction
direction	(Lock direction can be changed.)

#### **Stopping Accuracy**

(Not including tolerance of control system)

Distan speed	Bore siz	ze (mm)
Piston speed	40 to 100	125 to 160
50 mm/s	± 0.6 mm	±1mm
100 mm/s	± 1.2 mm	± 2 mm
200 mm/s	± 2.3 mm	± 3 mm

#### Lock-up Unit Model

Applicable bore size (mm)	40	50	63	80	100
Lock-up unit part no.	CL-40	CL-50	CL-63	CL-80	CL-100

Refer to pages 844 to 850 for cylinders with auto switches.

- Minimum auto switch mounting stroke
- Proper auto switch mounting position (detection at stroke end) and mounting height
- Operating range
- · Switch mounting bracket: Part no.

D-

-X

Unit: mm

# CL1 Series

#### Accessory

	Mounting	Basic type	Foot type		Head side flange type	Single clevis type	Double clevis type	Center trunnion type
Standard	Rod end nut *	•	٠	•	•	٠	•	•
products	Clevis pin	_	-	_	—	-	•	
	Single knuckle joint	•	٠	٠	•	٠	٠	
Option	Double knuckle joint (with pin)	•	•	•	•	٠	•	•
	Rod boot	•	•	•	•	٠	•	•

\* ø125 to ø160: Option

#### Weight

Weig	ght								(kg)
	Tubing Material				Alumir	num tube			
Bore s	size (mm)	40	50	63	80	100	125	140	160
Locke	d-up unit mass	0.76	1.23	2.05	3.04	4.40	16.93	21.46	32.31
	Basic type	1.66	2.55	4.12	6.56	9.49	30.88	38.25	55.72
	Foot type	1.83	2.75	4.42	7.36	10.43	32.21	40.83	59.09
Basic weight	Rod side flange type	2.06	3.15	5.08	8.40	11.81	33.65	43.28	60.95
N C	Head side flange type	2.09	3.29	5.16	8.51	12.06	34.35	44.32	62.98
Basi	Single clevis type	1.93	3.00	4.88	7.94	11.80	36.02	45.46	65.45
ш	Double clevis type	1.92	2.98	4.90	7.94	11.82	35.83	45.17	64.28
	Trunnion type	2.26	3.30	5.47	8.90	13.02	35.77	46.09	63.86
Additiona	Additional weight per each 100 mm of stroke		0.56	0.74	1.04	1.30	1.77	1.90	2.39
Accessory bracket	Single knuckle	0.23	0.26	0.26	0.66	0.83	0.91	1.16	1.56
Accet	Double knuckle (with pin)	0.37	0.43	0.43	0.87	1.27	1.37	1.81	2.48

Calculation: (Example) CL1L125-500F

**Rod Boot Material** 

Rod boot material

Nylon tarpaulin

Heat resistant tarpaulin

\* Maximum ambient temperature for the rod boot itself.

Max. ambient temperature

70°C

110°C\*

Symbol

J

κ

- Basic weight ...... 32.21 (ø125, Foot type) Additional weight ···· 1.77/100 st
- 32.21 + 1.77/100 x 500 = 41.06 kg \* Add the lock-up unit weight for ø40 to ø100 and ø125 to ø160 steel tubes to the cylinder unit
- weight of CA2 and CS1 series listed in Best Pneumatics No. 2-1.

#### Mounting Bracket Part No.


Bore siz	e (mm)	40	50	63	80	100	125	140	160
Foot type *	Rod side	CA-L04	CA-L05	CA-L06	CA-L08	CA-L10	CS1-L12	CS1-L14	CS1-L16
Fool type	Head side	CA1-L04	CA1-L05	CA1-L06	CA1-L08	CA1-L10	C31-L12	CS1-L14	C31-L16
Rod side flar	nge type **	CA-F04	CA-F05	CA-F06	CA-F08	CA-F10	CS1-FL12	CS1-FL14	CS1-FL16
Head side fla	ange type	CA1-F04	CA1-F05	CA1-F06	CA1-F08	CA1-F10	CS1-F12	CS1-F14	CS1-F16
Single clevis		CA1-C04	CA1-C05	CA1-C06	CA1-C08	CA1-C10	CS1-C12	CS1-C14	CS1-C16
Double clevis	S ***	CA1-D04	CA1-D05	CA1-D06	CA1-D08	CA1-D10	CS1-D12	CS1-D14	CS1-D16

\* When ordering foot bracket for 1 cylinder, order 1 foot bracket each for the rod side and the head side for ø40 to ø100 and 2 foot brackets for ø125 to ø160.

\*\* The ø125 to ø160 rod side flange types use the long stroke flanges of the CS1 series.

\*\*\* Clevis pin, plain washer and cotter pin are shipped together with double clevis type.

### **Construction Principle**

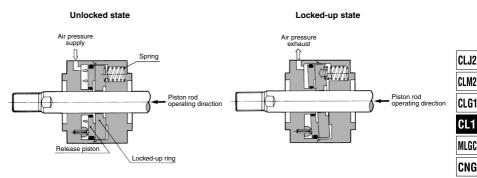


# $\Delta$ Caution Caution on Changing the Lock-up Direction

#### ø40 to ø100


The lock-up is unidirectional. However, the lock-up direction can be changed easily. To change the direction, pay particular attention to the following steps:

Loosening the tie-rods for the purpose of changing the direction could also loosen the nuts on the cylinder side. Therefore, before assembling the unit, make sure to verify that the nuts on the cylinder are not loose. Retighten the nuts if they are loose, and while turning the piston rod, apply a low pressure of 0.08 MPa to make sure that it operates smoothly in both the extending and retracting directions.

1. Loosen the tie-rod nuts and pull out the four tie-rods.




2. Open the rubber cap and screw in the unlocking bolt, which is provided as an accessory part. At this time, apply air pressure of 0.2 MPa to 0.3 MPa to disengage the lock and insert the bolt. (The operation to follow can be performed properly and easily with the application of air pressure.) After verifying that the bolt has been inserted properly, pull out the unit from the rod. Then, loosen the three screws in the scraper plate and the scraper. Install the scraper and the presser plate, in that order, on the opposite side.



# A Caution

When the lock-up unit is not secured by the tie-rods, the air pressure applied to the lock-up port should be between 0.2 MPa and 0.3 MPa. Never supply a higher air pressure as it could lead to equipment damage.


- Turn the unit to the opposite end so that the end without the scraper is facing the cylinder rod cover. Then, securely insert the unit into the end boss portion of the rod cover.
- 4. Install four tie-rods, with their shorter threaded portion oriented towards the rod cover, and tighten them with uniform torque. Until the installation and adjustment have been completed, never pull out the unlocking bolt (or release the air pressure).




The processes described above complete the changing of the locked-up direction. Before using the cylinder, make sure that the lock-up operates properly.

#### ø125 to ø160


1. Loosen the tie-rod nuts and pull out the four tie-rods.



2. Apply air pressure of 0.2 MPa to 0.3 MPa to disengage the lock and pull out the lock-up unit from the piston rod.




3. Remove the retainer plate from the lock-up unit and install the retainer plate on the opposite end. Reapply the air pressure, and with the end on which the retainer plate had, until now, been facing towards the cylinder, insert the locked-up unit into the piston rod and fit it into the end boss portion of the rod cover.



 Install the four tie-rods, with their shorter threaded portion oriented towards the rod cover, and tighten them with uniform torque.

Maintain the application of air pressure until the installation and adjustment have been completed, and never actuate the lock in the meantime.





MNB

CNA2

CNS

CLS

CLQ

RLO

MI U

MLGP

ML1C

# A Warning

- 1. Do not unlock manually until the safety is confirmed.
- 2. Perform the unlocking after the residual pressure inside the system has been exhausted.
- 3. Take measures to prevent the load from dropping when unlocking is performed.
- Perform work with the load in its lowest position.
- Take measures for drop prevention by strut, etc.

#### Manual Lock Release (ø40 to ø100)

To manually disengage the lock, perform the following steps:

- 1. Open the rubber cap.
- Apply 0.2 MPa to 0.3 MPa of air pressure to the locking port, and bring the tilted ring upright.
- 3. Screw a bolt of an appropriate length into the ring tap.


The bolt size is M5 for ø40 and ø50, and M6 for ø63, ø80, and ø100.

#### **▲** Caution

During installation adjustment, perform the operation by applying air pressure only to the lock-up port.

#### **∆** Caution

The lock is manually disengaged at the time the cylinder is shipped from the factory. Because the lock will not operate in this state, make sure to change it to the locked state before operation, after having adjusted the axial center for installation. (Only ø40 to ø100)



ø40 to ø100 (On cylinders ø125 to ø160, the lock cannot be disengaged manually.)

# Caution Recommended Pneumatic Circuit/Caution on Handling

For Selection/recommended pneumatic circuit, stopping accuracy and caution on handling, refer to pages 786 to 789.

citorine commended priedmane circuit, stopping accuracy and caution on nationing, relet to pages 700

#### ▲ Caution

#### Stopping Accuracy

- Load fluctuations during the reciprocal movement of the piston could cause the piston speed to change. A change in the piston speed could greatly increase the variance in the piston's stopping position. Therefore, take appropriate measures so that the piston speed becomes constant during the piston's reciprocal movement, particularly just before stopping.
- 2. During a cushioning stroke, or when the piston is in the acceleration region following the start of its travel, there is a large change in speed. Thus, the variance in the stopping position will also be large. Therefore, when effecting a step movement in which the stroke from the start of the operation to the next position is short, be aware of the possibility of being unable to attain the accuracy.
- 3. Precautions regarding lock-up after the piston has been stopped with an external stopper:

To apply the lock-up after the piston has been stopped by an external stopper other than the locked-up mechanism, including stoppage by the stroke end of the cylinder, be aware of the matters described below.

Due to the nature of the lock-up mechanism, there is an axial play of about 0.5 to 1.0 mm. Furthermore, due to pipe routing conditions, if it takes longer for the air to discharge through the lock-up port than for the balance pressure to stabilize, causing a delay in locking, the piston rod will move for an amount that is equivalent to the "play + delay".

#### Piston speed over 200 mm/s (When locking)

 Immediately before a lock stop, drop the piston speed to 200 mm/s or lower by switching the speed controller (to the bypass circuit). Then, operate the lock-up.

# ▲ Caution

### Caution on Handling

#### 1. Flushing

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove cutting chip, cutting oil and other debris from inside the pipe.

#### 2. The load on the piston rod

Use the cylinder in the state in which the load to the piston rod is always applied in the axial direction. This must be more strictly adhered to than with ordinary air cylinders. Furthermore, use a guide to control the movement of the load so as not to cause chatter or twist.

#### 3. A rotational force against the piston rod

Avoid applying a rotational force against the piston rod. In particular, the application of a rotational force must be prevented when in a lock-up state.

4. Protecting the sliding portion of the rod

Use caution that no scratch or dent will be given to the slide part of the guide rod, as this could damage the seals and lead to leaks or faulty lock-up.

#### 5. Lubrication

It is not necessary to lubricate the CL series because it is the non-lube type. Never lubricate it because doing so will cause faulty lock-up.

# A Caution

#### **Recommended Pneumatic Circuit**


For recommended pneumatic circuits, refer to page 788.

1. Operating the pneumatic circuit


Instead of the current reciprocal air cylinder circuit, use an pneumatic circuit, such as the recommended circuit, in which measures are taken to prevent the piston from lurching after the lock-up has been disengaged.

#### 2. Lock-up direction

The lock-up is unidirectional. The locking direction is in accordance with the position of the lock-up port, as shown in the figure below.



Extension locking



#### ø125 to ø160

For cylinders  $\emptyset$ 40 to  $\emptyset$ 100, verify the m-portion that is stamped on the cap of the lock.


 Maximum speed and maximum load Never lock up a cylinder that involves a kinetic energy that exceeds the maximum speed or the maximum load indicated in the specifications.

**SMC** 


### Construction

#### CL1ø40 to ø100

13 14

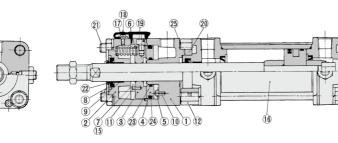

#### CL1ø125 to ø160





#### Component Parts: CL1ø40 to ø100

No.	Description	Material	Note
1	Body	Aluminum alloy	Black painted
2	Cover	Aluminum alloy	Black painted
3	Locked-up ring	Carbon steel	Heat treated
4	Release piston	General rolled steel	Zinc chromated
5	Pivot	Carbon steel	Heat treated, zinc chromated
6	Spring	Steel wire	Zinc chromated
7	Stopper	Urethane	
8	Retaining plate	Rolled steel	Black zinc chromated
9	Bushing	Bearing alloy	
10	Spring pin	Carbon steel	
11	Spring pin for non-rotating	Carbon steel	
12	Wing nut	Rolled steel	
13	Unit fixing hex. socket head cap screw	Chromium molybdenum steel	
14	Retainer machine screw	Rolled steel	
15	Hexagon socket countersunk head screw	Chromium molybdenum steel	
16	Non lube air cylinder		CA1□N series
17	Сар	Nylon	
18	Cap screw	Rolled steel	
19	Release bolt	Chromium molybdenum steel	
20	Spacer	Aluminum alloy	Black painted
21	Unit holding tie-rod	Carbon steel	Chromated
22	Scraper	NBR	
23	O-ring	NBR	
24	O-ring	NBR	
25	Rod seal	NBR	

#### **Replacement Parts: Seal Kit**

Bore size (mm)	Kit no.	Bore size (mm)	Kit no.
40	CL40-PS	100	CL100-PS
50	CL50-PS	125	CL125-PS
63	CL63-PS	140	CL140-PS
80	CL80-PS	160	CL160-PS

\* Since the lock section for CL1 series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.

\* Seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g, ø125 to ø160: 40 g).

Order with the following part number when only the grease pack is needed. Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Component Parts: CL1ø125 to ø160

001	inponent i arts.	021012510010	
No.	Description	Material	Note
1	Body	Rolled steel plate	Black painted
2	Cover	Rolled steel plate	Black painted
3	Locked-up ring	Carbon steel	Heat treated
4	Release piston	Rolled steel plate	Zinc chromated
5	Pivot	Carbon steel	Heat treated
6	Spring	Steel wire	Zinc chromated
7	Stopper	Urethane	
8	Retaining plate	Cast iron	Black painted
9	Bushing	Bearing alloy	_
10	Spring pin	Carbon steel	
11	Spring pin	Carbon steel	
12	Wing nut	Rolled steel	
13	Unit fixing hex. socket head cap screw	Chromium molybdenum steel	
14	Hex. socket head cap screw	Chromium molybdenum steel	
15	Hexagon socket countersunk head screw	Chromium molybdenum steel	
16	Non lube air cylinder	—	Serie CS1□N
17	Brake tube	Carbon steel tube	Inside: Hard chrome plated
18	Sleeve	Rolled steel	Zinc chromated
19	Unit holding tie-rod	Carbon steel	Chromated
20	Spacer	Rolled steel	Black painted
21	Retaining plate	Cast iron	Black painted
22	Element	Sintered metallic BC	_
23	Wiper ring	NBR	
24	Retaining plate gasket	NBR	
25	O-ring	NBR	
26	O-ring	NBR	
27	Rod seal	NBR	



ML1C


	<b>D</b> -□
i	
	-X□

# CL1 Series

# Basic Type (B)

#### ø40 to ø100


@Lock-up at piston forward @Lock-up at piston backward

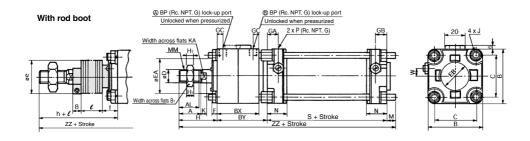

ø125 to ø160

ã

BP (Rc. NPT. G) lock-up port, Unlocked when pressurized With rod boot BP (Rc. NPT. G) lock-up port GB GA 2 x P (Rc. NPT. G) ₽₽ ۶E e, Ð ВX N. Ν S + Stroke м h + 6 BY ZZ + Stroke ZZ + ℓ + Stroke



																								(mm)
Bore size	Str	oke ra	nge (mi	m)	Α	AL	в	B1	вх	BY	BP	С	D	EA	EB	F	FA	GA	GB	GC	Hı		к	КА
(mm)	Without	rod boot	With ro	d boot	~	AL	Б	Di	DA	ы	DF			LA	LD		TA.	GA	GD	ac	m	J	n	NA
40	Up to	500	20 to	500	30	27	60	22	59	69	1⁄4	44	16	40	32	6.5	Ι	15	15	11	8	M8 x 1.25	6	14
50	Up to	600	20 to	600	35	32	70	27	67	78	1⁄4	52	20	50	40	6.0		17	17	11	11	M8 x 1.25	7	18
63	Up to	600	20 to	600	35	32	86	27	73	84	1⁄4	64	20	55	40	6.0	_	17	17	11	11	M10 x 1.25	7	18
80	Up to	750	20 to	750	40	37	102	32	77	92	1⁄4	78	25	65	52	8.0	-	21	21	11	13	M12 x 1.75	11	22
100	Up to	750	20 to	750	40	37	116	41	85	100	1⁄4	92	30	80	52	8.0	_	21	21	11	16	M12 x 1.75	11	26
125	Up to	1000	30 to 1	1000	50	47	145	_	112.5	141.5	1/2	115	36	90	—	43	14	16	16	16	—	M14 x 1.5	15	31
140	Up to	1000	30 to 1	1000	50	47	161	-	121	150	1/2	128	36	90	-	43	14	16	16	16	-	M14 x 1.5	15	31
160	Up to	1200	30 to 1	1200	56	53	182	-	133	167	3⁄4	144	40	90	_	43	14	18.5	18.5	18.5	—	M16 x 1.5	17	36
								14.0-1			-						N	lote)	In ine	alling	an ai	ir cylinder if	a hold	muet
Bore size	м	M	м	N	Р	s	w		ut rod bo				th rod	boot		Note) In installing an air cylinder, if a hol be made to accommodate the rod p								
(mm)					-	-		н	ZZ	<u> e</u>		1 1	h	e		ZZ								
40	11	M14	x 1.5	27	1⁄4	84	8	51	21	5 3	6 16	6.5 5	i9   '	1/4 stro	ke	223						chine a hole t er diameter "		larger
50	11	M18	x 1.5	30	3⁄8	90	0	58	23	7 4	5 16	6.0 E	6	1/4 stro	ke	245			mant	ne bo	oi oui	ei ulainelei	<i>ы</i> е.	
63	14	M18	x 1.5	31	3⁄8	98	0	58	254	4 4	5 16	6.0 6	6	1/4 stro	ke	262	2							

1/4 stroke

1/4 stroke

1/5 stroke

1/5 stroke

40 141 1/5 stroke 444.5

305

324

399.5

408

110 376.5 75 40 133

\_

110 385

120 423.5

75 40 133

75

80

100

125

140

160

M26 x 1.5

M30 x 1.5

M30 x 1.5

30.5 M36 x 1.5 39

M22 x 1.5 37

40 1/2 126 0 72 315 60 18.0 81

35 1/2 98

35 1/2 98

1/2 116 0 71 296 60 18.0 80

3⁄4 106

17

17

27


27

# Axial Foot Type (L)

160

Up to 1400 30 to 1400

56 53 182

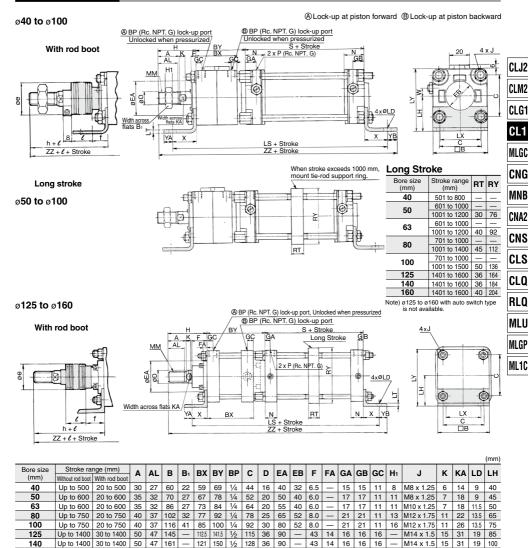

Bore size	LS	1.7	LX	LY	мм	N	Р	s	w	x	YA	VD	Without	rod boot		1	With	rod boot	
(mm)	LS			LI		IN	-	3	vv	^	IA	тв	н	ZZ	е	f	h	l	ZZ
40	207	3.2	42	70	M14 x 1.5	27	1⁄4	84	8	27	13	13	51	244	36	16.5	59	1/4 stroke	252
50	222	3.2	50	80	M18 x 1.5	30	3⁄8	90	0	27	13	13	58	266	45	16.0	66	1/4 stroke	274
63	250	3.2	59	93	M18 x 1.5	31	3⁄8	98	0	34	16	16	58	290	45	16.0	66	1/4 stroke	298
80	296	4.5	76	116	M22 x 1.5	37	1/2	116	0	44	21	16	71	339	60	18.0	80	1/4 stroke	348
100	312	6.0	92	133	M26 x 1.5	40	1/2	126	0	43	22	17	72	358	60	18.0	81	1/4 stroke	367
125	329.5	8	100	157.5	M30 x 1.5	35	1/2	98	—	45	20	20	110	414.5	75	40	133	1/5 stroke	437.5
140	338	9	112	180.5	M30 x 1.5	35	1/2	98	-	45	30	30	110	433	75	40	133	1/5 stroke	456
160	373	9	118	197	M36 x 1.5	39	3⁄4	106	-	50	25	25	120	468	75	40	141	1/5 stroke	489

133 167 3⁄4 144 40 90



43 14 18.5 18.5 18.5

M16 x 1.5 17 36 19 106


# CL1 Series

# Head Side Flange Type (G)


#### ø40 to ø100

ALock-up at piston forward BLock-up at piston backward

(mm)

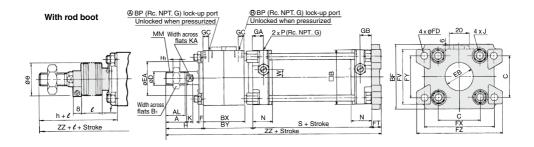


#### ø125 to ø160

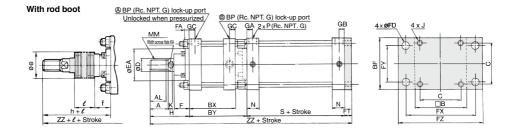


																											(mm)
Bore size (mm)	Stroke rat Without rod boot			Α	AL	в	B1	BF	вР	вх	ВΥ	с	D	EA	ЕΒ	F	FA	FD	FT	FX	FY	FZ	F۷	GA	GВ	GC	H1
40	Up to 500	20 to	o 500	30	27	60	22	71	1⁄4	59	69	44	16	40	32	6.5	_	9.0	12	80	42	100	60	15	15	11	8
50	Up to 600	20 to	000 c	35	32	70	27	81	1⁄4	67	78	52	20	50	40	6.0	Ι	9.0	12	90	50	110	70	17	17	11	11
63	Up to 600	20 to	o 600	35	32	86	27	101	1⁄4	73	84	64	20	55	40	6.0		11.5	15	105	59	130	86	17	17	11	11
80	Up to 750	20 to	o 750	40	37	102	32	119	1⁄4	77	92	78	25	65	52	8.0	—	13.5	18	130	76	160	102	21	21	11	13
100	Up to 750	20 to	o 750	40	37	116	41	133	1⁄4	85	100	92	30	80	52	8.0	Ι	13.5	18	150	92	180	116	21	21	11	16
125	Up to 1000	30 to	1000	50	47	145	_	145	1/2	112.5	141.5	115	36	90	—	43	14	19	14	190	100	230		16	16	16	—
140	Up to 1000	30 to	1000	50	47	161	—	160	1/2	121	150	128	36	90	-	43	14	19	20	212	112	255		16	16	16	—
160	Up to 1200			56	53	182	—	180	3⁄4	133	167	144	40	90	—	43	14	19	20	236	118	275	—	18.5	18.5	18.5	—
Bore size										. Wi	thout ro	d boot		N	/ith ro	d boo	ot										
(mm)	J	ĸ	KA	IV	IM	N	F	<u>י</u> ן י	5 1		H []	zz	e	f	h	e	!	ZZ	-								
40	M8 x 1.25	6	14	M14	x 1.5	5 2	7 1/	4 8	4 8	B 5	51	216	36	16.5	59	1/4 st	roke	224	-								
50	M8 x 1.25	7	18	M18	x 1.5	5 3	) 3/	89	0 0	0 5	58	238	45	16.0	66	1/4 st	roke	246									
63	M10 x 1.25	7	18	M18	x 1.5	5 3	1 3/	89	8 (	0 5	58 3	255	45	16.0	66	1/4 st	roke	263	_								
80	M12 x 1.75	11	22	M22	x 1.5	5 3	7 1/	2 11	16 (	0 7	71 3	297	60	18.0	80	1/4 st	roke	306									
100	M12 x 1.75	11	26	M26	x 1.5	5 4	) 1/	2 12	26 (	0 7	72 3	316	60	18.0	81	1⁄4 st	roke	325									
125	M14 x 1.5	15	31	M30	x 1.5	5 3	5 1/	29	8 -	- 1	10 3	363.5	75	40		1⁄5 st											
140	M14 x 1.5	15	31	M30	x 1.5	5 3	5 1/	29	8 -	- 1	10	378	75	40	133	1⁄5 st	roke	401	_								
160	M16 x 1.5	17	36	Mag	x 1.5	5 3	3 3	6 10	)6 –	- 1	20	413	75	40	141	1⁄5 st		434									

# Rod Side Flange Type (F)

#### ø40 to ø100

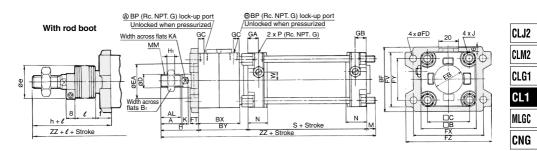

#### ø125 to ø160

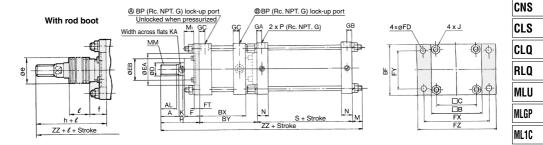

																										(mm)
Bore size (mm)		roke r			_	Long stroke ra (mm)	nge	A	AL	в	B1	BF	вр	вх	вү	с	D	EA	EE	3   F	=   F	DF	т	FX	FY	FZ
40		o 500	_	to 500	_	501 to 800		30	27	60	22	71	1⁄4	59	69	44	16	40	32	2 -	- 9	0 1	2	80	42	100
50	Upt	o 600	20	to 600	)	601 to 1000	)	35	32	70	27	81	1⁄4	67	78	52	20	50	40	) -	- 9	0 1	2	90	50	110
63	Up t	o 600	20	to 600	)	601 to 1000	)	35	32	86	27	101	1⁄4	73	84	64	20	55	40	) _	- 11	.5 1	5	105	59	130
80	Up t	o 750	20	to 750	)	751 to 1000	)	40	37	102	32	119	1⁄4	77	92	78	25	65	52	2 -	- 13	.5 1	B	130	76	160
100	Up t	o 750	20	to 750	)	751 to 1000	751 to 1000		37	116	41	133	1⁄4	85	100	92	30	80	52	2 -	- 13	.5 1	B	150	92	180
125	Up to	1400	30	to 140	00			50	47	145	-	145	1/2	112.5	141.5	115	36	90	59	4	3 1	9 1	4	190	100	230
140		1400		to 140			50	47	161	—	160	1/2	121	150	128	36	90	59	4	3 1	9 2	0	212	112	255	
160	Up to	1400	30	to 140	00					182	—	180	3⁄4	133	167	144	40	90	59	4	3 1	9 2	0	236	118	275
Bore size																	Without r	nd hont			With r	od bo	ot			
(mm)	FV	GA	GB	GC	H	J	к	KA	м	M1	М	M	N	P	s	w	H	ZZ	е	f	h		e.	Z	ZZ	
40	60	15	15	11	8	M8 x 1.25	6	14	11	_	M14)	(1.5	27	1/4	84	8	51	215	36	16.5	59	1⁄4 s	trok	æ 2	23	
50	70	17	17	11	11	M8 x 1.25	7	18	11	—	M18>	(1.5	30	3/8	90	0	58	237	45	16.0	66	1/4 s	trok	e 2	245	
63	86	17	17	11	11	M10 x 1.25	7	18	14	-	M18>	(1.5	31	3⁄8	98	0	58	254	45	16.0	66	1⁄4 s	trok	e 2	262	
80	102	21	21	11	13	M12 x 1.75	11	22	17	—	M22 >	(1.5	37	1/2	116	0	71	296	60	18.0	80	1⁄4 s	trok	e 3	805	
100	116	21	21	11	16	M12 x 1.75	11	26	17	-	M26 >	(1.5	40	1/2	126	0	72	315	60	18.0	81	1⁄4 s	trok	ae 3	324	
125	—	16	16	16	—	M14 x 1.5	15	31	30	22	M30 >	(1.5	35	1/2	98	-	110	379.5	75	40	133	1⁄5 s	trok	(e 4	02.5	
140	_	16	16	16	—	M14 x 1.5	15	31	24	19	M30 >	(1.5	35	1/2	98	-	110	382	75	40	133	1⁄5 s	trok	e 4	05	
160	_	18.5	18.5	18.5	_	M16 x 1.5	17	36	26	22	M36 >	(15	39	3/4	106	_	120	419	75	40	141	1/5 s	trok	0 4	40	

D-🗆 -X 🗆


MNB

CNA2


# Rod Side Flange Type (F)/Long Stroke

#### ø50 to ø100

ALock-up at piston forward BLock-up at piston backward

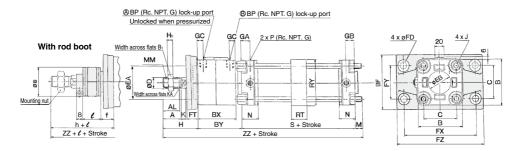

ø125 to ø160

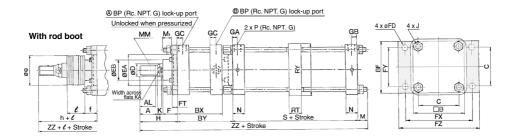

																										(mm)
Bore size (mm)	Stroke range (mm)	Α	AL	в	B1	BF	BP	вх	ВΥ	с	D	EA	EB	F	FD	FT	FX	FY	FZ	GA	GB	GC	Hı	J	к	KA
50	1001 to 1200	35	32	70	27	88	1⁄4	67	78	52	20	50	40	—	9.0	20	120	58	144	17	17	11	11	M8 x 1.25	7	18
63	1001 to 1200	35	32	86	27	105	1⁄4	73	84	64	20	55	40	_	11.5	23	140	64	170	17	17	11	11	M10 x 1.25	7	18
80	1001 to 1400	40	37	102	32	124	1⁄4	77	92	78	25	65	52	_	13.5	28	164	84	198	21	21	11	13	M12 x 1.75	11	22
100	1001 to 1500	40	37	116	41	140	1⁄4	85	100	92	30	80	52	—	13.5	29	180	100	220	21	21	11	16	M12 x 1.75	11	26
125	1401 to 1600	50	47	145	—	145	1/2	112.5	141.5	115	36	90	59	43	19	14	190	100	230	16	16	16	—	M14 x 1.5	15	31
140	1401 to 1600	50	47	161	—	160	1/2	121	150	128	36	90	59	43	19	20	212	112	255	16	16	16	—	M14 x 1.5	15	31
160	1401 to 1600	56	53	182	—	180	3⁄4	133	167	144	40	90	59	43	19	20	236	118	275	18.5	18.5	18.5	—	M16 x 1.5	17	36
Bore size	Stroke range						_					Witho	ut rod bo	ot		With	n rod	boot								
(mm)	(mm)	М	M <sub>1</sub>	l v	лм	N	P	R	r R)	/ s	w	H	ZZ	: e	f	h		l		ZZ						
50	1001 to 1200	6	—	M18	3 x 1.5	30	3/8	30	76	90	0	67	241	45	16.0	) 66	1/4	strok	ke 2	240						
63	1001 to 1200	10	-	M18	3 x 1.5	31	3/8	40	92	98	0	71	263	45	16.0	66	1/4	strok	ke 2	258						
80	1001 to 1400	12	-	M22	2 x 1.5	37	' 1/2	45	112	2 116	0	87	307	60	18.0	80	1/4	strok	ke (	300						
100	1001 to 1500	12	—	M26	6 x 1.5	40	1/2	50	136	6 126	0	89	327	60	18.0	) 81	1/4	strok	ke (	819						
125	1401 to 1600	30	22	M30	) x 1.5	35	1/2	36	164	1 98	-	110	) 379.5	5 75	40	133	3 1/5	strok	ke 4	02.5						
140	1401 to 1600	24	19	M30	) x 1.5	35	1/2	36	184	1 98	-	110	382	75	40	133	3 1/5	strok	ke 4	105						

 140
 1401 to 1600
 24
 19
 M30 x 1.5
 35
 1/2
 36
 184
 98
 -- 110
 382
 75
 40
 133
 1/5 stroke
 405

 160
 1401 to 1600
 26
 22
 M36 x 1.5
 39
 3/4
 45
 204
 106
 -- 120
 419
 75
 40
 141
 1/5 stroke
 440


Note) Bore size ø40 and bore sizes ø125 through ø160 with auto switch are not available.

# Lock-up Cylinder **CL1** Series


# Single Clevis Type (C)

#### ø40 to ø100

OLock-up at piston forward
 OLock-up at piston backward

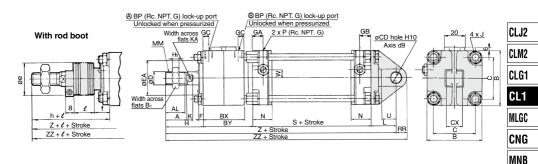

#### ø125 to ø160

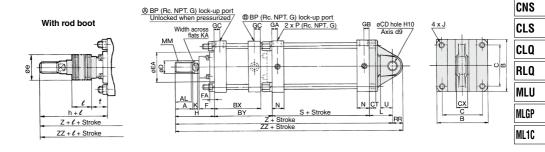

																								(mm)
Bore size (mm)	Stroke rai Without rod boot			A	AL	в	B1	вр	вх	ВΥ	с	с	D	ст	С	x	D	EA	F	FA	GA	GB	GC	Ηı
40	Up to 500	20 to	500	30	27	60	22	1⁄4	59	69	44	1	0	_	15.0	) -0.1	16	40	6.5	_	15	15	11	8
50	Up to 600	20 to	600	35	32	70	27	1⁄4	67	78	52	1	2	-	18.0	) -0.1	20	50	6.0	Ι	17	17	11	11
63	Up to 600	20 to	600	35	32	86	27	1⁄4	73	84	64	1	6	_	25.0		20	55	6.0	Ι	17	17	11	11
80	Up to 700	20 to	700	40	37	102	32	1⁄4	77	92	78	2	0	_	31.5	-0.1	25	65	8.0	_	21	21	11	13
100	Up to 700	20 to	0700	40	37	116	41	1⁄4	85	100	92	2	5	-	35.5	-0.1 -0.3	30	80	8.0	Ι	21	21	11	16
125	Up to 1000	30 to	1000	50	47	145		1/2	112.5	141.5	115	2	5	17	32.0		36	90	43	14	16	16	16	—
140	Up to 1000	30 to	1000	50	47	161	_	1/2	121	150	128	2	8	17	36.0	) -0.1	36	90	43	14	16	16	16	-
160	Up to 1200	30 to	1200	56	53	182		3⁄4	133	167	144	3	2	20	40.0	) -0.1	40	90	43	14	18.5	18.5	18.5	—
Bore size													With	out rod	hoot				With	rod bo	oot			
(mm)	J	ĸ	KA	L	M	М	Ν	P	RR	s	U	w	H	Z	ZZ	е	f	h		l		z	ZZ	
40	M8 x 1.25	6	14	30	M14	x 1.5	27	1/4	10	84	16	8	51	234	244	36	16.5	59	1/4	strol	ke 1	242	252	
50	M8 x 1.25	7	18	35	M18	x 1.5	30	3/8	12	90	19	0	58	261	273	45	16.0	66	1/4	strol	ke 1	269	281	
63	M10 x 1.25	7	18	40	M18	x 1.5	31	3⁄8	16	98	23	0	58	280	296	45	16.0	66	1/4	strol	ke 2	288	304	
80	M12 x 1.75	11	22	48	M22	x 1.5	37	1/2	20	116	28	0	71	327	347	60	18.0	80	1/4	strol	ke (	336	356	
100	M12 x 1.75	11	26	58	M26	x 1.5	40	1/2	25	126	36	_	72	356	381	60	18.0	81	1/4	strol	ke 🗄	365	390	
125	M14 x 1.5	15	31	65	M30	x 1.5	35	1/2	29	98	35	—	110	414.5	443.5	75	40	133	3 1/5	s strol	ke 4	37.5	466.5	
140	M14 x 1.5	15	31	75	M30	x 1.5	35	1/2	32	98	40	—	110	433	465	75	40	133	3 1/5	s strol	ke 4	156	488	
160	M16 x 1.5	17	36	80	M36	4 1 E	39	3/4	36	106	45	_	120	473	509	75	40	141	14	5 strol		194	530	




CNA2


# Double Clevis Type (D)

#### ø40 to ø100

ALock-up at piston forward BLock-up at piston backward

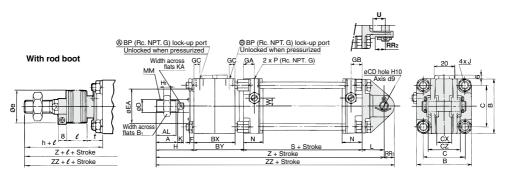

ø125 to ø160

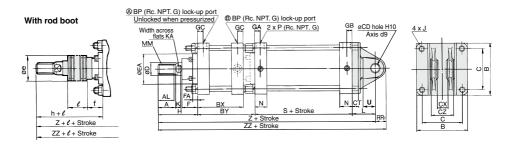


																									(mm)
Bore size (mm)			ange (mm)		A /	AL	в	B1	BP	вх	BY	С	CD		r	сх		cz		D	EA	F	FA	GA	GB
. ,		t rod boo		-					1/				- 10		-	= a ±0	3			10	10				15
40		o 500					60	22	1/4	59	69	44	10	_		5.0 <sup>+0.</sup>		29.5	_	16	40	6.5	-	15	15
50	-	o 600		-	_	32	70	27	1⁄4	67	78	52	12	_		8.0 <sup>+0.</sup>		38	_	20	50	6.0	-	17	17
63	Up t	o 600	20 to 60	0 3	5	32	86	27	1/4	73	84	64	16	_		5.0 <sup>+0</sup>		49		20	55	6.0	-	17	17
80	Up t	o 700	20 to 70	0 4	0	37	102	32	1/4	77	92	78	20	_		1.5 +0		61	1	25	65	8.0	—	21	21
100	Up t	o 700	20 to 70	0 4	0	37	116	41	1⁄4	85	100	92	25	-	. 3	5.5 <sup>+0.</sup>	3	64		30	80	8.0	_	21	21
125	Up to	0 1000	) 30 to 100	0 5	i0 -	47	145	_	1/2	112.5	141.5	115	25	17	' 3	2.0 +0.	3	64_0	2	36	90	43	14	16	16
140	Up to	0 1000	) 30 to 100	0 5	i0 ·	47	161	_	1/2	121	150	128	28	17	' 3	6.0 <sup>+0.</sup>	3	72_0	2	36	90	43	14	16	16
160	Up to	1200	) 30 to 120	0 5	6	53	182	_	3⁄4	133	167	144	32	20	) 4	0.0 +0.	3	80_0	2	40	90	43	14	18.5	18.5
						1	1																		_
Bore size	GC	H <sub>1</sub>	J	к	KA	L	N	IM	Ν	Р	<b>RR</b> 1	RR <sub>2</sub>	s	U	w		out rod				-	h rod	boot	- 1	
(mm)			-										-	-		Н	2	ZZ	е	T	h		e	Z	ZZ
40	11	8	M8 x 1.25	6	14	30	-	x 1.5	27	1⁄4	10	16	84	16	8	51	234	244	36	16.5			troke		252
50	11	11	M8 x 1.25	7	18	35	M18	x 1.5	30	3⁄8	12	19	90	19	0	58	261	273	45	16.0	66	1/4 s	troke	269	281
63	11	11	M10 x 1.25	7	18	40	M18	x 1.5	31	3⁄8	16	23	98	23	0	58	280	296	45	16.0	66	1/4 s	troke	288	304
80												00	440	00	0	74	327	047		100	0.0	4/		000	356
80	11	13	M12 x 1.75	11	22	48	M22	x 1.5	37	1/2	20	28	116	28	0	71	327	347	60	18.0	80	1/4 S	troke	336	330
100	11	-	M12 x 1.75 M12 x 1.75	11 11	22 26	48		x 1.5	37 40	1/2 1/2	20 25	28	126	36	0	71	327	347	60 60	18.0			troke troke		390
		16	-				M26		÷.					-			-					1⁄4 s	troke		
100	11	16	M12 x 1.75	11	26	58	M26 M30	x 1.5	40	1/2	25	23.5	126	36	0	72	356	381	60	18.0	81	1/4 s 1/5 s	troke troke	365	390
100 125	11 16	16 — —	M12 x 1.75 M14 x 1.5	11 15	26 31	58 65	M26 M30 M30	x 1.5 x 1.5	40 35	1/2 1/2	25 29	23.5	126 98	36 35	0	72 110	356 414.5	381 443.5	60 75	18.0 40	81 133	1/4 s 1/5 s 1/5 s	troke	365 437.5 456	390 466.5

\* Clevis pin, flat washer and cotter pin are attached.

# Center Trunnion Type (T)


#### ø40 to ø100

ALock-up at piston forward BLock-up at piston backward

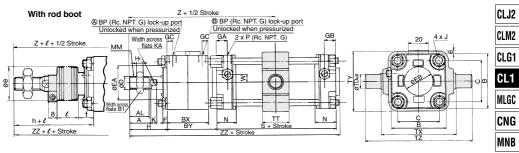

#### ø125 to ø160

#### With rod boot

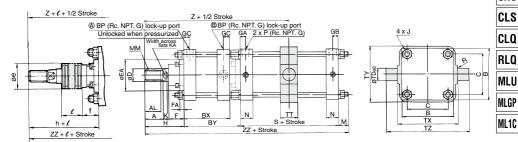

																								(mm)
Bore size	Str	oke ra	nge (m	ım)	Α	AL	в	Bı	BP	вх	BY	С	D	EA	EB	F	FA	GA	GB	GC	Hı	J	к	КА
(mm)	Without	rod boot	With ro	d boot				5		DA	ы	•	5			· ·	' <b>^</b>		un an	uu	•••	U	Ň	
40	Up to	500	20 to	500	30	27	60	22	1⁄4	59	69	44	16	40	32	6.5	-	15	15	11	8	M8 x 1.25	6	14
50	Up to	600	20 to	600	35	32	70	27	1⁄4	67	78	52	20	50	40	6.0	-	17	17	11	11	M8 x 1.25	7	18
63	Up to	600	20 to	600	35	32	86	27	1⁄4	73	84	64	20	55	40	6.0	-	17	17	11	11	M10 x 1.25	7	18
80	Up to	700	20 to	700	40	37	102	32	1⁄4	77	92	78	25	65	52	8.0	-	21	21	11	13	M12 x 1.75	11	22
100	Up to	700	20 to	700	40	37	116	41	1⁄4	85	100	92	30	80	52	8.0	-	21	21	11	16	M12 x 1.75	11	26
125	25 to	1000	30 to	1000	50	47	145	_	1/2	112.5	141.5	115	36	90	_	43	14	16	16	16	—	M14 x 1.5	15	31
140	30 to	1000	30 to	1000	50	47	161	_	1/2	121	150	128	36	90	—	43	14	16	16	16	—	M14 x 1.5	15	31
160	35 to	1200	35 to	1200	56	53	182	_	3⁄4	133	167	144	40	90	_	43	14	18.5	18.5	18.5	—	M16 x 1.5	17	36
	1						1	1		1	1	1	1	-		<b>C</b> 11					<i>r</i>			
Bore size	М	M	M	Ν	Р	R	s	Т	De8	TT	TX	TΥ	TZ	:   v			rod b		- 1	- V	. 1	d boot	-	77
(mm)									0.022				-	_		-	_	ZZ	e	T	h	e	Z	ZZ
40	-		x 1.5	27	1/4	-	84		-0.032	22	85	62	117		-	_	-			16.5	59	1/4 stroke	170	217
50	—		x 1.5	30	3⁄8	—	90		-0.032	22	95	74	127	-		-	-	-	-	16.0	66	1/4 stroke	189	240
63	—	M18	x 1.5	31	3⁄8	-	98		-0.032 -0.059	28	110	90	148	3 C	) 5	8 1	91 2	46	45 <sup>·</sup>	16.0	66	1/4 stroke	199	254
80	—	M22	x 1.5	37	1/2	-	116		-0.040 -0.073	34	140	110	192	2 0	) 7	1 2	21 2	86	60 ·	18.0	80	1/4 stroke	230	295
100	—	M26	x 1.5	40	1/2	—	126		-0.040 -0.073	40	162	130	214	4 C	) 7	2 2	35 3	806	60 ·	18.0	81	1/4 stroke	244	315
125	19	M30	x 1.5	35	1/2	1.0	98		-0.050 -0.089	50	170	164	234	4   -	- 11	10 3	00.5 3	68.5	75	40	133	1/5 stroke	323.5	391.5
140	19	M30	x 1.5	35	1/2	1.5	98	36	-0.050 -0.089	55	190	184	262	2 –	- 11	10 3	09 3	377	75	40	133	1/5 stroke	332	400
160	22	M36	x 1.5	39	3⁄4	1.5	106	40	-0.050 -0.089	60	212	204	292	2 –	- 12	20 3	40 4	15	75	40	141	1/5 stroke	361	436



CNA2

CNS

MLGP

# CL1 Series **Auto Switch Mounting 1**

# **Minimum Auto Switch Mounting Stroke**

#### Applicable Model: CDL1 Brackets for types other than the center trunnion type

Auto switch model	No		Brackets for types other th		Auto switch model	N		Brackets for types other the	
		mounted	ø40 to ø100	ø125 to ø160			mounted	ø40 to ø100	ø125 to ø160
	2 (D	ifferent surfaces, same surface)	15	15		2	Different surfaces	20	
D-M9□		1	(	(			Same surface	100	
D-M9□W		n	$15 + 40 \frac{(n-2)}{2}$	$15 + 40 \frac{(n-2)}{2}$	D-G39C		Different surfaces	20 + 30(n - 2)	
			(n = 2, 4, 6, 8) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)	D-K39C	n		(n = 2, 3, 4 ···)	_
	20	ifferent surfaces, same surface)			D-A3□C		Same surface	100 + 100(n - 2)	
D-M9⊡V		1	10	10				(n = 2, 3, 4 ···)	
D-M9 WV			$10 + 30 \frac{(n-2)}{2}$	10 + 20 (n-2)			Different surfaces	10 20	
2		n				2	Different surfaces Same surface	55	
			$(n = 2, 4, 6, 8 \cdots)^{Note 3}$	(n = 2, 4, 6, 8 ···) <sup>redie 3)</sup>			Same surface	20 + 30(n - 2)	
	2(D	ifferent surfaces, same surface)	15	20	D-A44C		Different surfaces	$(n = 2, 3, 4 \cdots)$	
D-M9□A	<u> </u>	1	( )	(	D-A44C	n		(11 = 2, 3, 4 ···) 55 + 50(n - 2)	_
		n	$15 + 40 \frac{(n-2)}{2}$	$20 + 40 \frac{(n-2)}{2}$			Same surface	$(n = 2, 3, 4 \cdots)$	
			(n = 2, 4, 6, 8 ···) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)			1	10	
	20	ifferent surfaces, same surface)					Different surfaces	15	
		1	10	15	D-G5□/K59	2	Same surface	75	
D-M9□AV			$10 + 30 \frac{(n-2)}{2}$	15 · 20 (n-2)	D-G5⊟W		Same sunace	15 + 50(n - 2)	
		n	(n = 2, 4, 6, 8 ···) Note 3)	15+30-2 2	D-K59W D-G5BA		Different surfaces	(n = 2, 4, 6, 8 ···) Note 3)	_
			(n = 2, 4, 6, 8 ···) <sup>rede 3)</sup>	(n = 2, 4, 6, 8 ···) <sup>redie 3)</sup>	D-G59F	n		75 + 50(n - 2)	
	2 (D	ifferent surfaces, same surface)	15	15	D-G5NT		Same surface	(n = 2, 4, 6, 8 ···) Note 3)	
D-A9□		1		(	D-B5□/B64	_	1	10	
D-A9⊔		n	$15 + 40 \frac{(n-2)}{2}$	$15 + 40 \frac{(n-2)}{2}$			Different surfaces	20	
			(n = 2, 4, 6, 8 ···) Note 3)			2	Same surface	75	
	20	ifferent surfaces, same surface)						20 + 50(n - 2)	
	- (0	1	10	10	D-B59W		Different surfaces	(n = 2, 4, 6, 8 ···) Note 3)	_
D-A9⊟V			$10 + 30 \frac{(n-2)}{2}$	10 . 00 (n-2)	0 00011	n		75 + 50(n - 2)	
		n	10+30-2	10 + 30 2			Same surface	(n = 2, 3, 4 ···)	
			(n = 2, 4, 6, 8 ···) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)			1	10	
D-F5□/J5□	2 (D	ifferent surfaces, same surface)	15	25		21	Different surfaces, same surface)		
D-F5 W/J59W		1	(	(	D-Y59□/Y7P	- 1	1	1	5
D-F5BA/F59F		n	$15 + 55 \frac{(n-2)}{2}$	$25 + 55 \frac{(n-2)}{2}$	D-Y7□W			15 + 40	(n – 2)
D-A5□/A6□			(n = 2, 4, 6, 8 ···) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)	D-Z7□/Z80		n	15 + 40 (n = 2, 4, 6,	2 Note 3)
	20	ifferent surfaces, same surface)						(n = 2, 4, 6	8 ···) <sup>14010-3)</sup>
		1	25	35		2(	Different surfaces, same surface)	1	0
D-F5NT			$25 + 55 \frac{(n-2)}{2}$	25 . 55 (n-2)	D-Y69□/Y7PV		1		
		n	(n = 2, 4, 6, 8) Note 3)		D-Y7□WV		n	10 + 30	$\frac{(n-2)}{2}$
			(n = 2, 4, 6, 8 ···) Note 3)	(f1 = 2, 4, 0, 8) Note 3)				10 + 30 (n = 2, 4, 6,	8) Note 3)
	2(D	ifferent surfaces, same surface)	20	25		21	Different surfaces, same surface)		
D-A59W		1	(=)	(=)		- 1	1	2	0
D AUGH		n	$20 + 55 \frac{(n-2)}{2}$		D-Y7BA			00 . 45	. (n – 2)
			(n = 2, 4, 6, 8 ···) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)			n	20 + 45 (n = 2, 4, 6	2 Note 3)
	2	Different surfaces	3	5				(n = 2, 4, 6,	8) Note 0)
	2	Same surface	10	00		2(	Different surfaces, same surface)	15	
D-G39		Different surfaces	35 + 30	D(n - 2)	D-P4DW		1		_
D-K39	n	Different surfaces	(n = 2,	3, 4 …)	D-F4DW		n	$15 + 65 \frac{(n-2)}{2}$	
D-A3□	l	Somo ourfo	100 + 10	00(n - 2)				$15 + 65 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8 ···) <sup>Note 3)</sup>	
		Same surface		3, 4 …)		·		1	
		1	10	15					
	2	Different surfaces	3	5					
	<	Same surface	5	5					

Note 1) Reed auto switches D-A9□/A9□V cannot be mounted on ø50.

Different surfaces

Same surface

n

Note 2) The following auto switches cannot be mounted on ø125 to ø160.

D-G39C, K39C, A3 C, A44C, G5 K59, G5 W, K59W, G5BA, G59F, G5NT, B5 B64, B59W, P4DW.

10

Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

35 + 30(n - 2)

(n = 2, 3, 4 ···)

55 + 50(n - 2)

(n = 2, 3, 4 ···)

15

**SMC** 

D-A44

# **Minimum Auto Switch Mounting Stroke**

#### Applicable Model: CDL1 Center trunnion type only

switch model	No. of auto switches	- 40	- 50	- 00	Center tru		-105	-140	-100
	mounted 2 (Different surfaces, same surface)	ø <b>40</b>	ø <b>50</b>	ø <b>63</b>	ø <b>80</b>	ø100	ø125	ø140	ø160
<b>//9</b> □	1		80	85	90	95	105	110	115
M9□W	n		$40 \frac{(n-4)}{2}$	$85 + 40 \frac{(n-4)}{2}$	$90 + 40 \frac{(n-4)}{2}$	$95 + 40 \frac{(n-4)}{2}$	$105 + 40 \frac{(n-4)}{2}$	$110 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>	$115 + 40 \frac{(n-4)}{2}$
		(n = 4, 8, 1	2, 16 ···) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>
/9 <b>□</b> V	2 (Different surfaces, same surface) 1		55	60	65	70	80	85	90
N9⊟WV		55 + 3	$30 \frac{(n-4)}{2}$	$60 + 30 \frac{(n-4)}{2}$	$65 + 30 \frac{(n-4)}{2}$	$70 + 30 \frac{(n-4)}{2}$	$80 + 30 \frac{(n-4)}{2}$	$85 + 30 \frac{(n-4)}{2}$	$90 + 30 \frac{(n-4)}{2}$
	n	(n = 4, 8, 1	2, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) <sup>Note 2)</sup>	(n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>	(n = 4, 8, 12, 16 ···) Note 2)	$85 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>	(n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>
	2 (Different surfaces, same surface)		80	85	05	100	115		20
	1				95			14	20
A⊐9N		80 + 4	$40 \frac{(n-4)}{2}$	$85 + 40 \frac{(n-4)}{2}$	$95 + 40 \frac{(n-4)}{2}$	$100 + 40 \frac{(n-4)}{2}$	$115 + 40 \frac{(n-4)}{2}$	120 + 40 (n = 4, 8, 12	$\frac{(n-4)}{2}$
			2, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12	, 16 ··· ) <sup>Note 2)</sup>
	2 (Different surfaces, same surface) 1		60	65	70	75	90	9	5
/I9□AV			n (n - 4)	or oo (n-4)	70 00 (n - 4)	75 oo (n-4)	00 00 (n-4)	95 + 30	(n - 4)
	n		$30 \frac{(n-4)}{2}$	65 + 30 - 2	$70 + 30 \frac{(n-4)}{2}$	75 + 30 + 2	90 + 30 - 2	95+30	
		(n = 4, 8, 1	2, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16 ) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	(n = 4, 8, 12	, 16 ···) <sup>NOTE 2)</sup>
	2 (Different surfaces, same surface) 1	75		80	85	90	100	105	110
\9□	· ·	$75 + 40 \frac{(n-4)}{2}$	) —	00 to (n-4)	or to (n-4)	oo to (n-4)	400 40 (n-4)	105 to (n-4)	110 to (n - 4)
	n			80 + 40 <u>2</u>	85 + 40 2	90 + 40 - 2	100 + 40 2	$105 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16) <sup>Note 2)</sup>	110 + 40 2 (a 4 0 40 40 Note2)
	2 (Different surfaces, same surface)	(n = 4, 8, 12, 16 ···) Note	-	(11 = 4, 0, 12, 10)	(11 = 4, 0, 12, 10)	(11 = 4, 0, 12, 10)		(11 = 4, 0, 12, 10)	(11= 4, 0, 12, 10)
	2 (Unerent suraces, same surface) 1	50		55	60	65	75	80	85
A9⊡V		$50 + 30 \frac{(n-4)}{2}$	2 -	FF + 20 (n-4)	60 · 20 (n - 4)	65 · 20 (n-4)	75 · 20 (n-4)	80 · 20 (n-4)	es : 20 (n-4)
	n	(n = 4, 8, 12, 16 ···) Note	2	0-4 8 12 16 Note 2	00 + 30 2 (n = 4 8 12 16 \Nde2)	05 + 30 2 (n = 4 9 12 16 ) Note 2	/0 = 1 9 12 16 \Nde2	$80 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16) <sup>Note 2</sup>	05 + 30 2 (n=4 9 12 16 \Nde2)
	2 (Different surfaces, same surface)	(11=4,0,12,10)	-		(11=4,0,12,10 m)	(11 = 4, 0, 12, 10)	(11=4,0,12,10.11)	(11=4, 0, 12, 10 m)	(11 = 4, 0, 12, 10 m)
-o_/Jo_	2 (Unieren sunaces, same sunace) 1		90	100	110	120	125	1:	35
5⊡W/J59W 5BA/F59F		90 +	$55\frac{(n-4)}{2}$	$100 + 55 \frac{(n-4)}{2}$	$110 \pm 55 \frac{(n-4)}{2}$	$120 \pm 55 \frac{(n-4)}{2}$	125 + 55 (n-4)	135 + 55	<u>(n - 4)</u>
A5□/A6□	n		2, 16 ···) Note 2)	(n = 4 8 12 16) Note 2)	(n = 4 8 12 16) Note 2)	(n = 4 8 12 16) Note 2)	(n = 4 8 12 16) Note 2)	(n = 4, 8, 12	
	2 (Different surfaces, same surface)								
	1		110	120	130	140	145		55
5NT		110 +	$55 \frac{(n-4)}{2}$	$120 + 55 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16) <sup>Note 2)</sup>	130 + 55 (n - 4)	$140 + 55 \frac{(n-4)}{2}$	145 + 55 (n - 4)	155 + 58	$5 \frac{(n-4)}{2}$
	n	(n = 4.8 1	2, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4. 8. 12	2 . 16 ····) <sup>Note 2)</sup>
	2 (Different surfaces, same surface)		. ,						
	1		90	100	110	120	125		35
459W		90 +	$55\frac{(n-4)}{2}$	$100 + 55 \frac{(n-4)}{2}$	$110 + 55 \frac{(n-4)}{2}$	$120 + 55 \frac{(n-4)}{2}$	125 + 55 (n - 4)	135 + 55	$\frac{(n-4)}{2}$
	n	(n = 4, 8. 1	2, 16 ···) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	(n = 4, 8, 12, 16 ···) Note 2)	135 + 55 (n = 4, 8, 12	, 16 ····) Note 2)
	Different surfaces		75	80		10			. ,
	2 Same surface		100	100		00	1	110	
G39	Different surfaces		30(n – 2)	80 + 30(n - 2)		0(n – 2)		110 + 30(n - 2)	
(39	n	(n = 2, 4,	6, 8 ···) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)		, 8 ···) <sup>Note 3)</sup>	(n	= 2, 4, 6, 8 ···) <sup>No</sup>	ote 3)
43□	Same surface					00(n - 2)			
	1		75	80		, 8) <sup>Note 3)</sup>		110	
	Different surfaces			80		0		110	
	2 Same surfaces		75	80	9	0		110	
		75 +	30(n – 2)	80 + 30(n - 2)	90 + 3	0(n – 2)		110 + 30(n - 2)	
44	Different surfaces	(n = 2, 4,	6, 8 ···) Note 3)	(n = 2, 4, 6, 8 ···) Note 3)		, 8) Note 3)	(n	= 2, 4, 6, 8 ···) No	
144									
444	Same surface		50(n – 2) 6, 8 …) <sup>Note 3)</sup>	80 + 50(n - 2) (n = 2, 4, 6, 8 ···) Note 3)		D(n – 2) , 8 …) <sup>Note 3)</sup>		110 + 50(n - 2)	

Note 1) Reed auto switches D-A9□/A9□V cannot be mounted on ø50.

Note 2) When "n" is an odd number, a multiple of 4 that is larger than this odd number is used for the calculation.

Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

D-□ -X□

# CL1 Series Auto Switch Mounting 2

# **Minimum Auto Switch Mounting Stroke**

### Applicable Model: CDL1 Center trunnion type only

n: No. of auto switches


Auto switch model	No	. of auto switches				Center tri	unnion t	type			
Auto Switch model		mounted	ø <b>40</b>	ø <b>50</b>	ø63	ø <b>80</b>	Ø	<b>100</b>	ø125	ø140	ø160
	2	Different surfaces	7	75	80		90				
	2	Same surface	1	00	100	1	100				
D-G39C D-K39C	n	Different surfaces		5(n – 2) i, 8) <sup>Note 3)</sup>	80 + 35(n - 2) (n = 2, 4, 6, 8 ···) Note 3)		35(n – 2 6, 8 …) <sup>r</sup>		_	_	_
D-A3□C	<sup></sup>	a (			100 + 100(n - 2						
		Same surface			(n = 2, 4, 6, 8 ···	)					
		1	7	75	80		90		1		
	2	Different surfaces									
	2	Same surface	7	75	80		90				
D-A44C	n	Different surfaces		5(n – 2) i, 8 …) <sup>Note 3)</sup>	80 + 35(n - 2) (n = 2, 4, 6, 8 ···) Note 3)		35(n – 2 6, 8 …) <sup>r</sup>		_	_	_
	···	Same surface	75 + 5	0(n – 2)	80 + 50(n - 2)	90 + 5	50(n – 2	!)	1		
		Same sunace	(n = 2, 4, 6	, 8 ···) <sup>Note 3)</sup>	(n = 2, 4, 6, 8 ···) Note 3)	(n = 2, 4, 6	6, 8 ···) <sup>r</sup>	Note 3)			
		1	7	75	80		90				
D-G5□/K59 D-G5□W	2	Different surfaces Same surface	. 9	90	100	1	110				
D-K59W D-G5BA	n	Different surfaces	90 + 5	$0\frac{(n-4)}{2}$	$100 + 50 \frac{(n-4)}{2}$	110 + 5	$0 \frac{(n-4)}{2}$	<u>)</u>			
D-G59F	1"				$(n = 4, 8, 12, 16 \cdots)^{Note 2}$				_	-	_
D-G5NT		Same surface		0(n – 2)	100 + 50(n - 2)		50(n – 2				
D-B5□/B64				i, 8 ···) <sup>Note 3)</sup>	$(n = 2, 4, 6, 8 \cdots)^{Note 3)}$			Note 3)			
D-B59W		1	-	90	100	1	110				
D-Y59□/Y7P	2 (0	Niferent surfaces, same surface) 1	80	85	90	95		10	05	110	115
D-Y7□W			$80 + 40 \frac{(n-4)}{2}$	$85 + 40 \frac{(n-4)}{2}$	$90 + 40 \frac{(n-4)}{2}$	$95 + 40 \frac{(n-4)}{2}$	-	105 + 40	n (n - 4)	$110 + 40 \frac{(n-4)}{2}$	$115 \pm 40 \frac{(n-4)}{2}$
D-Z7□/Z80		n		(n = 4, 8, 12, 16 ···) Note 2)						(n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>	
D-Y69□/Y7PV	2 (0	Niferent surfaces, same surface) 1	e	65	75	80		9	0	95	100
D-Y7DWV		n	65 + 3 (n = 4, 8, 12		75 + 30 (n - 4) (n = 4, 8, 12, 16) Note 2)			90 + 30 = 4, 8, 12,		95 + 30 (n - 4) (n = 4, 8, 12, 16 ···) Note 2)	$100 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16) Note 2)
	2 (0	Niferent surfaces, same surface) 1	g	95	100	105		1	10	120	125
D-Y7BA		n		5 (n - 4) 2 1, 16 ···) Note 2)	$100 + 45 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>	$105 + 45 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16) Note 2	- 2 (n	110 + 4 = 4, 8, 12	5 (n - 4) 2 16 ···) Note 2)	$120 + 45 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16 ···) <sup>Note 2)</sup>	
	2 (0	Viferent surfaces, same surface) 1		20	130		140				
D-P4DW		n	120 + 6 (n = 4, 8, 12	5 (n - 4) 2, 16 ···) <sup>Note 2)</sup>	$130 + 65 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16) Note 2)	140 + 6 (n = 4, 8, 12	65 <u>(n - 4</u> 2, 16 ····	4) ) Note 2)	-	_	-

Note 1) The following auto switches cannot be mounted on ø125 to ø160.

D-G39C, K39C, A3 C, A44C, G5 , K59, G5 W, K59W, G5BA, G59F, G5NT, B5 , B64, B59W, P4DW.

Note 2) When "n" is an odd number, a multiple of 4 that is larger than this odd number is used for the calculation. Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

# Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

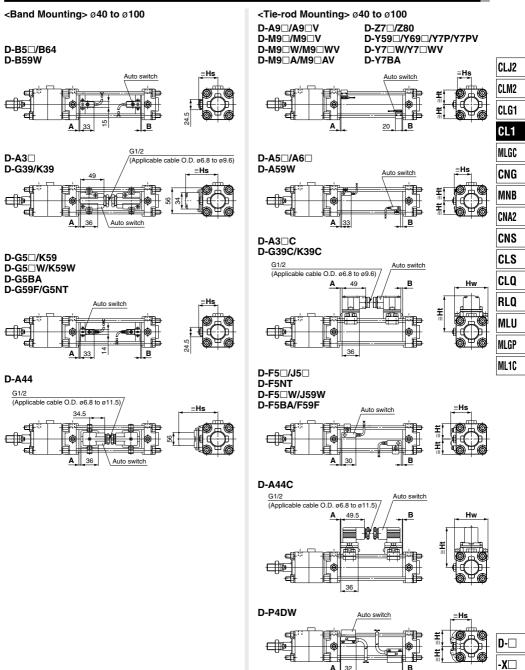


**SMC** 

847

# CL1 Series **Auto Switch Mounting 3**


Auto Switch Proper Mounting Position (Detection at Stroke End) and Its Mounting Height

#### <Band Mounting> Ø125 to Ø160

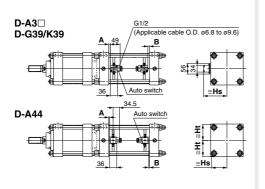


# <Tie-rod Mounting> Ø125 to Ø160

D-Y7 /Z80/A9 /A9 V D-Y59□/Y69□/Y7P/Y7PV/M9□/M9□V D-Y7 W/Y7 WV/F9 W/F9 WV D-Y7BA/M9DA/M9DAV






D-A5□/A6□





D-F5 /J5 /D-F5NT D-F5 W/J59W (33) 30 D-F5BA/F59F





(mm)

(mm)

#### Auto Switch Proper Mounting Position

						<u> </u>																		(11111)
Auto switch model Bore size	D-M D-M D-M D-M D-M D-M D-M	90V 90W 0WV 90A	D-AS D-AS		D-Y D-Y D-Y D-Y D-Y D-Y D-Y D-Y D-Z D-Z	590 7PV 7DV 0WV 7BA 70	D-F5 D-J5 D-F5 D-F5 D-J5 D-F5	⊡ 9F ⊡W 9W	D-F	5NT	D-G; D-A; D-A; D-A; D-A;	39 3□ 44 5□	D-A	59W	D-P4	łDW	D-G; D-K; D-A; D-A;	39C 39C 3□C 44C	D-G D-K D-G D-G D-G D-G D-G	59 59F 5□W 59W 59W	D-B D-B		D-B	59W
(mm)	Α	в	Α	в	Α	в	Α	В	Α	в	Α	в	Α	в	Α	в	Α	в	Α	В	Α	В	Α	в
40	10	8	6	4	3.5	1.5	6.5	4.5	11.5	9.5	0	0	4	2	3	1	0	0	2	0	0.5	0	3.5	1.5
50	10	8	6	4	3.5	1.5	6.5	4.5	11.5	9.5	0	0	4	2	3	1	0	0	2	0	0.5	0	3.5	1.5
63	12.5	11.5	8.5	7.5	6	5	9	8	14	13	2.5	1.5	6.5	5.5	5.5	4	2.5	1.5	4.5	3.5	3	2	6	5
80	16	14	12	10	9.5	7.5	4	10.5	17.5	15.5	6	4	10	8	9	7	6	4	8	6	6.5	4.5	9.5	7.5
100	17.5	16.5	13.5	12.5	11	10	14	13	19	18	7.5	6.5	11.5	10.5	10.5	9	7.5	6.5	9.5	8.5	8	7	11	10
125	8	8	4	4	1.5	1.5	4.5	4.5	9.5	9.5	0	0	2	2	—	—	—	—	_	—	—	_	—	_
140	8	8	4	4	1.5	1.5	4.5	4.5	9.5	9.5	0	0	2	2	—	—	_	—	_	-	_	_	-	-
160	8	8	4	4	1.5	1.5	4.5	4.5	9.5	9.5	0	0	2	2	_	—	—	—	-	—	—		-	_

Note 1) Adjust the auto switch after confirming the operating conditions in the actual setting.

#### Auto Switch Mounting Height

Auto switch model Bore size	D-M D-M D-M D-A	9⊡W 9⊡A	D-M D-M9 D-M9	□WV	D-AS	€ΩV	D-Y5 D-Y7 D-Y7 D-Y7 D-Z7 D-Z8	′P ∕⊡W ′BA ′□	D-Y6 D-Y7 D-Y7	690 7PV 0WV	D-F D-J D-F D-F D-F D-F D-F	59F 5⊡W 59W 59W	D-A D-A D-A	50	D-G39 D-K39 D-A3□	D-A44	D-P4	1DW	D-G; D-K; D-A;	39C	D-A4	14C	D-G5□ D-K59 D-G59F D-G5□W D-K59W D-G5BA D-G5NT D-B5□ D-B64 D-B59W
(mm) \	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Hs	Hs	Ht	Hs	Ht	Hs	Ht	Hs
40	30	30	35	30	32	30	30	30	30.5	30	38.5	31	40	31	72.5	80.5	43	33.5	73	69	81	69	38
50	34	34	39	34	36.5	34	34	34	35	34	42.5	35	43.5	35	78	86	47	38	78.5	77	86.5	77	43.5
63	41	41	46	41	43.5	41	41	41	42.5	41	48	42	49	42	85	93	53	44	85.5	91	93.5	91	50.5
80	49.5	49	54	49	51.5	49	49.5	48.5	51	48.5	54	50	55.5	50	93.5	101.5	60	52	94	107	102	107	59
100	57	56	62.5	56	59.5	56	58.5	56	59	56	62	57.5	63	57.5	104	112	67	59	104	121	112	121	69.5
125	69	69.5	71.5	69.5	69	69.5	69	69.5	69	69.5	74.5	70	75.5	69.5	116	126	—	—	—	_	—	—	-
140	76	76	77.5	76	76	76	76	76	76	76	80	76.5	81	76.5	124	134	-	-	-	_	—	_	-
160	85	85	86	85	85	85	85	85	85	85	88	87.5	89	87.5	134.5	144.5	—	_	—	—	—	—	-

₿SMC

Note 2) D-A9□/A9□V cannot be mounted on ø50.

Note 3) The following auto switches cannot be mounted on ø125 to ø160. D-G39C, K39C, A3⊡C, A44C, G5⊡, K59, G5⊡W, K59W, G5BA, G59F, G5NT, B5⊡, B64, B59W, P4DW.

# **Operating range**

								(mm)
Auto switch model				Bore siz	ze (mm)			
Auto switch model	40	50	63	80	100	125	140	160
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV	4.5	5	5.5	5	6	7	6.5	6.5
D-Y59□/Y69□ D-Y7P/Y7□V D-Y7□W/Y7□WV D-Y7BA	8	7	5.5	6.5	6.5	12	13	7
D-F5□/J5□/F59F D-F5□W/J59W D-F5BA/F5NT	4	4	4.5	4.5	4.5	5	5	5.5
D-G5□/K59/G59F D-G5□W/K59W D-G5BA/G5NT	5	6	6.5	6.5	7	_	_	_
D-G39/K39	_		40	4.0		11	11	10
D-G39C/K39C	9	9	10	10	11	-		_
D-P4DW	4	4	4.5	4	4.5	_	_	—
D-A9□/A9□V	7	-	9	9	9	12	12.5	11.5
D-Z7□/Z80	8	7	9	9.5	10.5	14	14.5	13
D-A3□/A44						10	10	10
D-A3 C/A44C	9	10	11	11	11	—	—	—
D-A5□/A6□	] 9	10	''	11		10	10	10
D-B5□/B64						—		—
D-A59W	13	13	14	14	15	17	17	17
D-B59W	14	14	17	16	18	_		—

#### Note 1) D-A9□/A9□V cannot be mounted on ø50.


Note 2) The following auto switches cannot be mounted on ø125 to ø160. D-G39C, K39C, A3⊟C, A44C, G5⊟, K59, G5⊟W, K59W, G5BA, G59F, G5NT, B5⊟, B64, B59W, P4DW.

 Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approximately ±30% dispersion). It may vary substantially depending on an ambient environment.

### Auto Switch Mounting Bracket: Part No.

#### <Tie-rod Mounting>

Auto autitale				Bore siz	ze (mm)			
Auto switch	ø <b>40</b>	ø <b>50</b>	ø <b>63</b>	ø <b>80</b>	ø <b>100</b>	ø <b>125</b>	ø <b>140</b>	ø <b>160</b>
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV D-A9□/A9□V	BA7-040	BA7-040	BA7-063	BA7-080	BA7-080	BS5-125	BS5-125	BS5-160
D-F5=/J5= D-F5=W/J59W D-F5BA/F59F/F5NT D-A5=/A6/A59W	BT-04	BT-04	BT-06	BT-08	BT-08	BT-12	BT-12	BT-16
D-G39C/K39C D-A3 C/A44C (2), (3)	BA3-040	BA3-050	BA3-063	BA3-080	BA3-100	I	-	I
D-Y59□/Y7P/Y7□W D-Y69□/Y7PV/Y7□WV D-Y7BA D-Z7□/Z80	BA4-040	BA4-040	BA4-063	BA4-080	BA4-080	BS4-125	BS4-125	BS4-160
<b>D-P4DW</b> (2)	BAP2-040	BAP2-040	BAP2-063	BAP2-080	BAP2-080	—	-	—



• The above figures show the mounting example of D-A9 $\Box(V)/M9\Box(V)/M9\Box(V)/M9\BoxA(V).$ 

#### <Band Mounting>

Auto switch				Bore siz	ze (mm)			
Auto Switch	ø <b>40</b>	ø <b>50</b>	ø <b>63</b>	ø <b>80</b>	ø <b>100</b>	ø125	ø <b>140</b>	ø <b>160</b>
D-G39/K39 D-A3□/A44	BD1-04M	BD1-05M	BD1-06M	BD1-08M	BD1-10M	BS1-125	BS1-140	BS1-160
D-G5□/K59 D-G5□W/K59W D-G5BA/G59F/G5NT D-B5□/B64/B59W (2)	BA-04	BA-05	BA-06	BA-08	BA-10	_	_	_

Note 1) D-A9□/A9□V cannot be mounted on ø50.

Note 2) The following auto switches cannot be mounted on ø125 to ø160.

- D-G39C, K39C, A3⊡C, A44C, G5⊡, K59, G5⊡W, K59W, G5BA, G59F, G5NT, B5⊡, B64, B59W, P4DW.
- Note 3) Auto switch mounting brackets are attached to D-G39C/K39C/A3□C/A44C. When ordering, specify the part number as follows depending on the cylinder size. (Example) e40: D-A3□C-4, e50: D-A3□C-5

xample) ø40: D-A3 C-4, ø50: D-A3 C-5 ø63: D-A3 C-6, ø80: D-A3 C-8

ø100: D-A3⊡C-10

If auto switch mounting brackets are necessary, order them with the part numbers above.

Note 4) Cylinder tube thickness varies depending on the cylinder type. Take precautions when cylinder types change when band mounting type auto switches are used.

#### [Mounting screw set made of stainless steel]

The following set of mounting screws made of stainless steel is available. Use it in accordance with the operating environment. (Please order the auto switch mounting bracket separately, since it is not

(Please order the auto switch mounting bracket separately, since it is not included.) BBA1: For D\_F5/15/45/46 types

BBA1: For D-F5/J5/A5/A6 types BBA3: For D-G5/K5/B5/B6 types

- Note 5) Refer to pages 1225 and 1233 for the details of BBA1 and BBA3. D-F5BA/G5BA auto switches are set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, BBA1 or BBA3 is attached. Note 6) When using D-MBCIA(V)/Y7BA, do not use the steel set screws which
- Note 6) When using D-M9JA(V)/Y7BA, do not use the steel set screws which is included with the auto switch mounting brackets above (BA7-D), BS4-DD, BS4-DD). Order a stainless steel screw set (BBA1) separately, and select and use the M4 x 6L stainless steel set screws included in the BBA1.

-X 🗆

CLJ2 CLM2 CLG1 CL1 MLGC CNG

MNB

CNA2

CNS

CLS

CLQ

RLQ MLU MLGP ML1C

# CL1 Series Auto Switch Mounting 4

#### Besides the models listed in How to Order, the following auto switches are applicable.

Refer to pages 1119 to 1245 for the detailed specifications.

Auto switch type	Part no.	Electrical entry (Feiching direction)	Features	Applicable bore siz	
	D-M9NV, M9PV, M9BV				
	D-Y69A, Y69B, Y7PV				
	D-M9NWV, M9PWV, M9BWV	Grommet (Perpendicular)			
	D-Y7NWV, Y7PWV, Y7BWV		Diagnostic indication (2-color indicator)		
	D-M9NAV, M9PAV, M9BAV		Water resistant (2-color indicator)		
	D-Y59A, Y59B, Y7P			ø40 to ø160	
Solid state	D-F59, F5P, J59			-	
	D-Y7NW, Y7PW, Y7BW				
	D-F59W, F5PW, J59W	Comment (In Vine)	Diagnostic indication (2-color indicator)		
	D-F5BA, Y7BA	Grommet (In-line)	Water resistant (2-color indicator)		
	D-F5NT		With timer		
	D-G5NT		vvitn timer	ø40 to ø100	
	D-P5DW		Magnetic field resistant (2-color indicator)		
	D-A93V, A96V	Orrespondent (De manarationale a)	-		
	D-A90V	Grommet (Perpendicular)	Mither timelineter links	- 40 4 100	
Reed	D-A67, Z80		Without indicator light	ø40 to ø160	
	D-A53, A56, Z73, Z76	Grommet (In-line)	_		
	D-B53			ø40 to ø100	

-----

٦

н

.

\_

\* For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1192 and 1193 for details. \* Normally closed (NC = b contact) solid state auto switches (D-F9G/F9H/Y7G/Y7H types) are also available. Refer to pages 1137 and 1139 for details.

# CL1 Series Made to Order: Individual Specifications

Please contact SMC for detailed dimensions, specifications and lead times.



Symbol

-X51

# 2 Both-direction Lock-up Cylinder

CL1	Mounting type	Bore size	-	Stroke	-	Suffix	— X51
-----	---------------	-----------	---	--------	---	--------	-------

A type of CA1 series (ø40 to ø100) and CS1 series (ø125 to ø160) air cylinder, this is a bi-directional locked-up cylinder in which two uni-directional locked-up units have been assembled by facing them away from each other.




### **Cylinder Specifications**

Max	imum on	oratina n	roccuro	ø40 to ø10	0		1.0 MF	°a
IVIAA	Maximum operating pressure			ø125 to ø16	0		0.97 MF	Pa
Mini	mum op	erating p	ressure		0.	.08 MPa	a	
Acti	on				Dou	uble acti	ng	
Pist	on spee	d *			50 to	o 200 m	ım/s	
Cus	hion				E	quipped	i	
state Make	for the pu sure that	rpose of d the piston s	Irop prever speed does	not exceed 200				stationar
state Make	for the pu sure that ked-u	the piston s <b>D Unit</b>	rop prever speed does Speci	ntion. not exceed 200	mm/	/s during	locking.	
state Make LOC	for the pu sure that ked-up ked-up re	rpose of d the piston s D Unit leasing p	Irop prever speed does Speci pressure	not exceed 200 fications	mm/ a or	/s during more (a	locking. at no-loa	
state Make Loc Loc	for the pu sure that ked-up ked-up re	the piston s D Unit leasing p arting pr	Irop prever speed does Speci pressure	ntion. not exceed 200 fications 0.2 MP	mm/ a or .05 I	/s during	locking. at no-load less	
state Make Lock Lock	for the pure sure that ked-up re ked-up re ked-up st ked-up di	the piston s D Unit leasing p arting pr	Irop prever speed does Speci pressure essure	ntion. not exceed 200 fications 0.2 MP	mm/ a or .05 I Both	/s during more (a MPa or	locking. at no-loar less ons	
state Make Lock Lock Lock Max	for the pure that sure that ked-up re- ked-up re- ked-up di imum sp	Provide the piston s p Unit cleasing pr carting pr rection eed at loo	Irop prever speed does Speci pressure essure cked-up	ntion. not exceed 200 fications 0.2 MP	mm/ a or .05 I 30th 20	/s during more (a MPa or n directio 00 mm/s	locking. at no-load less ons s	d)

maximum zoud and moraling i oroo or zooning (maxi orado roda)									
Bore siz	e (mm)	40	50	63	80	100	125	140	160
Max. load according to	Horizontal mounting	588	981	1470	2450	3820	6010	7540	9850
mounting orientation (N)	Vertical mounting	294	490	735	1230	1910	3000	3770	4920
Holding fo	orce (N)	1230	1920	3060	4930	7700	12100	15100	19700

 The cylinder can be used to 1/2 of its holding force or below if only a stationary load is applied, such as for drop prevention.

### **Construction/Dimensions**



					(mm)
Bore size (mm)	BU	BW	BX	BY	Х
40	48	31	59	137	283
50	56	30	67	153	312
63	62	30	73	165	335
80	66	34	77	181	385
100	74	34	85	197	412


\* For dimensions according to mounting type, refer to CL1 series

						(mm)
Bore	e size (mm)	BU	BP	BX	BY	Х
	125	95.5	3/8	191	220	455
	140	104.5	3/8	209	238	473
	160	112.5	3/8	225	259	515.5

For dimensions according to mounting type. refer to CS1 series.
 Added the length of BY for full length dimension.

Note) Locked-up port: ø40 to ø100 — 2 positions, ø125 to ø160 — 1 position. In the case of lock releasing of ø40 to ø100, be sure to supply air to both locked-up ports and to release the lock.

#### ø125 to ø160

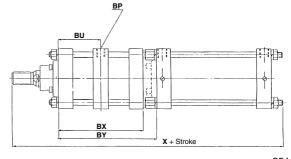

D-🗆

-X

# CL1 Series Related Products

#### Large Bore Lock-up Cylinder (Ø180 to Ø300)

•This is a lock-up cylinder with a self-locking system that can be mounted onto a large bore air cylinder (CS1 series) from 0180 to 0300, and contains a ring that is tilted by a spring force, which is further tilted by the thrust of the cylinder to securely lock the piston rod.

Produced upon receipt of order. Please contact SMC for details.



#### Specifications

Applicable bore size	ø180, ø200, ø250, ø300
Maximum operating pressure	0.97 MPa
Locked-up releasing pressure	0.2 MPa or more (at no-load)
Locked-up starting pressure	0.05 MPa or less
Locked-up direction	One way (Locking direction is selectable.)
Mounting	Basic type, Foot type, Rod side flange type Head side flange type, Single clevis type Double clevis type, Center trunnion type
Maximum speed at locked-up	200 mm/sec

# Maximum Load and Holding Force of Locking (Max. static load)

Bore size (mm)		180	200	250	300
Max. load according	Horizontal mounting	12250	14700	24000	29400
to mounting orientation (N)	Vertical mounting	6125	7350	12000	14700
Holding	force (N)	24500	29400	48000	58800

\* The cylinder can be used to 1/2 of its holding force or below if only a stationary load is applied, such as for drop prevention.