
Cylinder with Lock

CNA2 Series

Ø40, Ø50, Ø63, Ø80, Ø100



- Suitable for intermediate stops, emergency stops and drop prevention
- 2-color indicator auto switches can be mounted.
 - Small solid state type (D-M9□ series)
 - Magnetic field resistant solid state type (D-P3DWA□ series)

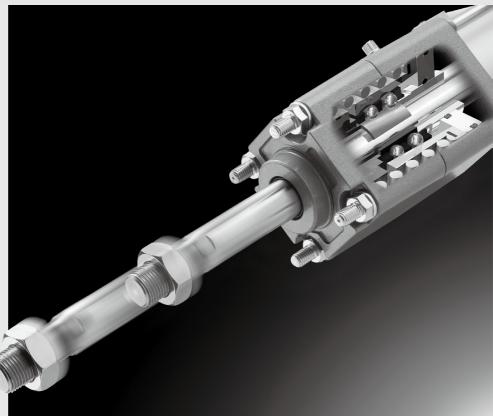

CLJ2

CLM2

CLG1 CL1

MLGC

CNG

MNB

CNA2

CNS

CLS

CLQ RLQ

MLU

MLGP


ML1C

D-□ -X□

Suitable for intermediate stops,

Simple construction

A force magnifying mechanism is employed based on the wedge effect of the taper ring and steel balls.



High locking efficiency

Greater locking efficiency as well as stable locking and unlocking operation has been achieved by arranging a large number of steel ball bearings in circular rows. (Unlocking pressure of 0.25 MPa 0.05 MPa lower than conventional SMC products) In addition, both alignability and stable locking force with respect to piston rod eccentricity are obtained by allowing the taper ring to float.

High reliability and stable holding force


Outstanding durability and stable holding force are maintained by the use of a brake shoe having superior wear resistance, which has also been substantially lengthened. (Double the conventional SMC product)

Compact lock unit saves space.

The lock unit is extremely compact, without a large overhang.


Cylinder with Lock

CNA2 Series

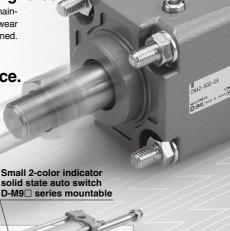

Magnetic field resistant 2-color indicator solid state auto switch D-P3DW□ series mountable

emergency stops and drop prevention




An equal holding force can be obtained on either reciprocating stroke of the cylinder.



Max. piston speed: 1000 mm/s It can be used at 50 to 1000 mm/s provided that it is within the allowable kinetic energy range.

Manual override for unlocking

Even if the air supply is blocked or exhausted, lock release is possible. The fail safe mechanism locks again when the manual override is released.

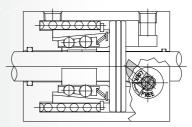

Design minimizes the influences of unlocking air quality.

A construction which is strong against moisture and drainage in the compressed air has been realized by separating the locking mechanism and the unlocking chamber.

■ Series Variations

= 361	ics v	ariatioi	13					
			Standard	variations	Locking type		Max.	
Series	Action	Туре	Auto switch built-in magnet	With bellows	Spring locking	Bore size (mm)	stroke (mm)	
		Single rod	1			40	800	
Cylinder		CNA2 series	_	_		50	4000	
with lock CNA2	Double acting				-	63	1200	
series	uoung	Double rod CNA2W		_		80	1400	
		series		T	T	100	1500	
			_	_	_			

Applicable Auto Switches

Reed	Band mounting	D-B54/B64, D-B59W, D-A3□ D-A44
switch	Tie-rod mounting	D-A9□, D-A54/A64, D-A59W D-A3□C, D-A44C
Solid state	Band mounting	D-G5□/K59, D-G5NTL D-G5□W/K59W, D-G5BAL D-G59F, D-G39/K39
auto switch	Tie-rod mounting	D-M9□, D-M9□W, D-M9□AL D-J51, D-F5NTL, D-F59F D-G39C/K39C, D-P3DW

SMC

D-□ -X□

CLJ2
CLM2
CLG1
CL1
MLGC
CNG
MNB
CNA2
CNS
CLS
CLQ
BL0

MLU

MLGP

ML1C

CNA2 Series

Model Selection


Precautions on Model Selection

 In order that the originally selected maximum speed is not exceeded, be certain to use a speed controller to adjust the total movement distance of the load so that movement takes place in no less than the applicable movement time.

The movement time is the time that is necessary for the load to travel the total movement distance from the start without any intermediate stops.

In cases where the cylinder stroke and the movement distance of the load are different (double speed mechanism, etc.), use the movement distance of the load for selection purposes.

Example)

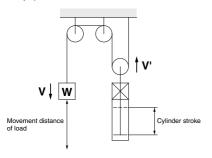

3. The following selection example and procedures are based on use at the intermediate stop (including emergency stops during the operation). However, when the cylinder is in the locked state such as drop prevention, kinetic energy does not act upon it. Under these conditions, use the load weight at the maximus speed (V) of 100 mm/s shown in Chart (5) to (7) on page 921 depending on the operating pressure and select models.

Selection Example

Load mass: m = 50 kg
 Movement distance: st = 500 mm
 Movement time: t = 2 s

 Load condition: Vertical downward = Load in direction of rod extension

• Operating pressure: **P** = 0.4 MPa

Step (1): From Chart (1) find the maximum movement speed of the load

∴ Maximum speed V ≈ 350 mm/s


Step (2): Select Chart (6) based upon the load conditions and operating pressure, and then from the intersection of the maximum speed **V** = 350 mm/s found in Step (1), and the load mass **m** = 50 kg.

 $\stackrel{.}{.}$ ø63 \rightarrow Decided the bore size CNA2 \square 63 or more.

Step (1) Find the maximum load speed V.

Find the maximum load speed: V (mm/s) from the load movement time: t (s) and the movement distance: st (mm).



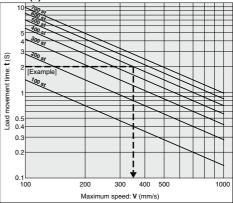


Step (2) Find the bore size.

Select a chart based upon the load condition and operating pressure, and then find the point of intersection for the maximum speed found in Step (1) and the load mass. Select the bore size on the line above the point of intersection.


Load Condition

Operating Pressure

Load in the direction at the right angle to rod



Load in the direction of rod extension Load in the direction of rod retraction





Model Selection CNA2 Series

CLJ2

CLM2

CLG1

CL₁

MLGC CNG MNB

CNA2

CNS

CLS

CLQ


RLQ


MLU


MLGP


ML1C


Selection Chart

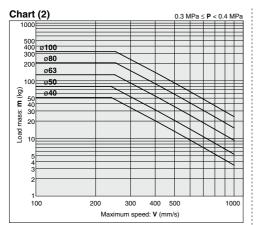


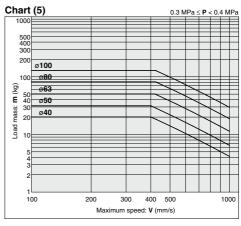

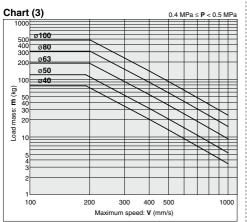

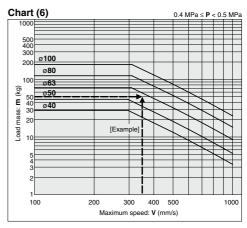

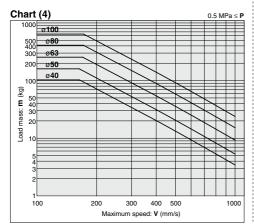

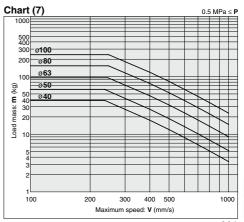


D-□

-**X**□

Cylinder with Lock Double Acting, Single Rod CNA2 Series Ø40, Ø50, Ø63, Ø80, Ø100

How to Order

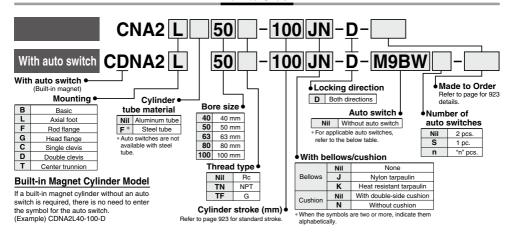

Applicable Auto Switches/Refer to peges 1119 to 1245 for further information on auto switches.

		Electrical	ight	Wiring	L	oad volta	ge	Auto swit	ch model	Lead v	vire le	ngth	(m)	Pre-wired		
Туре	Special function	entry	Indicator light	(Output)	D	C	AC	Tie-rod mounting	Band mounting	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	connector	Applical	ble load
				3-wire (NPN)				M9N	_	•	•	•	0	0		
					F V 40 V		_	G59	•	-	•	0	0	IC circuit		
		Grommet		3-wire (PNP)	24 V	5 V, 12 V		M9P	_	•	•	•	0	0	IC circuit	
		Grommet		3-wile (Fivi)	24 V		_	_	G5P	•	-	•	0	0		
				2-wire		12 V		M9B	_	•	•	•	0	0		
_		Terminal				12 V		_	K59	•	-	•	0	0	-	
Solid state auto switch				3-wire (NPN)		12 V		G39C G39	_	1-	_	<u> </u>	_			
š		conduit		2-wire		· · · ·		K39C	K39	_	<u> </u>	_	<u> </u>	_		
ĕ	Diagnostic indication (2-color indicator)			3-wire (NPN)	wiro (NDN)			M9NW	_	•	•	•	0	0	IC circuit	
an			Yes			5 V, 12 V	12 V	_	G59W	•	<u> </u>	•	0	0		Relay,
ē.			103	3-wire (PNP)	1, 12		M9PW	_	•	•	•	0	0	1 1	PLC	
sta				o wile (i ivi)					G5PW	•	<u> </u>	•	0	0		
₽				2-wire 24 V	24 V	12 V		M9BW	_	•	•	•	0	0		
So		Grommet			12 4			K59W	•	<u> </u>	•	0	0	4		
		aronnince		3-wire (NPN)		5 V. 12 V		M9NA*1	_	0	0	•	0	0		
	Water resistant			3-wire (PNP)		-	12 V	M9PA*1		0	0	•	0	0		
	(2-color indicator)			2-wire	2-wire			M9BA*1		0	0	•	0	0		
									G5BA*1		<u> </u>	•	0	0		
	With diagnostic output (2-color indicator)]		4-wire (NPN)		5 V, 12 V]	F59F	G59F	•	<u> - </u>	•	0	0	IC circuit	
	Magnetic field resistant (2-color indicator)			2-wire (Non-polar)		_		P3DWA	_	•	<u> </u>	•	•	0		
			Yes	3-wire (NPN equivalent)		5 V	_	A96	_	•	<u> </u>	•	_	_	IC circuit	_
듯							100 V	A93	_	•	•	•	•	_	_	
ž		Grommet	_				100 V or less	A90		•	<u> </u>	•	_		IC circuit	Relay,
S	<u></u>		Yes				100 V, 200 V	A54	B54	•	<u> </u>	•	•	_	PLC PLC	PLC
율			No	2-wire	24 V	12 V	200 V or less	A64	B64	•	<u> - </u>	•	<u> -</u>	_		
a		Terminal		2 WIIC	24 4			A33C	A33	_	<u> </u>	_	_	_		
Reed auto switch		conduit	Yes				100 V. 200 V	A34C	A34	_	1-	三	<u> </u>	_		Relay,
Œ		DIN terminal	1			100 V	100 V, 200 V	A44C	A44		1=	Ξ	1=	-		PLC
	Diagnostic indication (2-color indicator)	Grommet				_	_	A59W	B59W	•	I —		l —	-		. 20

- *1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.
- Consult with SMC regarding water resistant types with the above model numbers.

 * Lead wire length symbols: 0.5 m ---- Nil (Example) M9NW * Solid state auto switches marked with "O" are produced upon receipt of order.
 - 1 m ···· M (Example) M9NWM
 - 3 m ····· L (Example) M9NWL 5 m ···· Z (Example) M9NWZ
- * Since there are other applicable auto switches than listed, refer to page 947 for details.

 * For details about auto switches with pre-wired connector, refer to pages 1192 and 1193.
- * The D-A9II/M9IIIII/P3DWAI auto switches are shipped together, (but not assembled). (Only auto switch mounting brackets are assembled at the time of shipment for the

D-A9□/M9□□□.)

Cylinder with Lock CNA2 Series



Specifications

5	40		-00	00	400		
Bore size (mm)	40	50	63	80	100		
Lubrication		Not re	quired (Non	ı-lube)			
Action	Double acting						
Proof pressure	1.5 MPa						
Max. operating pressure	1.0 MPa						
Min. operating pressure	e 0.08 MPa						
Piston speed		50	to 1000 mm	/s *			
Ambient and fluid temperature	Without auto switch: -10 to 70°C (No freezing) With auto switch: -10 to 60°C (No freezing)						
Cushion			Air cushion		- 3/		
Stroke length tolerance	Up to 250: +1.0 , 251 to 1000: +1.4 , 1001 to 1500: +1.8						
Mounting	Basic, Axial foot, Rod flange, Head flange, Single clevis, Double clevis, Center trunnion						

^{*} Load limits exist depending on the piston speed when locked, mounting direction and operating pressure.

Made to Order Click here for details

Symbol	Specifications
-XA□	Change of rod end shape
-XC3	Special port location
-XC4	With heavy duty scraper
-XC11	Dual stroke cylinder/Single rod
-XC14	Change of trunnion bracket mounting position
-XC15	Change of tie-rod length
-XC35	With coil scraper

Refer to pages 942 to 947 for cylinders with auto switches.

- · Minimum stroke for auto switch mounting
- · Auto switch proper mounting position (detection at stroke end) and mounting height
- Operating range
- · Auto switch mounting bracket/Part no.

Minimum mountable stroke for a cylinder with auto switch(es)

1. Each switch and mounting type of cylinder has different minimum mountable stroke. Be careful especially of the center trunnion type.

(Refer to pages 944 and 945 for details.)

Lock Specifications

Bore size (mm)	40	50	63	80	100		
Locking action	Spring locking (Exhaust locking)						
Unlocking pressure	re 0.25 MPa or more						
Lock starting pressure	0.20 MPa or less						
Max. operating pressure	1.0 MPa						
Locking direction			Both directi	ons			
Holding force (Maximum static load) N*	882	1370	2160	3430	5390		

^{*} The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. So, select an appropriate cylinder while referring to page 920.

For cases with auto switches, refer to the table of minimum stroke for Standard Stroke auto switch mounting on pages 944 and 945.

Bore size (mm)	Standard stroke (mm) Note 1)	Long stroke (mm) Note 2)
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	800
50, 63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	1200
80, 100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700	ø80: 1400 ø100: 1500

Note 1) Intermediate strokes other than the above are produced upon receipt of order. Spacers are not used for intermediate strokes.

Note 2) Long stroke applies to the axial foot and the rod flange. When exceeding the stroke range for each bracket, determine the maximum stroke referring to the Selection Table (Best Pneumatics No. 2-1).

Stopping Accuracy

					(mm)
	Look tupo		Piston spe	ed (mm/s)	
	Lock type	100	300	500	1000
	Spring locking	±0.3	±0.6	±1.0	±2.0

Condition: Lateral, Supply pressure P = 0.5 MPaLoad weight Upper limit of allowed value Solenoid valve for locking mounted on the unlocking port Maximum value of stopping position dispersion from 100 measurements

> -X□ 923 A

D-□

CLJ2 CLM2 CLG1 CL1 MLGC CNG MNB

CNA2

CNS

CLS CLQ RLO MI II MLGP

ML1C



Mounting Bracket/Part No.

Bore size (mm)	40	50	63	80	100
Axial foot *	CA2-L04	CA2-L05	CA2-L06	CA2-L08	CA2-L10
Flange	CA2-F04	CA2-F05	CA2-F06	CA2-F08	CA2-F10
Single clevis	CA2-C04	CA2-C05	CA2-C06	CA2-C08	CA2-C10
Double clevis **	CA2-D04	CA2-D05	CA2-D06	CA2-D08	CA2-D10

^{*} When ordering axial foot bracket, order 2 pieces per cylinder.

Bellows Material

Symbol	Bellows material	Max. ambient temperature		
J	Nylon tarpaulin	70°C		
K	Heat resistant tarpaulin	110°C *		

^{*} Maximum ambient temperature for bellows itself

Accessories

Mounting		Basic	Axial foot	Rod flange	Head flange	Single clevis	Double clevis	Center trunnion
Standard	Rod end nut	•	•	•	•	•	•	•
equipment	Clevis pin	_	_	_	_	_	•	_
	Single knuckle joint	•	•	•	•	•	•	•
Option	Double knuckle joint (With pin)	•	•	•	•	•	•	•
	With bellows	•	•	•	•	•	•	•

^{*} For details about part numbers and dimensions, refer to page 934. (For rod boots, refer to page 927.)

Weight

							(kg)
	Bore size (mm)		40	50	63	80	100
	Basic	Aluminum tube	1.65	2.59	3.94	7.05	10.37
	Dasic	Steel tube	1.70	2.65	3.98	7.21	10.58
	Axial foot	Aluminum tube	1.84	2.63	4.28	7.72	11.36
	Axiai ioot	Steel tube	1.89	2.67	4.32	7.88	11.57
	Flonge	Aluminum tube	2.02	2.86	4.73	8.50	12.29
Basic weight	Flange	Steel tube	2.07	2.90	4.77	8.66	12.50
basic weight	Single clevis	Aluminum tube	1.88	2.75	4.57	8.16	12.15
		Steel tube	1.93	2.79	4.61	8.32	12.36
	Double clevis	Aluminum tube	1.92	2.84	4.73	8.45	12.67
		Steel tube	1.97	2.88	4.77	8.61	12.88
	Center trunnion	Aluminum tube	2.10	2.94	4.83	8.75	12.77
	Center trummon	Steel tube	2.20	3.04	5.03	9.04	13.16
Additional weight per	Mounting bracket	Aluminum tube	0.20	0.25	0.31	0.46	0.58
each 50 mm of stroke	Woulding bracket	Steel tube	0.28	0.35	0.43	0.70	0.87
Accessory bracket	Single knuckle joint		0.23	0.26	0.26	0.60	0.83
Accessory Diacket	Double knuckle joint (With pin)	0.37	0.43	0.43	0.87	1.27

Calculation: (Example) CNA2L40-100-D Basic weight 1.84 (Axial foot, Ø40)




^{**} Accessories for each mounting bracket are as follows.

Foot, Flange, Single clevis: Body mounting nuts, spring washer

Double clevis: Body mounting nuts, Spring washer, Clevis pin, Cotter pin, Flat washer, Split pin

Cylinder with Lock CNA2 Series

Construction Principle

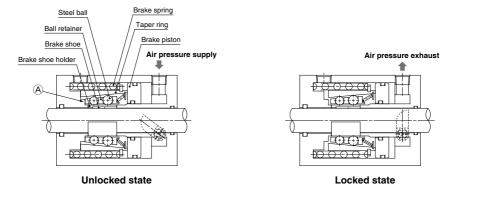

Spring locking (Exhaust locking)

The spring force which acts upon the taper ring is magnified by a wedge effect, and is conveyed to all of the numerous steel balls which are arranged in two circles. These act on the brake shoe holder and brake, which lock the piston rod by tightening against it with a large force.

Unlocking is accomplished when air pressure is supplied to the unlocking port. The brake piston and taper ring oppose the spring force, moving to the left side, and the ball retainer strikes the cover section A. The braking force is released as the steel balls are removed from the taper ring by the ball retainer.

CLJ2

CLM2

CLG1

MLGC

CNG

MNB

CNA2

CNS

CLS

CLQ RLQ

MLU

MLGP


ML1C

D-□ -x□




CNA2 Series

Construction

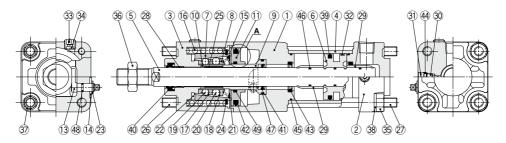

A section (Release piston bushing)









Component Parts

No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Metallic painted after hard anodized
2	Head cover	Aluminum alloy	Metallic painted
3	Cover	Aluminum alloy	Metallic painted after chromated
4	Cylinder tube	Aluminum alloy	Hard anodized
5	Piston rod	Carbon steel	Hard chrome plated
6	Piston	Aluminum alloy	Chromated
7	Taper ring	Bearing steel	Heat treated
8	Ball retainer	Special resin	
9	Piston guide	Carbon steel	Zinc chromated
10	Brake shoe holder	Special steel	Heat treated
11	Release piston	Aluminum alloy	Hard anodized (ø40, ø50, ø63)
_''	neicase pisiOII	Additionally	Chromated (ø80, ø100)
12	Release piston bushing	Steel + Special resin	Only ø80, ø100
13	Unlocking cam	Chromium molybdenum steel	Zinc chromated
14	Washer	Rolled steel	Zinc chromated
15	Retainer pre-load spring	Stainless steel wire	
16	Brake spring	Steel wire	Zinc chromated
17	Clip A	Stainless steel	
18	Clip B	Stainless steel	
19	Steel ball A	Bearing steel	
20	Steel ball B	Bearing steel	
21	Tooth ring	Stainless steel	
22	Bumper	Urethane	
23	Type C retaining ring for unlocking cam shaft	Carbon tool steel	
24	Type C retaining ring for taper ring	Carbon tool steel	
25	Brake shoe	Special friction material	
26	Unit holding tie-rod	Carbon steel	Chromated
27	Tie-rod	Carbon steel	Zinc chromated
28	Bushing	Bearing alloy	
29	Cushion ring	Aluminum alloy	Anodized
30	Cushion valve	Steel wire	Electroless nickel plated
31	Stop ring	Steel for spring	
32	Wear ring	Special resin	
33	Hexagon socket head plug	Carbon steel	

Component Parts

No.	Description	Material	Note
34	Element	Bronze	
35	Tie-rod nut	Rolled steel	
36	Rod end nut	Rolled steel	
37	Spring washer	Steel wire	
38	Spring washer	Steel wire	
39	Piston seal	NBR	
40	Rod seal A	NBR	
41	Rod seal B	NBR	
42	Release piston seal	NBR	
43	Cushion seal	Urethane	
44	Cushion valve seal	NBR	
45	Tube gasket	NBR	
46	Piston gasket	NBR	
47	Piston guide gasket	NBR	
48	Unlocking cam gasket	NBR	
49	O-ring	NBR	

Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
40	MB1-40Z-PS	
50	MB1-50Z-PS	
63	MB1-63Z-PS	Including 39, 40, 43, 45.
80	MB1-80Z-PS	
100	MB1-100Z-PS	


^{*} Since the lock cannot be disassembled and is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.

Order with the following part number when only the grease pack is needed. Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)

^{*} Seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).

Cylinder with Lock CNA2 Series

Dimensions

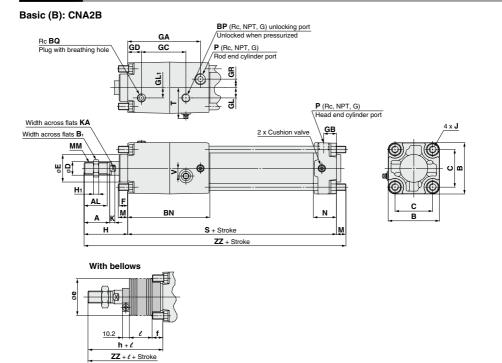

																							(mm)
Bore size (mm)	Stroke range (mm)	Α	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	Н	Hı	J	κ
40	Up to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10

									(mm)
Bore size (mm)	KA	М	ММ	N	Р	s	Т	٧	zz
40	14	11	M14 x 1.5	27	1/4	153	37.5	9	215
50	18	11	M18 x 1.5	30	3/8	168	44	11	237
63	18	14	M18 x 1.5	31	3/8	182	52.5	12	254
80	22	17	M22 x 1.5	37	1/2	218	59.5	15	306
100	26	17	M26 x 1.5	40	1/2	246	69.5	15	335

With Be	llows					(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	zz
40	20 to 500	43	11.2	59	1/4 stroke	223
50	20 to 600	52	11.2	66	1/4 stroke	245
63	20 to 600	52	11.2	66	1/4 stroke	262
80	20 to 750	65	12.5	80	1/4 stroke	315
100	20 to 750	65	14	81	1/4 stroke	344

D-□ -X□

CLJ2 CLM2

CLG1

CL1

MLGC

MNB

CNA2

CNS

CLS

CLQ RLQ MLU MLGP


ML1C


SMC


CNA2 Series

Dimensions

Axial foot (L): CNA2L



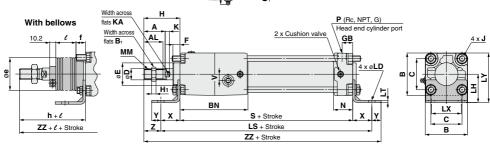

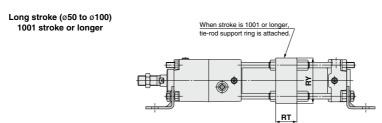


																							(mm)
Bore size (mm)	Stroke range (mm)	A	AL	В	Bı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	н	Нı	J	к
40	Up to 800	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 1200	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 1200	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 1400	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 1500	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10

																			(mm)
Bore size (mm)	KA	LD	LH	LS	LT	LX	LY	ММ	N	Р	RT	RY	s	т	V	х	Υ	z	ZZ
40	14	9	40	207	3.2	42	70	M14 x 1.5	27	1/4	_	_	153	37.5	9	27	13	24	244
50	18	9	45	222	3.2	50	80	M18 x 1.5	30	3/8	30	76	168	44	11	27	13	31	266
63	18	11.5	50	250	3.2	59	93	M18 x 1.5	31	3/8	40	92	182	52.5	12	34	16	24	290
80	22	13.5	65	306	4.5	76	116	M22 x 1.5	37	1/2	45	112	218	59.5	15	44	16	27	349
100	26	13.5	75	332	6.0	92	133	M26 x 1.5	40	1/2	50	136	246	69.5	15	43	17	29	378

With Be	llows					(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	ZZ
40	20 to 800	43	11.2	59	1/4 stroke	252
50	20 to 1200	52	11.2	66	1/4 stroke	274
63	20 to 1200	52	11.2	66	1/4 stroke	298
80	20 to 1400	65	12.5	80	1/4 stroke	358
100	20 to 1500	65	14	81	1/4 stroke	387

Cylinder with Lock CNA2 Series

Dimensions

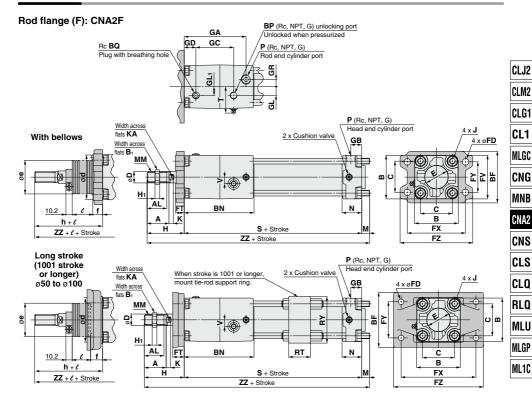

																											(mm)
Bore size (mm)	Stroke range (mm)	Α	AL	В	Вı	BF	BN	ВР	BQ	С	D	Е	FD	FT	F۷	FX	FY	FZ	GA	GB	GC	GD	GL	GL₁	GR	н	H ₁
40	Up to 800	30	27	60	22	71	96	1/8	1/8	44	16	32	9	12	60	80	42	100	85	15	50	16	12	12	10	51	8
50	Up to 1000	35	32	70	27	81	108	1/4	1/8	52	20	40	9	12	70	90	50	110	95	17	56	20	13	15	12	58	11
63	Up to 1000	35	32	86	27	101	115	1/4	1/4	64	20	40	11.5	15	86	105	59	130	102	17	65	20	18	12	15	58	11
80	Up to 1000	40	37	102	32	119	139	1/4	1/4	78	25	52	13.5	18	102	130	76	160	123	21	79.5	20	23	18	17	71	13
100	Up to 1000	40	37	116	41	133	160	1/4	1/4	92	30	52	13.5	18	116	150	92	180	144	21	93.5	22	25	20	19	72	16

											(mm)
Bore size (mm)	J	к	KA	М	мм	N	Р	s	т	v	zz
40	M8 x 1.25	6	14	11	M14 x 1.5	27	1/4	153	37.5	9	215
50	M8 x 1.25	7	18	11	M18 x 1.5	30	3/8	168	44	11	237
63	M10 x 1.25	7	18	14	M18 x 1.5	31	3/8	182	52.5	12	254
80	M12 x 1.75	10	22	17	M22 x 1.5	37	1/2	218	59.5	15	306
100	M12 x 1.75	10	26	17	M26 x 1.5	40	1/2	246	69.5	15	335

Long St	roke											(mm)
Bore size (mm)	Stroke range (mm)	BF	FD	FT	FX	FY	FZ	н	М	RT	RY	ZZ
50	1001 to 1200	88	9	20	120	58	144	67	6	30	76	241
63	1001 to 1200	105	11.5	23	140	64	170	71	10	40	92	263
80	1001 to 1400	124	13.5	28	164	84	198	87	12	45	112	317
100	1001 to 1500	140	13.5	29	180	100	220	89	12	50	136	347

With Be	llows						(mm)
Bore size (mm)	Stroke range (mm)	d*	е	f	h	e	ZZ
40	20 to 800	52	43	15	59	1/4 stroke	223
50	20 to 1000	58	52	15	66	1/4 stroke	245
63	20 to 1000	58	52	17.5	66	1/4 stroke	262
80	20 to 1000	80	65	21.5	80	1/4 stroke	315
100	20 to 1000	80	65	21.5	81	1/4 stroke	344

With Lo	ng Stroke B	ello	ws				(mm)
Bore size (mm)	Stroke range (mm)	d	e*	f	h	e	ZZ
50	1001 to 1200	58	52	19	66	1/4 stroke	240
63	1001 to 1200	58	52	19	66	1/4 stroke	258
80	1001 to 1400	80	65	21	80	1/4 stroke	310
100	1001 to 1500	80	65	21	81	1/4 stroke	339


^{*} When machining a hole to put a bellows through for mounting, make the hole larger than the O.D. ød of the bellows mounting bracket for the standard stroke and the bellows O.D. øe for a long stroke.




CNA2 Series

Dimensions

Head flange (G): CNA2G



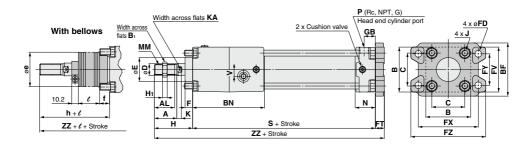

																											(mm)
Bore size (mm)	Stroke range (mm)	A	AL	В	В1	BF	BN	вР	BQ	С	D	E	F	FD	FT	FV	FX	FY	FZ	GA	GВ	GC	GD	GL	GL₁	GR	н
40	Up to 500	30	27	60	22	71	96	1/8	1/8	44	16	32	10	9	12	60	80	42	100	85	15	50	16	12	12	10	51
50	Up to 600	35	32	70	27	81	108	1/4	1/8	52	20	40	10	9	12	70	90	50	110	95	17	56	20	13	15	12	58
63	Up to 600	35	32	86	27	101	115	1/4	1/4	64	20	40	10	11.5	15	86	105	59	130	102	17	65	20	18	12	15	58
80	Up to 750	40	37	102	32	119	139	1/4	1/4	78	25	52	14	13.5	18	102	130	76	160	123	21	79.5	20	23	18	17	71
100	Up to 750	40	37	116	41	133	160	1/4	1/4	92	30	52	14	13.5	18	116	150	92	180	144	21	93.5	22	25	20	19	72


Bore size (mm)	H ₁	J	K	KA	ММ	N	Р	s	Т	v	ZZ
40	8	M8 x 1.25	6	14	M14 x 1.5	27	1/4	153	37.5	9	216
50	11	M8 x 1.25	7	18	M18 x 1.5	30	3/8	168	44	11	238
63	11	M10 x 1.25	7	18	M18 x 1.5	31	3/8	182	52.5	12	255
80	13	M12 x 1.75	10	22	M22 x 1.5	37	1/2	218	59.5	15	307
100	16	M12 x 1.75	10	26	M26 x 1.5	40	1/2	246	69.5	15	336


With Bel	lows					(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	l	ZZ
40	20 to 500	43	11.2	59	1/4 stroke	224
50	20 to 600	52	11.2	66	1/4 stroke	246
63	20 to 600	52	11.2	66	1/4 stroke	263
80	20 to 750	65	12.5	80	1/4 stroke	316
100	20 to 750	65	14	81	1/4 stroke	345

Cylinder with Lock CNA2 Series

Dimensions

Single clevis (C): CNA2C



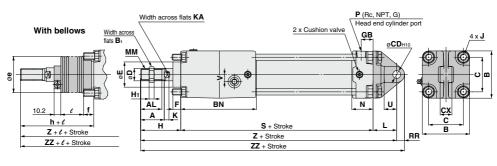

																						(111111)
Bore size (mm)	Stroke range (mm)	A	AL	В	Bı	BN	ВР	BQ	С	CD _{H10}	сх	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	н
40	Up to 500	30	27	60	22	96	1/8	1/8	44	10 °0.058	15 -0.1	16	32	10	85	15	50	16	12	12	10	51
50	Up to 600	35	32	70	27	108	1/4	1/8	52	12+0.070	18 -0.1	20	40	10	95	17	56	20	13	15	12	58
63	Up to 600	35	32	86	27	115	1/4	1/4	64	16+0.070	25 -0.1	20	40	10	102	17	65	20	18	12	15	58
80	Up to 750	40	37	102	32	139	1/4	1/4	78	20 0 0 0	31.5-0.1	25	52	14	123	21	79.5	20	23	18	17	71
100	Up to 750	40	37	116	41	160	1/4	1/4	92	25+0.084	35.5-0.1	30	52	14	144	21	93.5	22	25	20	19	72

															(mm)
Bore size (mm)	Hı	J	К	KA	L	мм	N	Р	RR	s	т	U	٧	z	ZZ
40	8	M8 x 1.25	6	14	30	M14 x 1.5	27	1/4	10	153	37.5	16	9	234	244
50	11	M8 x 1.25	7	18	35	M18 x 1.5	30	3/8	12	168	44	19	11	261	273
63	11	M10 x 1.25	7	18	40	M18 x 1.5	31	3/8	16	182	52.5	23	12	280	296
80	13	M12 x 1.75	10	22	48	M22 x 1.5	37	1/2	20	218	59.5	28	15	337	357
100	16	M12 x 1.75	10	26	58	M26 x 1.5	40	1/2	25	246	69.5	36	15	376	401

With Bell	ows						(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	z	zz
40	20 to 500	43	11.2	59	1/4 stroke	242	252
50	20 to 600	52	11.2	66	1/4 stroke	269	281
63	20 to 600	52	11.2	66	1/4 stroke	288	304
80	20 to 750	65	12.5	80	1/4 stroke	346	366
100	20 to 750	65	14	81	1/4 stroke	385	410

D-□ -X□

SMC

CLJ2

CLM2

CLG1 CL1 MLGC

MNB CNA2

CNS **CLS**

CLQ RLQ


MLU

MLGP

ML1C

CNA2 Series

Dimensions

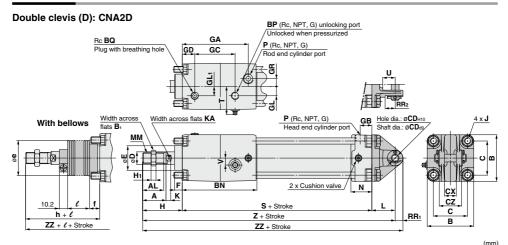


																										<u> </u>
Bore size (mm)	Stroke range (mm)	А	AL	В	Вı	BN	ВР	BQ	С	CD _{H10}	сх	cz	D	E	F	GA	GВ	GC	GD	GL	GL₁	GR	н	Hı	J	к
40	Up to 500	30	27	60	22	96	1/8	1/8	44	10+0.058	15 +0.3	29.5	16	32	10	85	15	50	16	12	12	10	51	8	M8×1.25	6
50	Up to 600	35	32	70	27	108	1/4	1/8	52	12+0.070	18 +0.3	38	20	40	10	95	17	56	20	13	15	12	58	11	M8×1.25	7
63	Up to 600	35	32	86	27	115	1/4	1/4	64	16+0.070	25 +0.3	49	20	40	10	102	17	65	20	18	12	15	58	11	M10×1.25	7
80	Up to 750	40	37	102	32	139	1/4	1/4	78	20+0.084	31.5 +0.3	61	25	52	14	123	21	79.5	20	23	18	17	71	13	M12×1.75	10
100	Up to 750	40	37	116	41	160	1/4	1/4	92	25 0 0 0	35.5 +0.3	64	30	52	14	144	21	93.5	22	25	20	19	72	16	M12×1.75	10

(mm)

Bore size (mm)	KA	L	мм	N	Р	RR ₁	RR2	s	т	U	v	z	ZZ
40	14	30	M14×1.5	27	1/4	10	16	153	37.5	16	9	234	244
50	18	35	M18×1.5	30	3/8	12	19	168	44	19	11	261	273
63	18	40	M18×1.5	31	3/8	16	23	182	52.5	23	12	280	296
80	22	48	M22×1.5	37	1/2	20	28	218	59.5	28	15	337	357
100	26	58	M26×1.5	40	1/2	25	23.5	246	69.5	36	15	376	401

,	With Bel	lows						(mm)
	Bore size (mm)	Stroke range (mm)	е	f	h	e	z	zz
	40	20 to 500	43	11.2	59	1/4 Stroke	242	252
	50	20 to 600	52	11.2	66	1/4 Stroke	269	281
	63	20 to 600	52	11.2	66	1/4 Stroke	288	304
	80	20 to 750	65	12.5	80	1/4 Stroke	346	366
	100	20 to 750	65	14	81	1/4 Stroke	385	410

Double Clevis Pivot Bracket

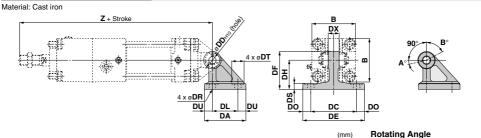

																(mm)
Part no.	Bore size (mm)	В	DA	DC	DD _{H10} (hole)	DE	DF	DH	DL	DO	DR	DS	DT	DU	DX	z
CA2-B04	40	60	57	65	10 +0.058	85	52	40	35	10	9	8	17	11	15	234
CA2-B05	50	70	57	65	12 *0.070	85	52	40	35	10	9	8	17	11	18	261
CA2-B06	63	85	67	80	16+0.070	105	66	50	40	12.5	11	10	22	13.5	25	280
CA2-B08	80	102	93	100	20 0 0 0 0	130	90	65	60	15	13.5	12	24	16.5	31.5	337
CA2-B10	100	116	93	100	25 +0.084	130	90	65	60	15	13.5	12	24	16.5	35.5	376


Note 1) There is no mention of c	vlinder nart number	Note 2) Order it s	enarately from cylinde	٦r

Bore size (mm)	Α°	В°	A° + B° + 90°
40			
50			
63	12°	60°	162°
80			
100			

^{*} Clevis pin, flat washer and split pin are shipped together.

Cylinder with Lock CNA2 Series

Dimensions

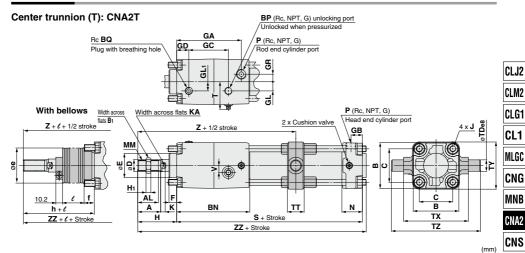


Bore size Stroke range Α В В1 BN ВP BQ С D Ε F GA GB GC GD GL GL₁ GR н Нı Κ KA MM (mm) (mm) 40 25 to 500 30 27 60 22 96 1/8 1/8 11 16 22 10 85 15 EΩ 16 12 12 10 51 8 M8 x 1.25 6 14 M14 x 1.5 M8 x 1.25 50 25 to 600 35 32 70 27 108 1/4 1/8 52 20 40 10 95 17 56 20 13 15 12 58 11 7 18 M18 x 1.5 63 32 to 600 86 27 115 1/4 1/4 64 20 40 10 102 17 20 18 12 15 11 M10 x 1.25 7 M18 x 1.5 M22 x 1.5 80 41 to 750 40 37 102 32 139 1/4 1/4 78 25 52 14 123 21 79.5 20 23 18 17 71 13 M12 x 1.75 10 22 100 45 to 750 116 41 160 1/4 1/4 52 14 144 93.5 20 19 16 M12 x 1.75 10 26 M26 x 1.5

												(111111)
Bore size (mm)	N	Р	s	т	TDe8	тт	тх	TY	TZ	٧	z	zz
40	27	1/4	153	37.5	15 -0.032	22	85	62	117	9	162	209
50	30	3/8	168	44	15 -0.032	22	95	74	127	11	181	232
63	31	3/8	182	52.5	18 -0.032	28	110	90	148	12	191	246
80	37	1/2	218	59.5	25 -0.040	34	140	110	192	15	231	296
100	40	1/2	246	69.5	25 -0.040	40	162	130	214	15	255	326

With Be	With Bellows (mm)														
Bore size (mm)	Stroke range (mm)	е	f	h	e	z	ZZ								
40	25 to 500	43	11.2	59	1/4 stroke	170	217								
50	25 to 600	52	11.2	66	1/4 stroke	189	240								
63	32 to 600	52	11.2	66	1/4 stroke	199	254								
80	41 to 750	65	12.5	80	1/4 stroke	240	305								
100	45 to 750	65	14	81	1/4 stroke	264	335								

Trunnion Pivot Bracket

Material: Cast iron

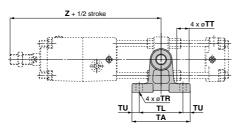

	ŢQ.	TE TX	ŢŌ	Ø TD H10 (hole)
4		TY TC		TST THT TT

																(mm)
Part no.	Bore size (mm)	TA	тс	TD _{H10} (hole)	TE	TF	тн	TL	то	TR	TS	тт	TU	тх	TY	z
CA2-S04	40	80	102	15 *0.070	119	60	45	60	17	9	12	17	10	85	62	162
CA2-304	50	80	112	15+0.070	129	60	45	60	17	9	12	17	10	95	74	181
CA2-S06	63	100	130	18 ^{+0.070}	150	73	55	70	20	11	14	22	15	110	90	191
MB-S10	80	120	166	25 *0.084	192	100	75	90	26	13.5	17	24	15	140	110	231
MD-210	100	120	188	25 *0.084	214	100	75	90	26	13.5	17	24	15	162	130	255

- Note 1) There is no mention of cylinder part number.
- Note 2) Order it separately from cylinder. Note 3) Two trunnion pivot brackets are needed per one cylinder.

D-□ -x□

CLS

CLQ

RLQ


MLGP ML1C



CNA2 Series

Accessory Bracket Dimensions


Y Type Double Knuckle Joint

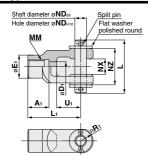

Materia	Material: Cast iron (mm)													
	Applicable bore size (mm)	A 1	D ₁	E1	L	Lı	ММ	ND	NX	NZ	Rı	U1	Split pin size	Flat washer size
Y-04D	40	22	10	24	55.5	55	M14 x 1.5	12	16+0.3	38	13	25	ø3 x 18 ℓ	Polished round 12
Y-05D	50, 63	27	14	28	55.5	60	M18 x 1.5	12	16+0.3	38	15	27	ø3 x 18ℓ	Polished round 12
Y-08D	80	37	18	36	76.5	71	M22 x 1.5	18	28+0.1	55	19	28	ø4 x 25 ℓ	Polished round 18
Y-10D	100	37	21	40	83	83	M26 x 1.5	20	30+0.3	61	21	38	ø4 x 30 ℓ	Polished round 20

^{*} Knuckel pin, split pin and flat washer are shipped together.


Clevis Pin/Knuckle Pin



Material: Carbon steel (mm)												
Part no.	Applicab	le bore size	Dd9	d	L	e	m	Applicable	Applicable			
i ditiio.	Clevis	Knuckle	Dus	Drill through	_	"		split pin	flat washer			
CDP-2A	40	_	10-0.040	3	46	38	4	ø3 x 18 ℓ	Polished round 10			
CDP-3A	50	40, 50, 63	12-0.050	3	55.5	47.5	4	ø3 x 18 ℓ	Polished round 12			
CDP-4A	63	_	16 ^{-0.050} _{-0.093}	4	71	61	5	ø4 x 25 ℓ	Polished round 16			
CDP-5A	_	80	18-0.050	4	76.5	66.5	5	ø4 x 25 ℓ	Polished round 18			
CDP-6A	80	100	20 -0.117	4	83	73	5	ø4 x 30 ℓ	Polished round 20			
CDP-7A	100	_	25 ^{-0.065} _{-0.117}	4	88	78	5	ø4 x 36 ℓ	Polished round 24			


^{*} Split pin and flat washer are attached.

I Type Single Knuckle Joint



Materia	Material: Sulfur free-cutting steel (mm)											
Part no.	Applicable bore size (mm)	А	Αı	Εı	Lı	ММ	ND H10	NX	Rı	U ₁		
I-04A	40	69	22	24	55	M14 x 1.5	12*0.070	16-0.1	15.5	20		
I-05A	50, 63	74	27	28	60	M18 x 1.5	12*0.070	16-0.1	15.5	20		
I-08A	80	91	37	36	71	M22 x 1.5	18*0.070	28-0.1	22.5	26		
I-10A	100	105	37	40	83	M26 x 1.5	20*0.084	30-0.1	24.5	28		

Rod End Nut (Standard equipment)



Material	Material: Rolled steel (mm)												
Part no.	Applicable bore size (mm)	В	С	D	d	н							
NT-04	40	22	25.4	21	M14 x 1.5	8							
NT-05	50, 63	27	31.2	26	M18 x 1.5	11							
NT-08	80	32	37.0	31	M22 x 1.5	13							
NT-10	100	41	47.3	39	M26 x 1.5	16							

CLJ2

CLM2

CLG1

CL1

MLGC

CNG MNB

CNA2

CNS

CLS

CLQ RLQ

MLU

MLGP


ML1C

D-□

-X□

Cylinder with Lock Double Acting, Double Rod CNA2W Series Ø40, Ø50, Ø63, Ø80, Ø100

How to Order

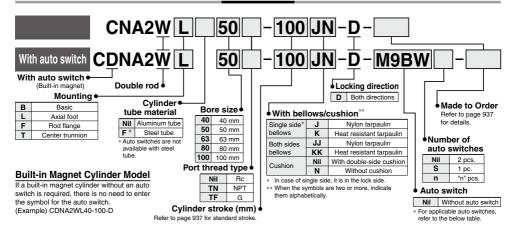

Applicable Auto Switches/Refer to pages 1119 to 1245 for further information on auto switches.

		Electrical	ig	Wiring	L	oad volta	ge	Auto swi	tch model	Lead v	vire le	ength	(m)	Pre-wired				
Type	Special function	entry	Indicatorlight	(Output)	D	C	AC	Tie-rod mounting	Band mounting	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	connector	Applical	ble load		
				a i Alban				M9N		•	•	•	0	0				
				3-wire (NPN)		F V 40 V		_	G59	•	-	•	0	0	IC circuit			
		Grommet		3-wire (PNP)	0414	5 V, 12 V		M9P	_	•	•	•	0	0	IC CIrcuit			
		Gionnie		3-WITE (FINE)	24 V		_	_	G5P	•	-	•	0	0				
				Queiro		12 V	1	M9B	_	•	•	•	0	0				
				2-wire		12 V		_	K59	•	-	•	0	0	-			
당		Terminal]	3-wire (NPN)		12 V		G39C	G39	_	I —	_	_	_				
W		conduit		2-wire		12 V		K39C	K39		-	-	-	_				
ő				3-wire (NPN)				M9NW	_	•	•	•	0	0				
anı			Yes			5 V, 12 V		_	G59W	•	-	•	0	0	IC circuit	Relay,		
ţ.	Diagnostic indication		103	3-wire (PNP)		J V, 12 V		M9PW	_		•	•	0	0		PLC		
sta	Diagnostic indication (2-color indicator)			3-wile (Fivi)			_	_	G5PW	•	_	•	0	0				
Þ				2-wire	24 V	V 12 V		M9BW	_	•	•	•	0	0				
So		Grommet			Z-7 V			_	K59W	•	_	•	0	0				
		Grommet	Grommet	Gromme		3-wire (NPN)		5 V. 12 V		M9NA*1		- 0	0	•	0	0	_	
	Water resistant			3-wire (PNP)		5 V, 12 V	-	M9PA*1		0	0	•	0	0				
	(2-color indicator)			2-wire	1	12 V		M9BA*1	_	0	0	•	0	0				
				-					G5BA*1		_	•	0	0				
	With diagnostic output (2-color indicator)			4-wire (NPN)		5 V, 12 V		F59F	G59F	•	_	•	0	0	IC circuit			
	Magnetic field resistant (2-color indicator)			2-wire (Non-polar)				P3DWA	_		_	•	•	0				
			Yes	3-wire (NPN equivalent)		5 V	_	A96			1=	•	1=		IC circuit	_		
당							100 V	A93		•	•	•	•	_				
Ň		Grommet	_				100 V or less	A90		•	<u> </u>	•	-	_	IC circuit	Relay,		
S			Yes				100 V, 200 V	A54	B54	•	-	•	•	_		PLC		
ž			No	2-wire	24 V	12 V	200 V or less	A64	B64	•	_	•	_					
Reed auto switch		Terminal		0				A33C	A33		1=	_	_		-	PLC		
e		conduit	Yes				100 V. 200 V	A34C	A34		1=	_	-			Relay,		
Œ		DIN terminal	1				,	A44C	A44		ㅗ	-	-			PLC		
	Diagnostic indication (2-color indicator)	Grommet					_	A59W	B59W		-		-	-				

- *1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.
- Consult with SMC regarding water resistant types with the above model numbers.

 * Lead wire length symbols: 0.5 m Nil (Example) M9NW

 * Solid state auto switches marked with "O" are produced upon receipt of order.
 - 1 m ····· M (Example) M9NWM 3 m ····· L (Example) M9NWL
 - 5 m ···· Z (Example) M9NWZ
- Since there are other applicable auto switches than listed, refer to page 947 for details.
 For details about auto switches with pre-wired connector, refer to peges 1192 and 1193
- * The D-A9□/M9□□□/P3DWA□ auto switches are shipped together, (but not assembled). (Only auto switch mounting brackets are assembled at the time of shipment for the

D-A9□/M9□□□.)

Cylinder with Lock CNA2W Series



Specifications

Bore size (mm)	40	50	63	80	100					
Fluid	Air									
Lubrication	Not required (Non-lube)									
Action		[ouble actin	g						
Lock operation		S	pring lockin	g						
Proof pressure	1.5 MPa									
Max. operating pressure			1.0 MPa							
Min. operating pressure			0.1 MPa							
Piston speed		50	to 1000 mm	/s *						
Ambient and fluid temperature			ch: –10 to 7 ch: –10 to 6	,	0,					
Cushion			Air cushion							
Stroke length tolerance	Up to 250: +1.0 , 251 to 1000: +1.4 , 1001 to 1500: +1.8									
Mounting	Basic, Axial foot, Rod flange, Center trunnion									
. I and Early and Administration		and the second second second second								

* Load limits exist depending on the piston speed when locked, mounting direction and operating pressure.

Made to Order Click here for details

Symbol	Specifications
-XC14	Change of trunnion bracket mounting position
-XC15	Change of tie-rod length

Refer to pages 942 to 947 for cylinders with auto switches.

- Minimum stroke for auto switch mounting
- · Auto switch proper mounting position (detection at stroke end) and mounting height
- Operating range
- · Auto switch mounting bracket/Part no.

Minimum mountable stroke for a cylinder with auto switch(es)

∕!\ Caution

1. Each switch and mounting type of cylinder has different minimum mountable stroke. Be careful especially of the center trunnion type.

(Refer to pages 944 and 945 for details.)

Lock Specifications

40	50	63	80	100				
Spring locking (Exhaust locking)								
0.25 MPa or more								
0.20 MPa or less								
		1.0 MPa						
	В	oth direction	ns					
882	1370	2160	3430	5390				
		Spring loc 0.25 0.2 B	Spring locking (Exhau 0.25 MPa or mo 0.20 MPa or le 1.0 MPa Both direction	Spring locking (Exhaust locking) 0.25 MPa or more 0.20 MPa or less 1.0 MPa Both directions				

* The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. So, select an appropriate cylinder while referring to page 920.

E

For cases with auto switches, refer to the table of minimum stroke for Standard Stroke auto switch mounting on pages 944 and 945.

Bore size (mm)	Standard stroke (mm)									
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500									
50, 63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600									
80, 100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700									

^{*} Intermediate strokes other than the above are produced upon receipt of order. Spacers are not used for intermediate strokes.

Stopping Accuracy

				(mm)
Lock type		Piston spe	eed (mm/s)	
	100	300	500	1000
Spring locking	±0.3	±0.6	±1.0	±2.0

Condition: Lateral, Supply pressure P = 0.5 MPa

Load weight Upper limit of allowed value

Solenoid valve for locking mounted on the unlocking port

Maximum value of stopping position dispersion from 100 measurements





937 A

CLM2 CLG1 CL1

CLJ2

MLGC

CNG MNB

> CNA2 CNS

CLS

CLQ RLQ

MLU MLGP

ML1C

CNA2W Series

Mounting Bracket/Part No.

Bore size (mm)	40	50	63	80	100
Axial foot *	CA2-L04	CA2-L05	CA2-L06	CA2-L08	CA2-L10
Flange	CA2-F04	CA2-F05	CA2-F06	CA2-F08	CA2-F10

^{*} When ordering axial foot bracket, order 2 pieces per cylinder.

Bellows Material

Symbol	Bellows material	Max. ambient temperature
J	Nylon tarpaulin	70°C
K	Heat resistant tarpaulin	110°C *

^{*} Maximum ambient temperature for bellows itself

Accessories

	Mounting	Basic	Axial foot	Flange	Center trunnion
Standard equipment	Rod end nut	•	•	•	•
	Single knuckle joint	•	•	•	•
Option	Double knuckle joint (With pin)	•	•	•	•
	With bellows	•	•	•	•

^{*} Accessory bracket dimensions are same as those of double acting, single rod type of the CNA2 series. (Refer to page 934.)

Weight

							(kg)
	Bore size (mm)		40	50	63	80	100
	Basic	Aluminum tube	1.80	2.83	4.22	7.54	11.12
	Basic	Steel tube	1.85	2.89	4.26	7.70	11.33
	Axial foot	Aluminum tube	1.99	2.87	4.56	8.21	12.11
Daniainkt	Axiai ioot	Steel tube	2.04	2.91	4.60	8.37	12.32
Basic weight	El	Aluminum tube	2.17	3.10	5.01	8.99	13.04
	Flange	Steel tube	2.22	3.14	5.05	9.15	13.25
	0	Aluminum tube	2.25	3.18	5.11	9.24	13.52
	Center trunnion	Steel tube	2.35	3.28	5.31	9.53	13.91
Additional weight per	Manuatia a laurados	Aluminum tube	0.28	0.37	0.44	0.66	0.86
each 50 mm of stroke	Mounting bracket	Steel tube	0.35	0.47	0.55	0.89	1.15
A a a a a a a r a b r a al c a t	Single knuckle joint		0.23	0.26	0.26	0.60	0.83
Accessory bracket	Double knuckle join	t (With pin)	0.37	0.43	0.43	0.87	1.27

1.99 + 0.28 x 100/50 = 2.55 kg


^{**} Accessories for each mounting bracket are as follows.

Foot/Flange type: Body mounting nuts, Spring washer


^{*} For details about part numbers and dimensions, refer to page 934. (For rod boots, refer to page 940.)

Cylinder with Lock CNA2W Series

Construction

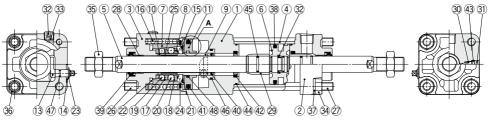

A section (Release piston bushing)



	nponent Parts		
No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Metallic painted after hard anodized
2	Rod cover	Aluminum alloy	Metallic painted
3	Cover	Aluminum alloy	Metallic painted after chromated
4	Cylinder tube	Aluminum alloy	Hard anodized
5	Piston rod	Carbon steel	Hard chrome plated
6	Piston	Aluminum alloy	Chromated
7	Taper ring	Bearing steel	Heat treated
8	Ball retainer	Special resin	
9	Piston guide	Carbon steel	Zinc chromated
10	Brake shoe holder	Special steel	Heat treated
11	Balanca nieton	Aluminum all	Hard anodized (ø40, ø50, ø63)
11	Release piston	Aluminum alloy	Chromated (ø80, ø100)
12	Release piston bushing	Steel + Special resin	Only ø80, ø100
13	Unlocking cam	Chromium molybdenum steel	Zinc chromated
14	Washer	Rolled steel	Zinc chromated
15	Retainer pre-load spring	Stainless steel wire	
16	Brake spring	Steel wire	Zinc chromated
17	Clip A	Stainless steel	
18	Clip B	Stainless steel	
19	Steel ball A	Bearing steel	
20	Steel ball B	Bearing steel	
21	Tooth ring	Stainless steel	
22	Bumper	Urethane	
23	Type C retaining ring for unlocking cam shaft	Carbon tool steel	
24	Type C retaining ring for taper ring	Carbon tool steel	
25	Brake shoe	Special friction material	
26	Unit holding tie-rod	Carbon steel	Chromated
27	Tie-rod	Carbon steel	Zinc chromated
28	Bushing	Bearing alloy	
29	Cushion ring	Aluminum alloy	Anodized
30	Cushion valve	Steel wire	Electroless nickel plated
31	Stop ring	Steel for spring	
32	Piston holder	Urethane	
33	Hexagon socket head plug	Carbon steel	

٧o.	Description	Material	Note
34	Element	Bronze	
35	Tie-rod nut	Rolled steel	
36	Rod end nut	Rolled steel	
37	Spring washer	Steel wire	
38	Spring washer	Steel wire	
39	Piston seal	NBR	
40	Rod seal A	NBR	
41	Rod seal B	NBR	
42	Release piston seal	NBR	
43	Cushion seal	Urethane	
44	Cushion valve seal	NBR	
45	Tube gasket	NBR	
46	Piston gasket	NBR	
47	Piston guide gasket	NBR	
48	Unlocking cam gasket	NBR	
49	O-ring	NBR	

Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
40	MBW 40-PS	
50	MBW 50-PS	
63	MBW 63-PS	Including 39, 40, 43, 45.
80	MBW 80-PS	
100	MBW100-PS	

- * Since the lock of the CNA2 series cannot be disassembled and is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * Seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).

Order with the following part number when only the grease pack is needed. Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)

> D-□ -X□



CLJ2 CLM2 CLG1

CL1

MLGC CNG

MNB

CNA2

CNS

CLS

CLQ


RLQ MLU

MLGP

ML1C

CNA2W Series


Dimensions

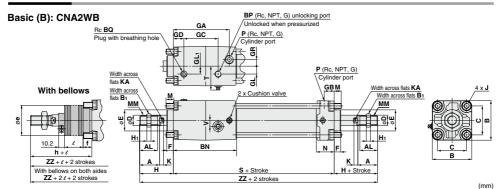

Bore size (mm)	Stroke range (mm)	A	AL	В	Вı	BN	ВР	ВQ	С	D	E	F	GA	GB	GC	GD	GL	GL ₁	GR	н	Ηı	J	κ
40	Up to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6
50	Up to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7
63	Up to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7
80	Up to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10
100	Up to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10

									(mm)
Bore size (mm)	KA	М	мм	N	Р	s	т	٧	zz
40	14	11	M14 x 1.5	27	1/4	153	37.5	9	255
50	18	11	M18 x 1.5	30	3/8	168	44	11	284
63	18	14	M18 x 1.5	31	3/8	182	52.5	12	298
80	22	17	M22 x 1.5	37	1/2	218	59.5	15	360
100	26	17	M26 x 1.5	40	1/2	246	69.5	15	390

With Bel	lows						(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	ZZ (Single side)	ZZ (Both sides)
40	20 to 500	43	11.2	59	1/4 stroke	263	271
50	20 to 600	52	11.2	66	1/4 stroke	292	300
63	20 to 600	52	11.2	66	1/4 stroke	306	314
80	20 to 750	65	12.5	80	1/4 stroke	369	378
100	20 to 750	65	14	81	1/4 stroke	399	408

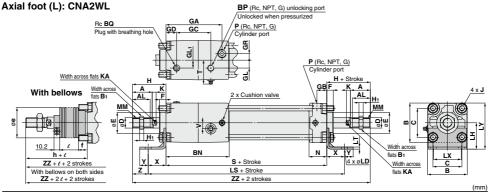

Bore size (mm)	Stroke range (mm)	Α	AL	В	Вı	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	н	Н1	J	ĸ	KA	LD	LH	LS
40	Up to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6	14	9	40	207
50	Up to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7	18	9	45	222
63	Up to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7	18	11.5	50	250
80	Up to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10	22	13.5	65	306
100	Up to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 x 1.75	10	26	13.5	75	332


												(mm)
Bore size (mm)	LT	LX	LY	мм	N	Р	s	T	٧	х	Υ	zz
40	3.2	42	70	M14 x 1.5	27	1/4	153	37.5	9	27	13	255
50	3.2	50	80	M18 x 1.5	30	3/8	168	44	11	27	13	284
63	3.2	59	93	M18 x 1.5	31	3/8	182	52.5	12	34	16	298
80	4.5	76	116	M22 x 1.5	37	1/2	218	59.5	15	44	16	360
100	6.0	92	133	M26 x 1.5	40	1/2	246	69.5	15	43	17	390

With	<u>Be</u>	llows						(mm)
Bore s (mm		Stroke range (mm)	е	f	h	e	ZZ (Single side)	ZZ (Both sides)
40)	20 to 500	43	11.2	59	1/4 stroke	263	271
50)	20 to 600	52	11.2	66	1/4 stroke	292	300
63	3	20 to 600	52	11.2	66	1/4 stroke	306	314
80)	20 to 750	65	12.5	80	1/4 stroke	369	378
100) _	20 to 750	65	14	81	1/4 stroke	399	408

940

Cylinder with Lock CNA2W Series


Dimensions

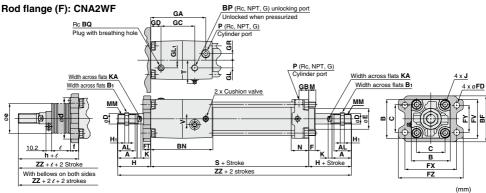

Bore size (mm)	Stroke range (mm)	A	AL	В	Bı	BF	BN	ВР	ВQ	С	D	Е	FD	FT	FV	FX	FY	FZ	GA	GВ	GC	GD	GL	GL ₁	GR	н	H ₁
40	Up to 500	30	27	60	22	71	96	1/8	1/8	44	16	32	9	12	60	80	42	100	85	15	50	16	12	12	10	51	8
50	Up to 600	35	32	70	27	81	108	1/4	1/8	52	20	40	9	12	70	90	50	110	95	17	56	20	13	15	12	58	11
63	Up to 600	35	32	86	27	101	115	1/4	1/4	64	20	40	11.5	15	86	105	59	130	102	17	65	20	18	12	15	58	11
80	Up to 750	40	37	102	32	119	139	1/4	1/4	78	25	52	13.5	18	102	130	76	160	123	21	79.5	20	23	18	17	71	13
100	Up to 750	40	37	116	41	133	160	1/4	1/4	92	30	52	13.5	18	116	150	92	180	144	21	93.5	22	25	20	19	72	16

											(111111)
Bore size (mm)	J	ĸ	KA	М	ММ	N	Р	s	Т	٧	ZZ
40	M8 x 1.25	6	14	11	M14 x 1.5	27	1/4	153	37.5	9	255
50	M8 x 1.25	7	18	11	M18 x 1.5	30	3/8	168	44	11	284
63	M10 x 1.25	7	18	14	M18 x 1.5	31	3/8	182	52.5	12	298
80	M12 x 1.75	10	22	17	M22 x 1.5	37	1/2	218	59.5	15	360
100	M12 x 1.75	10	26	17	M26 x 1.5	40	1/2	246	69.5	15	390

With Be	llows							(mm)
Bore size (mm)	Stroke range (mm)	d	е	f	h	ı	ZZ (Single side)	ZZ (Both sides)
40	20 to 500	52	43	15	59	1/4 stroke	263	271
50	20 to 600	58	52	15	66	1/4 stroke	292	300
63	20 to 600	58	52	17.5	66	1/4 stroke	306	314
80	20 to 750	80	65	21.5	80	1/4 stroke	369	378
100	20 to 750	80	65	21.5	81	1/4 stroke	399	408

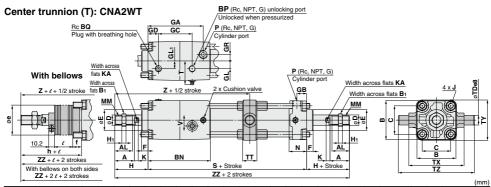

	Bore size (mm)	Stroke range (mm)	A	AL	В	В1	BN	ВР	BQ	С	D	E	F	GA	GB	GC	GD	GL	GL₁	GR	н	Нı	J	K	KA	ММ	N
	40	25 to 500	30	27	60	22	96	1/8	1/8	44	16	32	10	85	15	50	16	12	12	10	51	8	M8 x 1.25	6	14	M14 x 1.5	27
i	50	25 to 600	35	32	70	27	108	1/4	1/8	52	20	40	10	95	17	56	20	13	15	12	58	11	M8 x 1.25	7	18	M18 x 1.5	30
	63	32 to 600	35	32	86	27	115	1/4	1/4	64	20	40	10	102	17	65	20	18	12	15	58	11	M10 x 1.25	7	18	M18 x 1.5	31
Ī	80	41 to 750	40	37	102	32	139	1/4	1/4	78	25	52	14	123	21	79.5	20	23	18	17	71	13	M12 x 1.75	10	22	M22 x 1.5	37
	100	45 to 750	40	37	116	41	160	1/4	1/4	92	30	52	14	144	21	93.5	22	25	20	19	72	16	M12 v 1 75	10	26	M26 v 1 5	40

Bore size (mm)	Р	s	т	TDe8	тт	тх	TY	ΤZ	v	z	zz
40	1/4	153	37.5	15 -0.032	22	85	62	117	9	162	255
50	3/8	168	44	15 -0.032	22	95	74	127	11	181	284
63	3/8	182	52.5	18 -0.032	28	110	90	148	12	191	298
80	1/2	218	59.5	25 -0.040	34	140	110	192	15	231	360
100	1/2	246	69.5	25 -0.040	40	162	130	214	15	255	390

With Be	ellows								(mm)
Bore size (mm)	Stroke range (mm)	е	f	h	e	Z (Single side)	ZZ (Single side)	Z (Both sides)	ZZ (Both sides)
40	25 to 500	43	11.2	59	1/4 stroke	170	263	170	271
50	25 to 600	52	11.2	66	1/4 stroke	189	292	189	300
63	32 to 600	52	11.2	66	1/4 stroke	199	306	199	314
80	41 to 750	65	12.5	80	1/4 stroke	240	369	240	378
100	45 to 750	65	14	81	1/4 stroke	264	399	264	408

941

CLJ2

CLM2

CL1

MLGC

MNB

CNA2

CNS

CLS

CLQ RLQ

MLU

MLGP


ML1C

D-□ -x□

CNA2 Series Auto Switch Mounting 1

Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height




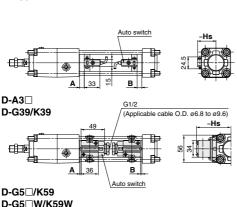


D-G5BA
D-G59F/G5NT




D-A44




<Tie-rod mounting> D-M9 | M9 | V D-Z7 | Z80 D-M9 | W/M9 | WV D-Y59 | Y69 | Y7P/Y7PV D-M9 | A/M9 | AV D-Y7 | W/Y7 | WV D-A9 | A9 | V D-Y7BA







D-A3□C D-G39C/K39C





D-F5□/J59 D-F5□W/J59W D-F5NT D-F5BA/F59F



D-A44C

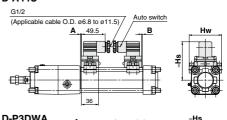





Auto Switch Mounting CNA2 Series

Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height

Auto Switch Proper Mounting Position (mm) D-A5 D-A6 D-A3 Auto D-B59W D-Z7□ D-Z80 D-G5□ switch D-M9 D-F5□ D-K59 model D-M9□V D-J59 D-A3□C D-A44 D-A44C D-G5NT D-M9□W D-A9□ D-B5□ D-F59F D-P3DWA D-P4DW D-F5NT D-G5□W D-A59W D-M9□WV D-A9□V D-B64 D-F5□W D-K59W D-G39C D-M9□A D-.159W D-G5RA D-M9□AV D-F5BA D-K39 D-K39C D-G59F D-Y7BA Bore В В Α В Α В Α В Α В Α В Α В Α В Α В Α В Α size (mm) Δ 10 6 4 4 5.5 3.5 3.5 7 4 4.5 1.5 12 9 8 1 0.5 0.5 0 2.5 0 0 50 10 8 6 3.5 5.5 3.5 0 0 0.5 0 2 0 4 2 11.5 9.5 4 1.5 3 6.5 4.5 63 12.5 11.5 8.5 7.5 6 5 8 7 5.5 4.5 2.5 1.5 3 2 9 8 4.5 3.5 6.5 5.5 14 13 80 16 14 12 9.5 7.5 9.5 4 6.5 4.5 12.5 10.5 10 17.5 15.5 10 11.5 9 6 8 6 8 100 17.5 16.5 13.5 12.5 10 13 12 10.5 9.5 7.5 6.5 Я 14 13 9.5 8.5 11.5 10.5 19 18 11 7

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto Switch Mounting Height

D-B5 D-B64 D-B59W D-G5 D-K59 D-G5NT D-Z7□ switch model D-M9□ D-Z80 D-M9□V D-Y69□ D-A3□ D-A5□ D-M9□W D-Y59□ D-M9□WV D-A9□V D-Y7PV D-P3DWA D-P4DW D-G39 D-A6□ D-A44 D-M9□A D-Y7P D-K39 D-M9□AV D-Y7□WV D-A59W D-G5□W D-K59W D-A9□ D-Y7BA D-V7 W D-G5BA D-G59F Bore Hs Ht Hs size (mm) Ht Hs Ht Hs Ht Hs H Hs Hs Ht Hs Ht Hs Hs Hs Ht 40 30 30 34 30 31 30 30 30 30 30 37.5 35 42.5 33 37 71.5 81.5 38.5 31.5 50 34 34 38 34 35 34 34 34 34 34 41.5 39 46.5 37.5 42 76.5 86.5 42 35.5 63 41 41 44 41 41.5 41 41 41 41 41 50 41 52 43 49 83.5 93.5 46.5 43 80 49.5 49 52.5 49 50 49 49.5 49 49.5 49 58 49 58.5 51.5 57.5 92 102 53.5 51 100 56.5 56 61 58.5 56.5 55.5 57.5 55.5 66 56 66 58.5 68 102.5 112.5 61.5 57.5

SMC

Auto switch model	D-J:	59 5□W 59W 5BA 59F	D-A: D-G: D-K:	39C	D-A	44C
size (mm)	Hs	Ht	Hs	Hw	Hs	Hw
40	38	31.5	73	69	81	69
50	42	35.5	78.5	77	86.5	77
63	47	43	85.5	91	93.5	91
80	53.5	51	94	107	102	107
100	61	57.5	104	121	112	121

CLJ2

CLM2 CLG1

CL1

MLGC

(mm)

MNB

CNA2

CLS

CLQ RLQ

MLU

MLGP

ML1C

CNA2 Series Auto Switch Mounting 2

Minimum Stroke for Auto Switch Mounting

							n: Number of auto	switches (mm)
Auto switch model		lumber of auto	Mounting brackets			Center trunnion		, ,
Auto switch model	_	vitches mounted	other than center trunnion	ø 40	ø 50	ø 63	ø 80	ø100
		Different surfaces, Same surface), 1	15		75	90	100	110
D-A9□		n	$15 + 40 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8) Note 1)	75 (n = 4.6	+ 40 \frac{(n-4)}{2} i, 12, 16) Note 2)	90 + 40 (n - 4) (n - 4 9 12 16) Note2)	100 + 40 (n - 4) (n = 4, 8, 12, 16) Note 2)	110 + 40 (n - 4) (n - 4 8 12 16) Note 2)
		Different surfaces, Same surface), 1	10	(11 = 4, 0	75	90	100	110
D-A9□V	F	n	10 + 30 (n-2)	75	+ 30 (n - 4)	90 + 30 (n - 4)	100 + 30 (n - 4)	110 + 30 (n - 4)
		"	(n = 2, 4, 6, 8) Note 1)		3, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16) Note2)
D-M9□		Different surfaces, Same surface), 1	15		80	95	110	115
D-M9□W D-M9□A		n	15 + 40 (n-2) (n = 2, 4, 6, 8···) Note 1)		+ 40 (n - 4) 2 3, 12, 16···) Note 2)	95 + 40 (n - 4) (n - 4 8 12 16) Note 2)	110 + 40 (n - 4) (n = 4, 8, 12, 16···) Note 2)	115 + 40 (n - 4) (n = 4 8 12 16) Note 2)
D-M9□V		Different surfaces,	10	(11 – 4, 6	80	95	110	115
D-M9□WV	H	Same surface), 1	10 + 30 (n - 2)	90	+ 30 (n - 4)	95 + 30 (n - 4)	110 + 30 (n - 4)	115 . 30 (n - 4)
D-M9□AV		n	(n = 2, 4, 6, 8···) Note 1)		s, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)
D-A5□/A6□ D-F5□/J5□		Different surfaces, Same surface), 1	15		90	100	110	120
D-F5□W/J59W		(Same surface)	15 + 55 (n - 2)	90	+ 55 (n - 4)	100 + 55 (n-4)	110 + 55 (n - 4)	$120 + 55 \frac{(n-4)}{2}$
D-F5BA/F59F	_	<u> </u>	(n = 2, 4, 6, 8) Note 1)	(n = 4, 8	i, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)
		Different surfaces, Same surface), 1	20		90	100	110	120
D-A59W	n (Same surface)		20 + 55 (n - 2) (n = 2, 4, 6, 8···) Note 1)	90 (n = 4, 8	+ 55 (n - 4) 3, 12, 16) Note 2)	100 + 55 (n - 4) (n = 4, 8, 12, 16) Note 2)	110 + 55 (n - 4) (n = 4, 8, 12, 16···) Note 2)	120 + 55 (n - 4) (n = 4, 8, 12, 16···) Note 2)
	Н	1	15	(11 - 1, 0	90	100	110	120
		Different surfaces, Same surface), 1	25		110	120	130	140
D-F5NT	n	(Same surface)	$25 + 55 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8) Note 1)		0 + 55 \frac{(n-4)}{2} 1, 12, 16) Note 2)	120 + 55 (n - 4) (n = 4, 8, 12, 16···) Note 2)	130 + 55 (n - 4) (n = 4, 8, 12, 16···) Note 2)	140 + 55 \frac{(n-4)}{2} (n = 4, 8, 12, 16) Note 2)
D-B5□/B64	2	Different surfaces Same surface	15 75		90	100		10
D-G5□/K59 D-G5□W		Different surfaces	15 + 50 (n - 2)		+ 50 (n-4)	100 + 50 (n - 4)	110 + 5	
D-K59W D-G5BA	n	1	(n = 2, 4, 6, 8, ···) Note 1)		, 12, 16, ···) Note 2)	(n = 4, 8, 12, 16, ···) Note 2)		, 16···) Note 2)
D-G59F D-G5NT	Ш	Same surface	75 + 50 (n - 2) (n = 2, 3, 4, ···)	90 (n = 2,	+ 50 (n - 2) 4, 6, 8, ···) Note 1)	100 + 50 (n - 2) (n = 2, 4, 6, 8, ···) Note 1)	(n = 2, 4, 6,	0 (n – 2) 8, ···) Note 1)
		1 Different surfaces	10 20		90	100	1	10
	2	Same surface	75		90	100		10
		Different surfaces	20 + 50 (n-2)	90	+ 50 (n-4)	$100 + 50 \frac{(n-4)}{2}$	110 + 5	0 (n-4) 2
D-B59W	n		(n = 2, 4, 6, 8, ···) Note 1) 75 + 50 (n - 2)		+ 50 (n - 2)	(n = 4, 8, 12, 16, ···) Note 2) 100 + 50 (n - 2)		16, ···) Note 2) 0 (n – 2)
	Ш	Same surface	(n = 2, 3, 4, ···)	(n = 2,	4, 6, 8, ···) Note 1)	(n = 2, 4, 6, 8, ···) Note 1)	(n = 2, 4, 6,	8,) Note 1)
		Different surfaces	15 35		90	100	'	10
	2	Same surface	100		100	100	1	10
D-A3□ D-G39	Ĺ	Different surfaces	35 + 30 (n - 2) (n = 2, 3, 4, ···)		+ 30 (n – 2) 4, 6, 8, ···) Note 1)	100 + 30 (n - 2) (n = 2, 4, 6, 8, ···) Note 1)		0 (n – 2) 8, ···) Note 1)
D-K39	L"	Same surface	100 + 100 (n - 2) (n = 2, 3, 4, ···)	100	+ 100 (n – 2) 4, 6, 8, ···) Note 1)	100 + 100 (n - 2) (n = 2, 4, 6, 8, ···) Note 1)		00 (n – 2) 8, ···) ^{Note 1)}
	匚	1	10		100	100	1	10
	2	Different surfaces Same surface	35 55		100	100	1:	10
D-A44		Different surfaces	35 + 30 (n - 2) (n = 2, 3, 4, ···)	100 (n = 2,	+ 30 (n – 2) 4, 6, 8, ···) Note 1)	100 + 30 (n - 2) (n = 2, 4, 6, 8, ···) Note 1)	110 + 3 (n = 2, 4, 6,	0 (n – 2) 8,) Note 1)
	n	Same surface	55 + 50 (n - 2) (n = 2, 3, 4, ···)	100	+ 50 (n – 2) 4, 6, 8, ···) Note 1)	100 + 50 (n - 2) (n = 2, 4, 6, 8, ···) Note 1)	110 + 5	0 (n – 2) 8, ···) Note 1)
		1	10		100	100	1	10

Note 1) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation. Note 2) When "n" is an odd number, a multiple of 4 that is larger than this odd number is used for the calculation.



Auto Switch Mounting CNA2 Series

Minimum Stroke for Auto Switch Mounting

							n: Number of auto	switches (mm)
Auto switch model		Number of auto	Mounting brackets			Center trunnion		
Auto Switch model	s	witches mounted	other than center trunnion	ø 40	ø 50	ø 63	ø 80	ø100
	2	Different surfaces	20	10	00	100	1:	20
		Same surface	100			100		-0
D-A3□C		Different surfaces	20 + 35 (n - 2)		5 (n – 2)	100 + 35 (n - 2)		5 (n – 2)
D-G39C	n	Dinoroni oundood	(n = 2, 3, 4, ···)		8, ···) Note 1)	(n = 2, 4, 6, 8, ···) Note 1)	(n = 2, 4, 6,	8, ···) Note 1)
D-K39C	l	Same surface	100 + 100 (n - 2)		00 (n – 2)	100 + 100 (n - 2) (n = 2, 4, 6, 8, ···) Note 1)	120 + 10	
			(n = 2, 3, 4, 5···)		(n = 2, 4, 6, 8, ···) Note 1)			8, ···) Note 1)
		1	10	11	00	100	1:	20
	2	Different surfaces	20	10	00	100	1:	20
	Ľ	Same surface	55					
		Different surfaces	20 + 35 (n - 2)		5 (n – 2)	100 + 35 (n - 2)	120 + 3	
D-A44C	l n	Dinordin danadoo	(n = 2, 3, 4, ···)		8, ···) Note 1)	(n = 2, 4, 6, 8, ···) Note 1)		8,) Note 1)
		Same surface	55 + 50 (n - 2)		0 (n – 2)	100 + 50 (n - 2)	120 + 5	
	<u> </u>		(n = 2, 3, 4, ···)		8,) Note 1)	(n = 2, 4, 6, 8, ···) Note 1)		
	_	1	10	11	00	100	1:	20
D-Z7□/Z80		(Different surfaces, Same surface), 1	15	80	85	90	95	105
D-Y59□/Y7P D-Y7□W		n		_	85 + 40 (n-4)	-	-	
			(n = 2, 4, 6, 8···) Note 1)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16) Note 2)
D-Y69□/Y7PV		(Different surfaces, Same surface), 1	10	65		75	80	90
D-Y7□WV		n	10 + 30 (n - 2)	65 + 30 (n-4)		75 + 30 (n - 4)		-
			(n = 2, 4, 6, 8···) Note 1)	(n = 4, 8, 12, 16···) Note 2)		(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)
		(Different surfaces, Same surface), 1	20		95	100	105	110
D-Y7BA		n	20 + 45 (n - 2)	95 + 45	2		105 + 45 (n - 4)	
			(n = 2, 4, 6, 8···) Note 1)	(n = 4, 8, 12, 16···) Note 2)		(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)
		(Different surfaces, Same surface), 1	15	85			95	100
D-P3DWA		n	15 + 50 (n-2)		85 + 50 (n-4)		95 + 50 (n-4)	100 + 50 (n - 4)
			(n = 2, 4, 6, 8···) Note 1)	(r	n = 4, 8, 12, 16···) Note	2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)
		(Different surfaces, Same surface), 1	15	1:	20	130	1	40
D-P4DW		n	15 + 65 (n-2) 2	120 + 6	2	130 + 65 (n - 4)	140 + 6	-
			(n = 2, 4, 6, 8···) Note 1)	(n = 4, 8, 12	., 16···) Note 2)	(n = 4, 8, 12, 16···) Note 2)	(n = 4, 8, 12	, 16···) Note 2)

Note 1) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

Note 2) When "n" is an odd number, a multiple of 4 that is larger than this odd number is used for the calculation.

D-□ -X□

CLJ2
CLM2
CLG1
CL1
MLGC
CNG
MNB
CNA2
CLS
CLQ
RLQ
MLU
MLGP



CNA2 Series **Auto Switch Mounting 3**

Operating Range

Auto switch model	Bore size					
Auto switch model	40	50	63	80	100	
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV	4.5	5	5.5	5	6	
D-A9□/A9□V	7.5	8.5	9.5	9.5	10.5	
D-Z7□/Z80	8.5	7.5	9.5	9.5	10.5	
D-A3□/A44 D-A3□C/A44C D-A5□/A6□ D-B5□/B64	9	10	11	11	11	
D-A59W	13	13	14	14	15	
D-B59W	14	14	17	16	18	
D-Y59□/Y69□ D-Y7P/Y7□V D-Y7□W/Y7□WV D-Y7BA	8	7	5.5	6.5	6.5	


					(mm)	
Auto switch model	Bore size					
Auto switch model	40	50	63	80	100	
D-F5□/J59/F59F D-F5□W/J59W D-F5BA/F5NT	4	4	4.5	4.5	4.5	
D-G5□/K59/G59F D-G5□W/K59W D-G5NT/G5BA	5	6	6.5	6.5	7	
D-G5NB	35	35	40	40	40	
D-G39/K39 D-G39C/K39C	9	9	10	10	11	
D-P3DWA	4.5	4.5	5.5	5.5	5.5	
D-P4DW	4	4	4.5	4	4.5	

^{*} Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately ±30% dispersion) There may be the case it will vary substantially depending on the ambient environment

Auto Switch Mounting Bracket/Part No.

<Tie-rod mounting>

Auto switch model	Bore size (mm)						
Auto switch model	ø 40	ø 50	ø 63	ø 80	ø100		
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV D-A9□/A9□V	BA7-040	BA7-040	BA7-063	BA7-080	BA7-080		
D-A5□/A6□/A59W D-F5□/J59/F5□W/J59W D-F5NT/F5BA/F59F	BT-04	BT-04	BT-06	BT-08	BT-08		
D-A3 C/A44C/G39C/K39C	BA3-040	BA3-050	BA3-063	BA3-080	BA3-100		
D-Z7□/Z80 D-Y59□/Y69□ D-Y7P/Y7PV D-Y7□W/Y7□WV D-Y7BA	BA4-040	BA4-040	BA4-063	BA4-080	BA4-080		
D-P3DWA	BK7-040S	BK7-040S	BA10-063S	BA10-080S	BA10-080S		
D-P4DW	BAP2-040	BAP2-040	BAP2-063	BAP2-080	BAP2-080		

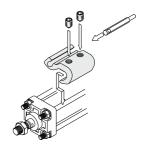

. The above figure shows the mounting example of the D-A9 \square (V)/M9 \square (V)/M9 \square W(V)/M9 \square A(V).

<Band mounting>

Auto switch model	Bore size (mm)					
Auto switch model	40	50	63	80	100	
D-A3□/A44 D-G39/K39	BDS-04M	BDS-05M	BMB1-063	BMB1-080	BMB1-100	
D-B5□/B64 D-B59W D-G5□/K59 D-G5□/K59W D-G59F D-G5NT D-G5NT	BH2-040	BA5-050	BAF-06	BAF-08	BAF-10	

^{*} Auto switch mounting bracket is attached to the D-A3□C/A44C/G39C/K39C. To order, indicate as shown below, according to the cylinder size.

[Mounting screw set made of stainless steel]

The following mounting screw set made of stainless steel (including set screw) is available. Use it in accordance with the operating environment. (Order the auto switch mounting bracket and band separately, since they are not included.)

BBA1: For D-A5/A6/F5/J5 types

Note 2) When using the D-M9□A/D-M9□AV/Y7BA, do not use the steel set screws included in the auto switch mounting brackets above (BA7-□□□, BA4-□□□). Order a stainless steel screw set (BBA1) separately, and select and use the M4 x 6L stainless steel set screws included in the BBA1.



⁽Example) ø40: D-A3□C-4, ø50: D-A3□C-5

ø63: D-A3□C-6, ø80: D-A3□C-8, ø100: D-A3□C-10

To order the auto switch mounting bracket separately, use the part number as shown above.

BBA3: For D-B5/B6/G5/K5 types The D-F5BA/G5BA auto switches are set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, the BBA1

or BBA3 is attached. Note 1) Refer to pages 1225 and 1233 for details about the BBA1 and BBA3.

Auto Switch Mounting CNA2 Series

Other than the applicable auto switches listed in "How to Order", the following auto switches can be mounted. For detailed specifications, refer to pages 1119 to 1245.

Auto switch type	Model	Electrical entry	Features
	D-A93V, A96V	0	_
Reed	D-A90V	Grommet (Perpendicular)	Without indicator light
neeu	D-A53, A56, B53, Z73, Z76	Comment (In East)	_
	D-A67, Z80	Grommet (In-line)	Without indicator light
	D-M9NV, M9PV, M9BV		
	D-Y69A, Y69B, Y7PV		_
	D-M9NWV, M9PWV, M9BWV	Grommet (Perpendicular)	Discountia indication (O calculation)
	D-Y7NWV, Y7PWV, Y7BWV		Diagnostic indication (2-color indicator)
	D-M9NAV, M9PAV, M9BAV		Water resistant (2-color indicator)
Solid state	D-Y59A, Y59B, Y7P		
Solid State	D-F59, F5P, J59		_
	D-Y7NW, Y7PW, Y7BW		Discountial indication (O colonia discotors)
	D-F59W, F5PW, J59W	Grommet (In-line)	Diagnostic indication (2-color indicator)
	D-F5BA, Y7BA		Water resistant (2-color indicator)
	D-F5NT, G5NT		With timer
	D-P4DW, P5DW		Magnetic field resistant (2-color indicator)

* With pre-wired connector is available for solid state auto switches. For details, refer to pages 1192 and 1193.

* Normally closed (NC = b contact), solid state auto switches (D-F9G/F9H/Y7G/Y7H) are also available. For details, refer to pages 1137 and 1139.

* Wide range detection solid state auto switch (D-G5NB) is also available. For details, refer to page 1182.

CLJ2

CLM2

CLG1

MLGC

CNG

MNB

CNA2

CNS

CLS

CLQ

RLQ

MLU

ML1C

D-□ -X□





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Design of Equipment and Machinery

⚠ Warning

1. Construct so that the human body will not come into direct contact with driven objects or the moving parts of locking cylinders.

Devise a safe structure by attaching protective covers that prevent direct contact with the human body, or in cases where there is a danger of contact, provide sensors or other devices to perform an emergency stop, etc., before contact occurs.

2. Use a balance circuit, taking cylinder lurching into consideration.

In cases such as an intermediate stop, where a lock is operated at a desired position within the stroke and air pressure is applied from only one side of the cylinder, the piston will lurch at high speed when the lock is released. In such situations, there is a danger of causing human injury by having hands or feet, etc., caught, and also a danger for causing damage to the equipment. In order to prevent this lurching, a balance circuit such as the recommended pneumatic circuits (pages 949 and 950) should be used.

Selection

Marning


1. When in the locked state, do not apply a load accompanied by an impact shock, strong vibration or turning force, etc.

Use caution, because an external action such as an impacting load, strong vibration or turning force, may damage the locking mechanism or reduce its life.

2. Consider stopping accuracy and the amount of overrun when an intermediate stop is performed.

Due to the nature of a mechanical lock, there is a momentary lag with respect to the stop signal, and a time delay occurs before stopping. The cylinder stroke resulting from this delay is the overrun amount. The difference between the maximum and minimum overrun amounts is the stopping accuracy.

- · Place a limit switch before the desired stopping position, at a distance equal to the overrun amount.
- . The limit switch must have a detection length (dog length) of the overrun amount $+ \alpha$.
- · For SMC's auto switches, the operating range is between 4 and 40 mm. (It varies depending on a switch model.) When the overrun amount exceeds this range, selfholding of the contact should Stop be performed at the auto switch load side

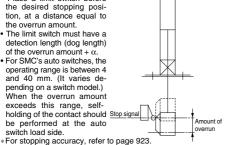

3. In order to further improve stopping accuracy, the time from the stop signal to the operation of the lock should be shortened as much as possible.

To accomplish this, use a device such as a highly responsive electric control circuit or solenoid valve driven by direct current, and place the solenoid valve as close as possible to the cylinder.

Selection

⚠ Warning

4. Note that the stopping accuracy will be influenced by changes in piston speed.

When piston speed changes during the course of the cylinder stroke due to variations in the load or disturbances, etc., the dispersion of stopping positions will increase. Therefore, consideration should be given to establishing a standard speed for the piston just before it reaches the stopping position.

Moreover, the dispersion of stopping positions will increase during the cushioned portion of the stroke and during the accelerating portion of the stroke after the start of operation, due to the large changes in piston speed.

5. The holding force (max. static load) indicates the maximum capability to hold a static load without loads, vibration and impact. This does not indicate a load that can be held in ordinary conditions.

Select the most suitable bore sizes for the operating conditions in accordance with the selection procedures. The Model Selection (pages 920 and 921) is based on use at the intermediate stop (including emergency stops during the operation). However, when the cylinder is in a locked state, kinetic energy does not act upon it. Under these conditions, use the load weight at the maximum speed (V) of 100 mm/s shown in Chart (5) to (7) on page 921 depending on the operating pressure and select models.


Mounting

⚠ Warning

- 1. Be certain to connect the rod end to the load with the lock released.
 - · If connected in the locked state, a load greater than the turning force or holding force, etc., may operate on the piston rod and cause damage to the lock mechanism. The CNA2 series is equipped with an emergency unlocking mechanism; however, when connecting the rod end to the load, this should be done with the lock released. This can be accomplished by simply connecting an air line to the unlocking port and supplying air pressure of 0.25 MPa or

1. Do not apply offset loads to the piston rod.

Particular care should be taken to match the load's center of gravity with the center of the cylinder shaft. When there is a large discrepancy, the piston rod may be subjected to uneven wear or damage due to the inertial moment during locking stops.



X Load center of gravity and cylinder shaft center are not matched

 Load center of gravity and cylinder shaft center are matched

Note) Can be used if all of the generated moment is absorbed by an effective guide.



Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Mounting


2. Caution when using the basic type or replacing the mounting bracket.

The lock unit and cylinder rod cover are assembled as shown in the figure below. For this reason, it cannot be installed as in the case of common air cylinders, by using the basic type and screwing the cylinder tie-rods directly to machinery.

Furthermore, when replacing mounting brackets, the unit holding tie-rods may get loosen. Tighten them once again in such a case.

Use a socket wrench for replacing the mounting bracket or tightening the unit holding tie-rod.

Bore size	Mour	iting brad	Unit holding tie-rod		
(mm)	Nut	Width across flats	Width across flats Socket a		Socket
40, 50	JIS B 1181 Class 3	13 JIS B 4636		10	JIS B 4636 socket 10
40, 50	M8 x 1.25	13	socket 13	13	JIS B 4636 socket 13
63	JIS B 1181 Class 3 M10 x 1.25	17	JIS B 4636 socket 17	13	JIS B 4636 socket 13
80, 100	JIS B 1181 Class 3 M12 x 1.25	19	JIS B 4636 socket 19	17	JIS B 4636 socket 17



Adjustment

⚠ Caution

- Adjust air balance for cylinder. Balance the load by adjusting the air pressure in the cylinder rod end and head end after the lock is released when the load is mounted on cylinder. When you have this air balance, cylinder ejection at lock release can be avoided.
- Adjust mounting position for detection area of auto switch, etc. When intermediate stop is done, adjust the mounting position for detection area of auto switch, etc., with consideration of overrun distance to required stop position.

Operating Precautions

⚠ Caution

1. Do not open the cushion valve beyond the stopper. A retaining ring is installed as a cushion valve retention mechanism. Do not open the cushion valve beyond it. If not operated in accordance with the above precautions, the cushion valve may be ejected from the cover when air pressure is supplied.

Bore size (mm)	Width across flats	Hexagon wrench
40,50	2.5	JIS 4648 Hexagon wrench key 2.5
63,80,100	4	JIS 4648 Hexagon wrench key 4

Use the air cushion at the end of cylinder stroke. Otherwise, the tie-rod or piston rod assembly will be damaged.

⚠ Caution

 Do not rotate the piston rod when the rod boot is fixed.

Before rotating the piston rod, loosen the band to avoid twisting the rod boot.

Install the rod boot with the breathing hole facing downwards or in a direction suitable to prevent dust, moisture etc. from entering easily into the rod boot.

Pneumatic Circuit

∕ Warning

 Be certain to use an pneumatic circuit which will apply balancing pressure to both sides of the piston when in a locked stop.

In order to prevent cylinder lurching after a lock stop, when restarting or when manually unlocking, a circuit should be used to which will apply balancing pressure to both sides of the piston, thereby canceling the force generated by the load in the direction of piston movement.

2. The effective area of the lock release solenoid valve should be at least 50% of the effective area of the cylinder driving solenoid valve, and it should be installed as close to the cylinder as possible so that it is closer than the cylinder driving solenoid valve.

If the effective area of the lock release solenoid valve is smaller than the cylinder driving solenoid valve or if it is installed at a distance from the cylinder, the time required for exhausting air for releasing the lock will be longer, which may cause a delay in the locking operation.

The delay in the locking operation may result in problems such as increase of overrunning when performing intermediate stop or emergency stop during operation, or if maintaining position from the operation stop state such as drop prevention, workpieces may be dropped depending on the timing of the load action to the operation delay of the lock.

D-□

CLJ2

CLM2

CLG1

CL₁

MLGC

CNG

MNB

CNA₂

CNS

CLS

CLQ

RLO

MLGP ML1C





Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Pneumatic Circuit

⚠ Warning

3. Avoid backflow of the exhaust pressure when there is a possibility of interference of exhaust air, for example for a common exhaust type valve manifold.

The lock may not operate properly when the exhaust air pressure backflows due to interference of the exhaust air when exhausting air for lock release. It is recommended to use an individual exhaust type manifold or individual valves.

4. Allow at least 0.5 seconds from a locked stop (intermediate stop of the cylinder) until release of the lock.

When the locked stop time is too short, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.


5. When restarting, control the switching signal for the unlocking solenoid valve so that it acts before or at the same time as the cylinder drive solenoid valve.

If the signal is delayed, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.

6. Carefully check for dew condensation due to repeated air supply and exhaust of the locking solenoid valve.


The operating stroke of the lock part is very small. So, if the piping is long and the air supply and exhaust are repeated, the dew condensation caused by the adiabatic expansion accumulates in the lock part. This may corrode internal parts, causing air leak or lock release fault.


7. Basic circuit





2. [Vertical] [Load in the direction of rod extension]





SOLA SOLB SOLC Action ON ON OFF Extensi OFF OFF OFF Locked stop

ON OFF OFF Unlocked

ON ON OFF Extension

ON OFF ON Retractio

OFF OFF OFF Locked stop

ON OFF OFF Unlocked ON OFF ON Retraction 0 to 0.5 s

0.5 s or more


0.5 s or more

0 to 0.5 s

* The symbol for the cylinder with lock in the basic circuit uses SMC original symbol.


∕ Caution

1. 3-position pressure center solenoid valve and regulator with backflow function can be replaced with two 3-port normally open valves and a regulator with relief function.



[Example]


1. [Horizontal]



2. [Vertical]

[Load in the direction of rod extension]

[Load in the direction of rod retraction]



The symbol for the cylinder with lock in the pneumatic circuit uses SMC original symbol.



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Manually Unlocking

⚠ Warning


- 1. Never operate the unlocking cam until safety has been confirmed. (Do not turn to the FREE side.)
 - When unlocking is performed with air pressure applied to only one side of the cylinder, the moving parts of the cylinder will lurch at high speed causing a serious hazard.
 - When unlocking is performed, be sure to confirm that personnel are not within the load movement range and that no other problems will occur if the load moves.
- 2. Before operating the unlocking cam, exhaust any residual pressure which is in the system.
- Take measures to prevent the load from dropping when unlocking is performed.
 - Perform work with the load in its lowest position.
 - . Take measures for drop prevention by strut, etc.

⚠ Caution

- The unlocking cam is an emergency unlocking mechanism only. During an emergency when the air supply is stopped or cut off, this is used to alleviate a problem by forcibly pushing back the release piston and brake spring to release the lock.
- When installing the cylinder into equipment or performing adjustments, etc., be sure to apply air pressure of 0.25 MPa or more to the unlocking port, and do not perform work using the unlocking cam.
- When releasing the lock with the unlocking cam, it must be noted that the internal resistance of the cylinder will be high, unlike normally unlocking with air pressure.

Bore size (mm)	Cylinder internal resistance (N)	Cam operating torque (guide) (N·m)	Width across flats dimension (mm)
40	108	5.9	5
50	275	11.8	6
63	432	12.8	7
80	686	20.6	7
100	765	23.5	9

- 4. Be sure to operate the unlocking cam (the arrow or mark on the head part of the unlocking cam) on the FREE side and do not turn with a torque greater than the maxmum cam operating torque. There is a danger of damaging the unlocking cam if it is turned excessively.
- For safety reasons, the unlocking cam is constructed so that it cannot be fixed in the unlocked state.



Locked state

Manually unlocked state

[Principle]

If the unlocking cam is turned counterclockwise with a tool such as an adjustable angle wrench, the release piston is pushed back and the lock is released. Since the lever will return to its original position when released and become locked again, it should be held in this position for as long as unlocking is needed.

D-□ -x□



CLM2

CLJ2

CL1

MLGC

CNG MNB

CNA2

CNS

CLS

RLQ

MLU MLGP

ML1C



Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Maintenance


⚠ Caution

1. Never disassemble the lock unit.

It is very dangerous to disassemble the lock unit of the CNA2 series because it has a strong spring installed inside, so never disassemble the lock unit. Replace the lock unit if the seal or other internal parts need to be replaced.

2. Lock unit model

To order the CNA2 series lock units for maintenance, use the order numbers given in the below table.




 The lock unit for long stroke is applicable only to the flange type with 1001 stroke or longer whose bore size is ø50 to ø100.
 (Example: CNA2-100D-UAL)

2. How to replace lock units


 Loosen the tie-rod nuts (4 pcs.) on the cylinder head cover side by using a socket wrench.

For applicable socket, refer to the below table.

Bore size (mm)	Nut	Width across flats dimension	Socket
40, 50	JIS B 1181 Class 2 M8 x 1.25	13	JIS B 4636 socket 13
63	JIS B 1181 Class 2 M10 x 1.25	17	JIS B 4636 socket 17
80, 100	JIS B 1181 Class 2 M12 x 1.75	19	JIS B 4636 socket 19

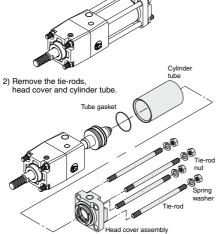


Apply 0.3 MPa or more of compressed air to the unlocking port, and pull out the piston rod assembly.

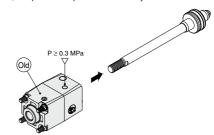

Similarly, apply 0.3 MPa or more of compressed air to the unlocking port of the new lock unit, and replace the new lock unit's temporary axis with the previous piston rod assembly.

Note) Be sure to keep applying compressed air with a pressure of at least 0.3 MPa to the lock releasing port when replacing the temporary rod of a new lock unit with a piston rod assembly.

If the compressed air applied to the lock releasing port is released (when it is in the lock condition) while the temporary rod and the piston rod assembly are removed from the lock unit, the brake shoe will be deformed and it will become impossible to insert the piston rod assembly, which will make the lock unit impossible to use.

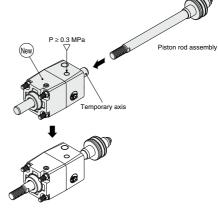

5) Reassemble in reverse order from step 2) to 1).

Disassembly/Replacement

⚠ Caution

1. Do not disassemble the trunnion type cylinder, as it requires accuracy in assembly.

For the trunnion type cylinder, it is difficult to align the axial center of the trunnion with that of the cylinder. If the trunnion type cylinder is disassembled and reassembled, the specified dimensional accuracy cannot be obtained, causing malfunction. So, it is recommended to ask SMC for repair.

