

# Circulating Fluid Temperature Controller Thermo-chiller

## HRS Series

### Standard Type



(UL Standards)

Lightweight/Compact  
Temperature stability  $\pm 0.1^{\circ}\text{C}$

HRS012/018/024

HRS030

HRS040

HRS050/HRS060



Same width for all models: 377 mm

Model	Size [mm]	Weight	Cooling capacity (60 Hz)	Set temperature range
HRS012	W 377 x H 615 x D 500	40 kg	1300 W	5 to 40°C
HRS018			1900 W	
HRS024			2400 W	
HRS030	W 377 x H 660 x D 500	47 kg	3200 W	
HRS040		53 kg	4200 W	
HRS050	W 377 x H 976 x D 592	69 kg	5100 W	
HRS060		73 kg	5900 W	

Compatible  
with power supplies  
in Europe, Asia,  
Oceania, and North, Central,  
and South America

- Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz)
- Single-phase 200 to 230 VAC (50/60 Hz)

#### With heating function

As the heating method uses discharged heat, a heater is unnecessary.

#### Convenient functions

p. 27

Timer operation function/Unit conversion function/Power failure auto-restart function/Anti-freezing operation function

#### Easy maintenance

p. 27

Toolless maintenance of filter

#### Self-diagnosis function and check display

p. 28

35 types of alarm codes

#### Communication function

p. 28

Equipped with serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) as standard

Environmentally friendly **R407C** **R410A** as refrigerant




HRS  
HRS-R  
HRS090  
HRS100/150  
HRS200  
HRS090  
HRSH  
HRSE  
HRR  
HRL  
HRZ  
HRZD  
HRW  
HECR  
HEC  
HEB  
HED  
Technical Data


# Temperature stability $\pm 0.1^{\circ}\text{C}$ / Compact

A precision temperature control method which utilizes expansion valves and temperature sensors allowed for the realization of a product with a high temperature stability of  $\pm 0.1^{\circ}\text{C}$  and a small-size tank.

## ■ Air-cooled HRS□-A-□

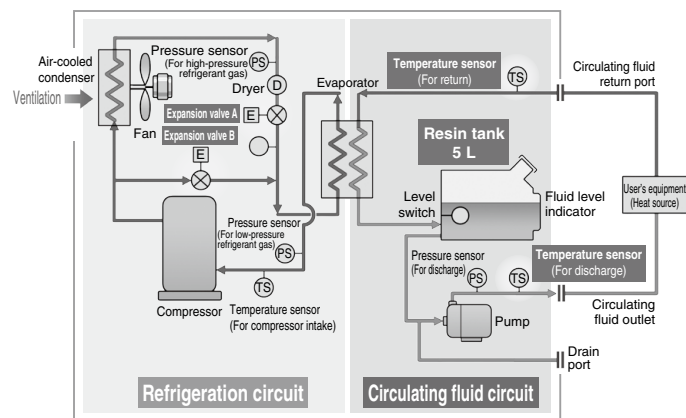

## ■ Water-cooled HRS□-W-□

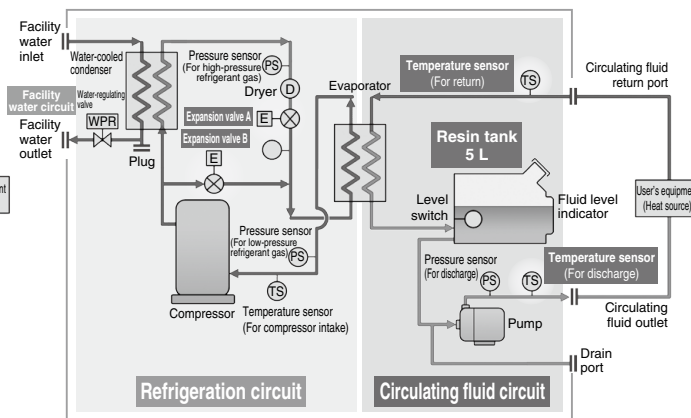

### Refrigeration circuit

- The compressor compresses the refrigerant gas and discharges high-temperature, high-pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high-temperature, high-pressure refrigerant gas is cooled down by fan ventilation in the air-cooled condenser, where it is then liquefied. In the case of water-cooled refrigeration, the refrigerant gas is cooled by the facility water in the facility water circuit in the water-cooled condenser, where it is then liquefied.
- The liquefied high-pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A, where it vaporizes after receiving heat from the circulating fluid in the evaporator.
- The vaporized refrigerant gas is sucked into the compressor and compressed again.
- When heating the circulating fluid, the high-pressure, high-temperature refrigerant gas is bypassed into the evaporator by expansion valve B to heat the circulating fluid.

**Point** The combination of the precise control of **expansion valve A** for cooling and **expansion valve B** for heating allows for high temperature stability.

### Circulating fluid circuit

- After the circulating fluid discharged from the pump is heated or cooled by the user's equipment, it returns to the thermo-chiller.
- The circulating fluid is controlled to remain at a set temperature by the refrigeration circuit. It will then be discharged to the user's equipment side again by the thermo-chiller.

**Point** Since the refrigeration circuit is controlled by the signals from **2 temperature sensors (for return and discharge)**, precise temperature control of the circulating fluid can be achieved. Therefore, there is no need for a tank with a large capacity to absorb the circulating fluid temperature difference, as high temperature stability can be achieved even with a **small-size tank**. This also contributes to space saving.


### Facility water circuit

**For water-cooled refrigeration HRS□-W-□**

- The water-regulating valve opens and closes to keep the refrigerant gas pressure consistent. The facility water flow rate is controlled by the water-regulating valve.


### Can be installed with both sides close to a wall

(HRS012/018/024 \* Except option G)

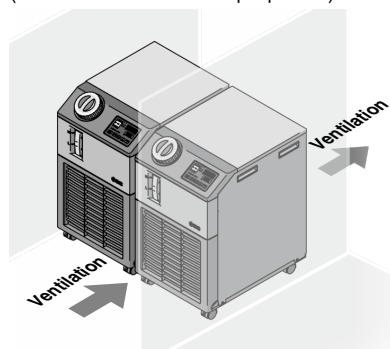


### Reduced-height double condenser structure (HRS030/040/060)


**Existing**  
Multiple air-cooled condensers are provided on the top and bottom.

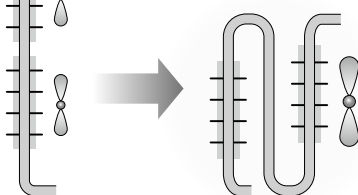


**HRS030/040**  
A maximum reduction in the height of the product has been achieved while expanding the cooling capacity by providing overlapped air-cooled condensers.

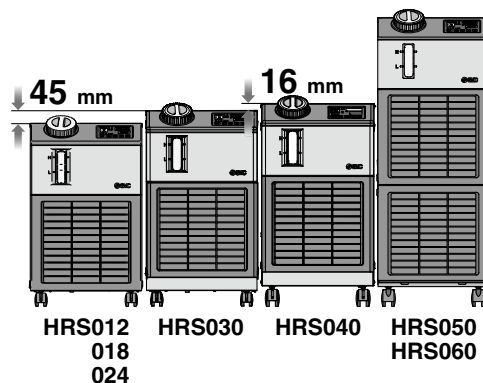

## With heating function

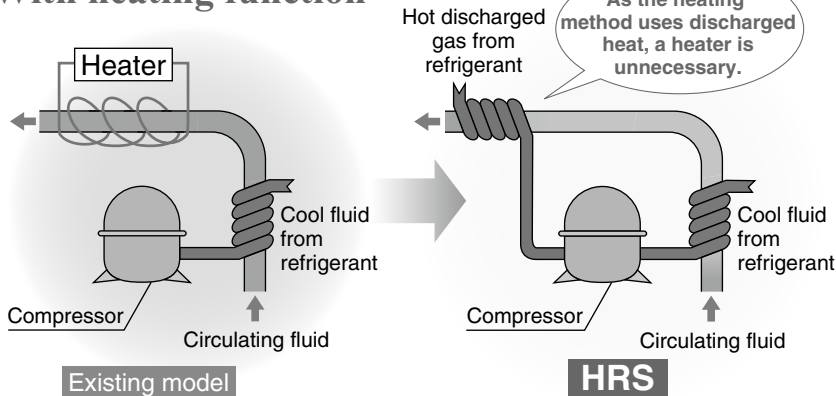

\* This is just an example diagram.

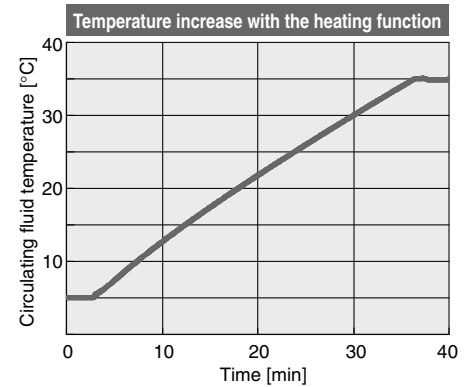

A heater is not required even when the ambient temperature is low.

## Simple operation

- Step 1 Press the **RUN/STOP** key.
- Step 2 Adjust the temperature setting with the **▼** / **▲** keys.
- Step 3 Press the **RUN/STOP** key to stop operation. Easy operation




### Large digital display







The large digital display (7-segment and 4 digits) and 2-row display provide a clearer view of the current value (PV) and set value (SV).
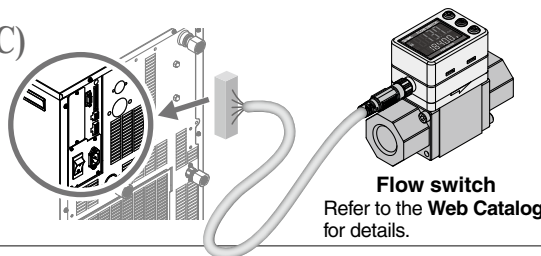
## Power supply (24 VDC) available

Power can be supplied from the connector on the rear side of the HRS to external switches, etc.



## Variations

Model	Cooling method	Cooling capacity [W] (50/60 Hz)	Single-phase 100 VAC (50/60 Hz) 115 VAC (50/60 Hz)	Single-phase 200 to 230 VAC (50/60 Hz)	Option <b>p. 52</b>	Optional accessories <b>p. 55</b>	International standards
 <b>HRS012</b>	Air-cooled refrigeration	1100/1300	●	●	<ul style="list-style-type: none"> <li>With earth leakage breaker</li> <li>With automatic fluid fill function</li> <li>Applicable to deionized water piping</li> <li>High-pressure pump mounted (* The HRS050/060 cannot be selected.)</li> <li>SI unit only</li> <li>High-temperature environment specification (* The HRS030/040/050/060 cannot be selected.)</li> </ul>	<ul style="list-style-type: none"> <li>Anti-quake bracket</li> <li>Piping conversion fitting (For air-cooled, water-cooled, and options)</li> <li>Concentration meter</li> <li>Bypass piping set</li> <li>Power supply cable</li> <li>DI filter set</li> <li>Electric resistance sensor set/ Electric resistance control set</li> <li>Electric conductivity sensor set/ Electric conductivity control set</li> <li>Particle filter set</li> <li>Drain pan set (With water leakage sensor)</li> <li>Connector cover</li> <li>Analog gateway unit</li> <li>Replacement type dustproof filter set</li> <li>Separately-installed power transformer</li> <li>Filter for circulating fluid fill port</li> </ul>	 (UL Standards) *1 <b>Refer to pages 35 to 38 for details on applicable models.</b>
 <b>HRS018</b>		1500/1700	●	—			
 <b>HRS024</b>		1700/1900	—	●			
 <b>HRS030</b>	Water-cooled refrigeration	2100/2400	—	●			
<b>HRS040</b>		2600/3200	—	●			
<b>HRS050</b>		3800/4200	—	●			
<b>HRS060</b>		4700/5100	—	●			
 <b>HRS060</b>		4900/5900	—	●			

\*1 UL Standards: Applicable to only 60 Hz, To be obtained for the HRS040





## Reduced maintenance hours for the pump

### Now with a magnet pump\*1

Due to the adoption of a sealless pump, no external leakage of the circulating fluid occurs. Also, periodic checking for pump leakage and replacement of the mechanical seal are not necessary.

\*1 For products with the high-pressure pump option and for the HRS050/060, a mechanical seal pump is used.

## Easy to check the circulating fluid level

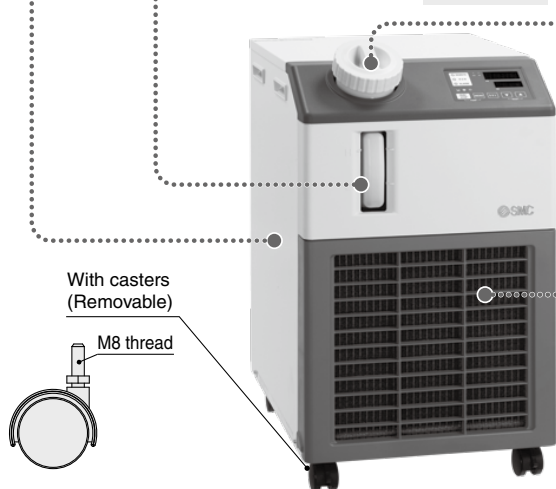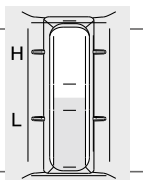


With casters  
(Removable)

M8 thread

## Shaped for easy supply of circulating fluid

The angled supply port facilitates the easy supply of circulating fluid.

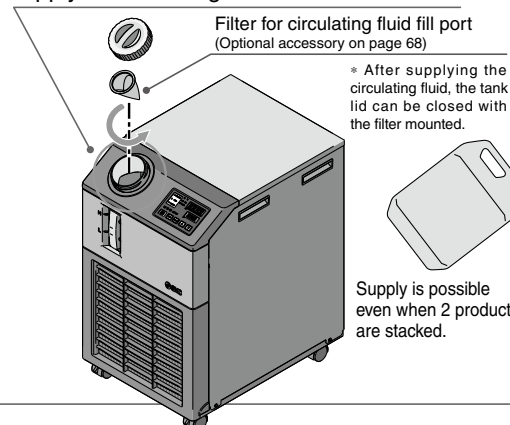

Supply is possible even when 2 products are stacked.


## Toolless inspection and cleaning of air-cooled condenser

### Dustproof filter

Integrated with the grill of the front panel  
 Mounting and removal can be performed with ease.


Easy to remove dust, cutting chips, etc., stuck to the dustproof net with a brush or air blow

Easy to mount/  
remove due to  
magnetic  
construction

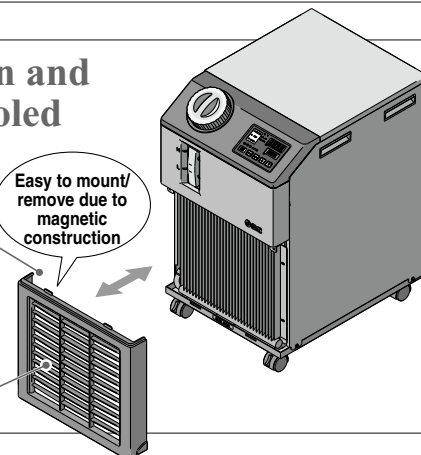


## Replacement type dustproof filter set (p. 66)

Suitable for use in excessively dusty atmospheres  
 The disposable type filter reduces the time and effort required for cleaning.

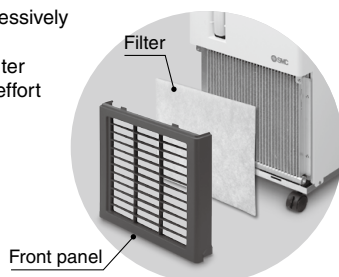

## Particle filter set (p. 64)

Removes foreign matter in the circulating fluid  
 Effective in preventing foreign matter from entering the user's equipment and chiller

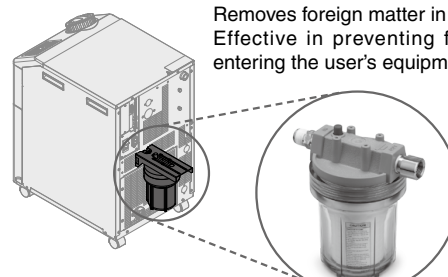

- Prevents pump malfunction
- Prevents the water-cooled condenser performance from falling

## Convenient functions (Refer to the Operation Manual for details.)


### ■ Timer operation function

Timer for ON and OFF can be set in units of 0.5 h up to 99.5 h.

Ex.) Can be set to stop on Saturday and Sunday and restart on Monday morning

Ex. **SE.02 "ON timer"**


**Timer** The time remaining can be checked.

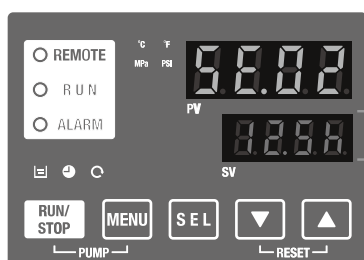

### ■ Unit conversion function

Temperature and pressure units can be changed.

Orange indicator lights up.

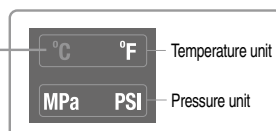

### ■ Power failure auto-restart function

Automatic restart after stoppage due to power failure, etc., is possible without pressing the **RUN/STOP** key, and remote operation is also possible.

### ■ Anti-freezing operation function

If the circulating fluid approaches its freezing point, for example, on a cold winter night, the pump operates automatically, and the heat generated by the pump warms the circulating fluid, preventing freezing.

### ■ Key-lock function

Can be set in advance to protect the set values from being changed by pressing keys by mistake.

### ■ Function to output a signal for completion of preparation

Notifies by communication when the temperature reaches the pre-set temperature range




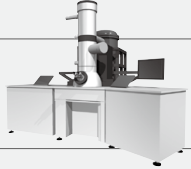
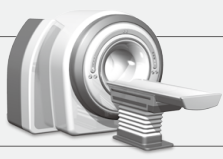
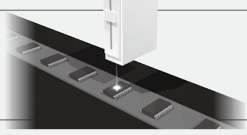

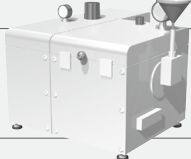
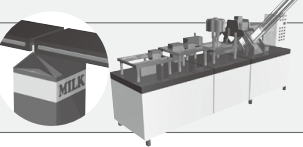
### ■ Independent operation of the pump

The pump can be operated independently while the chiller is powered off. This allows you to check for leakages in piping and to remove the air.






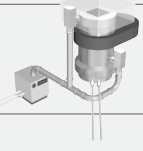
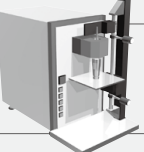

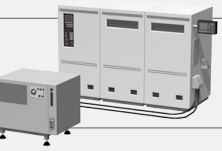

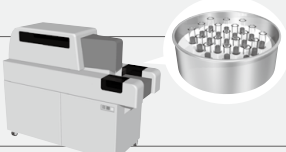

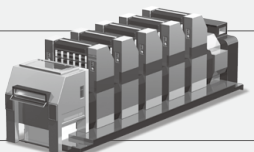
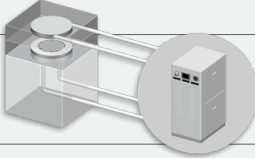
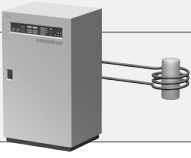


## 28

## Application Examples

	Heat source	Automotive	Light electrical appliance	Food	Machinery	Medical	Semiconductor	Laser
 Arc welding machines	Torch	●			●			
 Resistance welding machines	Tip	●	●		●			
 Laser welding machines	Oscillator	●	●		●		●	
 Laser beam machines	Oscillator/ Power supply							●
 Fiber lasers  Oscillators  Transmission cable connectors								●
 Secondary battery manufacturing processes	Welded portion							●
 Additive manufacturing								●
 UV curing devices	Lamp	●	●	●		●		
 X-ray instruments			●			●	●	
 Electronic microscopes	Lens		●			●	●	
 MRIs						●		
 Laser markers	Oscillator	●	●	●		●	●	●
 Ultrasonic wave inspection machines	Oscillator	●	●		●			●
 Crushing equipment	Blade			●				
 Linear motors	Motor	●			●			
 Packaging lines (food)	Dies/ Welded portions			●				

## Application Examples

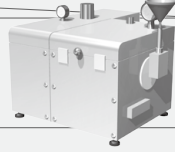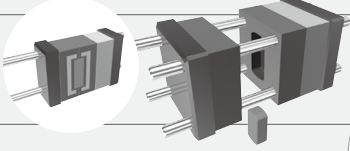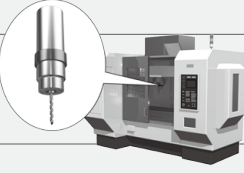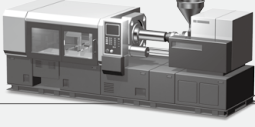		Heat source	Automotive	Light electrical appliance	Food	Machinery	Medical	Semiconductor	Laser
Atomizing devices (food and cosmetics)		Sample/Device			●	●			
Mold cooling		Mold	●	●	●		●		
Machining centers		Spindle				●			
Injection molding						●			
Temperature control of adhesive and paint materials		Paint material/Welding materials	●	●	●				
Cooling of vacuum pumps		Pump	●					●	
Shrink fit machines		Workpiece	●			●			
Gas cylinder cabinets								●	
Testers				●				●	
Concentrating equipment		Test liquid			●		●		
Reagent cooling equipment		Reagent			●		●	●	
Cleaning machines		Cleaning solution		●				●	
Printing machines		Roller		●	●	●			
Chamber electrodes		Electrode						●	
High-frequency induction heating equipment		Power supply/Heating coil	●			●			

HRS

HRS-R

HRS090

HRS 100/150

HRS200

HRS090

HRS

HRS

HRS

HRS

HRS

HRS

HRS

HRS

HRS

HRS

HRS

Technical Data



## Global Supply Network







**SMC has a comprehensive network in the global market.**

We now have a presence of more than 560 branch offices and distributors in 83 countries and regions worldwide, such as Asia, Oceania, North/Central/South America, and Europe. With this global network, we are able to provide a global supply of our substantial range of products and high-quality customer service. We also provide full support to local factories, foreign manufacturing companies, and Japanese companies in each country.




## SMC Thermo-chiller Variations

Lots of variations are available according to the users' requirements.

Series	Temperature stability [°C]	Set temperature range [°C]	Cooling capacity [kW]													Environment	International standards
			1.2	1.8	2.4	3	4	5	6	9	10	15	20	25	28		
 <b>HRSE Basic type</b>	±2.0	10 to 30	●	●	●											Indoor use	CE (Only 230 VAC type)
 <b>HRS Standard type</b>	±0.1	5 to 40	●	●	●	●	●	●	●							Indoor use	CE (Only 60 Hz)
 <b>HRS090 Standard type</b>	±0.5	5 to 35								●						Indoor use	CE (400 V as standard)
 <b>HRS100/150 Standard type</b>	±1.0	5 to 35									●	●				Outdoor installation IPX4	CE (400 V as standard)
 <b>HRSH090 Inverter type</b>	±0.1	5 to 40								●						Indoor use	CE (400 V as standard, 200 V as an option) MET (Only 200 V as an option)
 <b>HRSH Inverter type</b>	±0.1	5 to 35									●	●	●	●	●	Outdoor installation IPX4	CE (400 V as standard, 200 V as an option) MET (Only 200 V as an option)

## Circulating Fluid/Facility Water Line Equipment

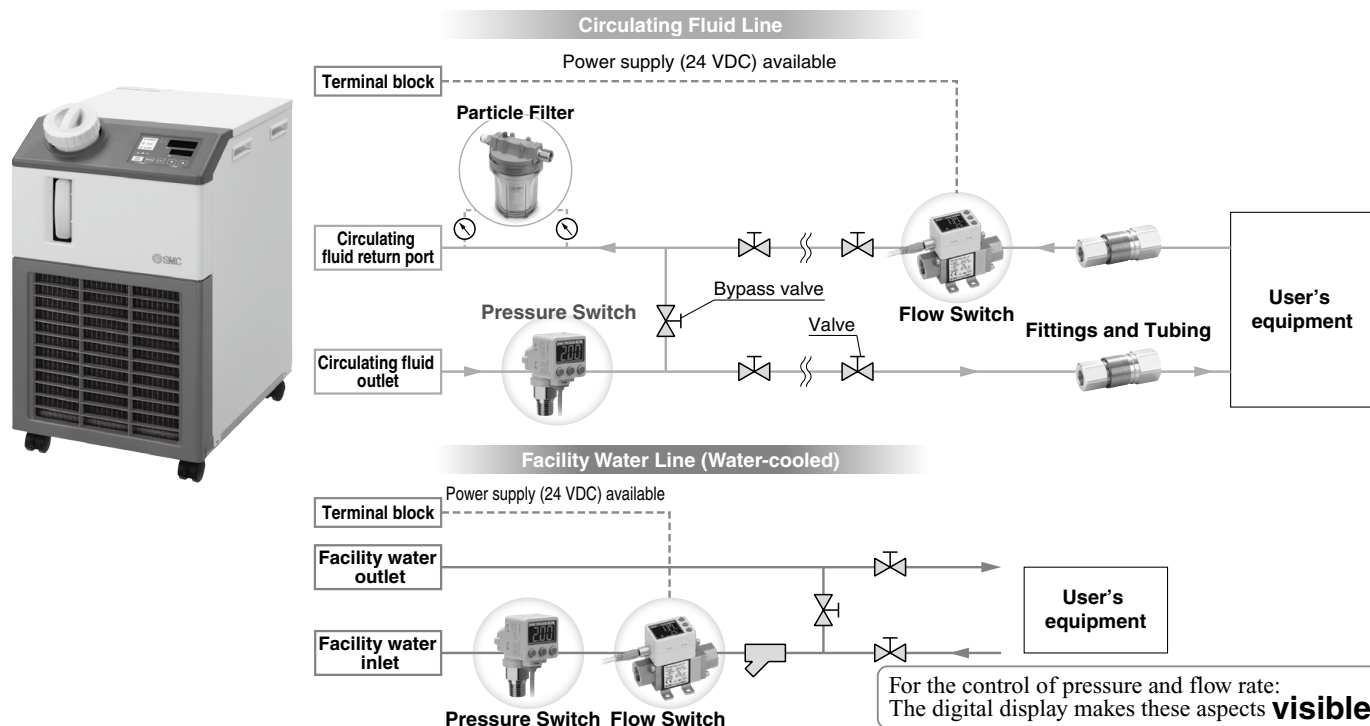


**Flow Switch:** Monitors the flow rate and temperature of the circulating fluid and facility water

Refer to the Web Catalog for details.

3-Color Display Digital Flow Switch for Water **PF3W**  
 Integrated with temperature sensor


3-Color Display  
 Electromagnetic Type Digital Flow Switch **LFE**

Digital Flow Switch for  
 Deionized Water and Chemical Liquids **PF2D**  
 4-Channel Flow Monitor **PF2□200**

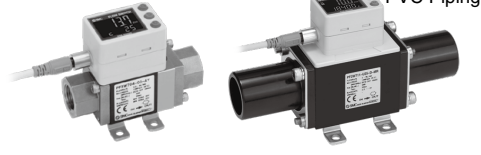

**Pressure Switch:** Monitors the pressure of the circulating fluid and facility water

Refer to the Web Catalog for details.

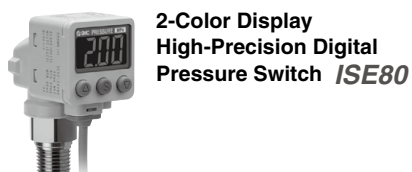

2-Color Display  
 High-Precision Digital  
 Pressure Switch **ISE80**



Pressure Sensor  
 for General Fluids  
**PSE56□, 57□**  
 Pressure Sensor  
 Controller  
**PSE200, 300, 300AC**

**Particle Filter**



p. 64

**Fittings and Tubing**

Refer to the Web Catalog for details.

**S Coupler **KK****



**S Coupler/Stainless Steel  
 (Stainless Steel 304) **KKK****



**Tubing **T□****




**Metal One-touch Fittings **KQB2****



**Stainless Steel 316  
 One-touch Fittings **KQG2****



**Stainless Steel 316 Insert Fittings **KFG2****

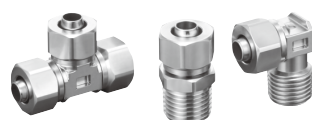

**Fluoropolymer Fittings **LQ****



Series	Material
<b>T</b>	Nylon
<b>TU</b>	Polyurethane
<b>TH</b>	FEP (Fluoropolymer)
<b>TD</b>	Modified PTFE (Soft fluoropolymer)
<b>TL</b>	Super PFA
<b>TLM</b>	PFA

HRS  
 HRS-R  
 HRS090  
 HRS 100/150  
 HRS200  
 HRS090  
 HRSH  
 HRSE  
 HRR  
 HRL  
 HRZ  
 HRZD  
 HRW  
 HECR  
 HEC  
 HEB  
 HED  
 Technical Data





# CONTENTS

## *HRS Series* **Standard Type**



### Thermo-chiller HRS Series

#### How to Order/Specifications

<b>Single-phase 100/115 VAC</b> .....	Page 35
<b>Single-phase 200 to 230 VAC</b> .....	Page 37
Cooling Capacity .....	Page 39
Heating Capacity .....	Page 41
Pump Capacity/Required Facility Water Flow Rate .....	Page 44
Dimensions .....	Page 45
Recommended External Piping Flow .....	Page 49
Cable Specifications .....	Page 49
Operation Display Panel .....	Page 50
Alarm .....	Page 50
Communication Functions .....	Page 51

#### ● Options

With Earth Leakage Breaker .....	Page 52
With Automatic Fluid Fill Function .....	Page 52
Applicable to Deionized Water Piping .....	Page 52
High-Pressure Pump Mounted .....	Page 52
SI Unit Only .....	Page 54
High-Temperature Environment Specification .....	Page 54

#### ● Optional Accessories

① Anti-Quake Bracket .....	Page 57
② Piping Conversion Fitting (For Air-Cooled Refrigeration/Water-Cooled Refrigeration) .....	Page 57, 58
③ Piping Conversion Fitting (For Option) .....	Page 58
④ Concentration Meter .....	Page 59
⑤ Bypass Piping Set .....	Page 59
⑥ Power Supply Cable .....	Page 60
⑦ DI Filter Set .....	Page 61
⑧ Electric Resistance Sensor Set/Electric Resistance Control Set .....	Page 62
⑨ Electric Conductivity Sensor Set/Electric Conductivity Control Set .....	Page 63
⑩ Particle Filter Set .....	Page 64
⑪ Drain Pan Set (With Water Leakage Sensor) .....	Page 65
⑫ Connector Cover .....	Page 66
⑬ Analog Gateway Unit .....	Page 66
⑭ Replacement Type Dustproof Filter Set .....	Page 66
⑮ Separately-Installed Power Transformer .....	Page 67
⑯ Filter for Circulating Fluid Fill Port .....	Page 68

#### ● Cooling Capacity Calculation

Required Cooling Capacity Calculation .....	Page 69
Precautions on Cooling Capacity Calculation .....	Page 70
Circulating Fluid Typical Physical Property Values .....	Page 70

Specific Product Precautions .....	Page 71
------------------------------------	---------

# Thermo-chiller **Standard Type**

## Single-phase 100/115 VAC

### HRS Series



#### How to Order

#### Air-cooled refrigeration

**HRS 018 - A - 10 -**

#### Cooling capacity

<b>012</b>	Cooling capacity 1100/1300 W (50/60 Hz)
<b>018</b>	Cooling capacity 1500/1700 W (50/60 Hz)

\* UL Standards: Applicable to only 60 Hz

#### Cooling method

<b>A</b>	Air-cooled refrigeration
----------	--------------------------

#### Pipe thread type

<b>Nil</b>	Rc
<b>F</b>	G (with PT-G conversion fitting set)
<b>N</b>	NPT (with PT-NPT conversion fitting set)

#### Power supply\*1

Symbol	Power supply
<b>10</b>	Single-phase 100 VAC (50 Hz) 100 to 115 VAC (60 Hz)

\*1 UL Standards: Applicable to only 60 Hz

#### Option

Symbol	Option
<b>Nil</b>	None
<b>B</b>	With earth leakage breaker
<b>J</b>	With automatic fluid fill function
<b>M</b>	Applicable to deionized water piping*1
<b>T</b>	High-pressure pump mounted*2
<b>W</b>	SI unit only

• When multiple options are combined, indicate symbols in alphabetical order.

\*1 • If using deionized water that is 1 MΩ·cm or more (1 μS/cm or less), please select this option.

\*2 • The cooling capacity will decrease by about 300 W from the value in the catalog.

• The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

#### Specifications \* There are different values from standard specifications. Refer to pages 52 to 54 for details.

Model		HRS012-A-10	HRS018-A-10
Cooling method		Air-cooled refrigeration	
Refrigerant		R407C (HFC)	
Refrigerant charge	kg	0.32	0.33
Control method		PID control	
Ambient temperature/Humidity/Altitude*1, 11		Temperature: 5 to 40°C, Humidity: 30 to 70%, Altitude: less than 3000 m	
Circulating fluid system	Circulating fluid*2	Tap water, 15% ethylene glycol aqueous solution*4	
	Set temperature range*1	5 to 40	
	Cooling capacity (50/60 Hz)*3	1100/1300	1500/1700
	Heating capacity (50/60 Hz)*3	360/450	
	Temperature stability*5	±0.1	
	Pump	Rated flow (50/60 Hz)*6, 7	7 (0.13 MPa)/7 (0.18 MPa)
		Maximum flow rate (50/60 Hz)	27/29
		Maximum pump head (50/60 Hz)	14/19
		Output	200
	Tank capacity	Approx. 5	
	Port size	Rc1/2	
	Fluid contact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC	
Electrical system	Power supply	Single-phase 100 VAC (50 Hz), 100 to 115 VAC (60 Hz) Allowable voltage range ±10%*12	
	Circuit protector	15	
	Applicable earth leakage breaker capacity*8	15	
	Rated operating current	7.5/8.3	7.7/8.4
	Rated power consumption (50/60 Hz)*3	0.7/0.8	0.8/0.8
Noise level (50/60 Hz)*9		58/55	
Accessories		Fitting (for drain outlet) 1 pc., Input/output signal connector 1 pc., Power supply connector 1 pc., Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1, Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by the user.	
Weight*10		40	

\*1 No condensation should be present.

\*2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.

\*3 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water

Refer to the cooling capacity and heating capacity graphs on pages 39 and 41 for details.

\*4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.

\*5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected.

The installation environment and power supply are within the specification range and stable.

\*6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

\*7 The required minimum flow rate for maintaining the cooling capacity or temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

\*8 Purchase an earth leakage breaker with a sensitivity current of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 52.)

\*9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See \*3.

\*10 Weight in the dry state without circulating fluids

\*11 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 72) Item 14 "For altitudes of 1000 m or higher."

\*12 No continuous voltage fluctuation



## How to Order

### Water-cooled refrigeration

**HRS 018 - W - 10 -**

#### Cooling capacity\*

<b>012</b>	Cooling capacity 1100/1300 W (50/60 Hz)
<b>018</b>	Cooling capacity 1500/1700 W (50/60 Hz)

\* UL Standards: Applicable to only 60 Hz

#### Cooling method\*

<b>W</b>	Water-cooled refrigeration
----------	----------------------------

#### Pipe thread type\*

<b>Nil</b>	Rc
<b>F</b>	G (with PT-G conversion fitting set)
<b>N</b>	NPT (with PT-NPT conversion fitting set)

#### Power supply\*1

Symbol	Power supply
<b>10</b>	Single-phase 100 VAC (50 Hz) 100 to 115 VAC (60 Hz)

\*1 UL Standards: Applicable to only 60 Hz

#### Option

Symbol	Option
<b>Nil</b>	None
<b>B</b>	With earth leakage breaker
<b>J</b>	With automatic fluid fill function
<b>M</b>	Applicable to deionized water piping*1
<b>T</b>	High-pressure pump mounted*2
<b>W</b>	SI unit only

• When multiple options are combined, indicate symbols in alphabetical order.

\*1 • If using deionized water that is 1 MΩ·cm or more (1 μS/cm or less), please select this option.

\*2 • The cooling capacity will decrease by about 300 W from the value in the catalog.

• The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

## Specifications

\* There are different values from standard specifications. Refer to pages 52 to 54 for details.

Model		HRS012-W□-10	HRS018-W□-10
Cooling method		Water-cooled refrigeration	
Refrigerant		R407C (HFC)	
Refrigerant charge		kg	0.25
Control method		PID control	
Ambient temperature/Humidity/Altitude*1		Temperature: 5 to 40°C, Humidity: 30 to 70%, Altitude: less than 3000 m	
Circulating fluid system	Circulating fluid*2	Tap water, 15% ethylene glycol aqueous solution*4	
	Set temperature range*1	°C	
	Cooling capacity (50/60 Hz)*3	W	1100/1300
	Heating capacity (50/60 Hz)*3	W	360/450
	Temperature stability*5	°C	±0.1
	Pump	Rated flow (50/60 Hz)*6, 7	L/min
		Maximum flow rate (50/60 Hz)	L/min
		Maximum pump head (50/60 Hz)	m
		Output	W
	Tank capacity	L	Approx. 5
Facility water system	Port size	Rc1/2	
	Fluid contact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC	
	Temperature range	°C	
	Pressure range	MPa	
	Required flow rate (50/60 Hz)*11	L/min	8
	Inlet-outlet pressure differential of facility water	MPa	0.3 or more
	Port size	Rc3/8	
Electrical system	Fluid contact material	Stainless steel, Copper (Heat exchanger brazing), Bronze, Synthetic rubber	
	Power supply	Single-phase 100 VAC (50 Hz), 100 to 115 VAC (60 Hz) Allowable voltage range ±10%*12	
	Circuit protector	A	15
	Applicable earth leakage breaker capacity*8	A	15
	Rated operating current	A	7.5/8.3
Noise level (50/60 Hz)*9	Rated power consumption (50/60 Hz)*3	kVA	0.7/0.8
		dB	58/55
Accessories		Fitting (for drain outlet) 1 pc., Input/output signal connector 1 pc., Power supply connector 1 pc., Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1, Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by the user.	
Weight*10		kg	40

\*1 No condensation should be present.

\*2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.

\*3 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25°C. Refer to the cooling capacity and heating capacity graphs on pages 39 and 41 for details.

\*4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.

\*5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected. The installation environment and power supply are within the specification range and stable.

\*6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

\*7 The required minimum flow rate for maintaining the cooling capacity or temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

\*8 Purchase an earth leakage breaker with a sensitivity current of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 52.)

\*9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See \*3.

\*10 Weight in the dry state without circulating fluids

\*11 The required flow rate when the cooling capacity load is applied at a circulating fluid temperature of 20°C, and circulating fluid rated flow and facility water temperature of 25°C

\*12 No continuous voltage fluctuation




# Thermo-chiller Standard Type

## Single-phase 200 to 230 VAC

### HRS Series



RoHS

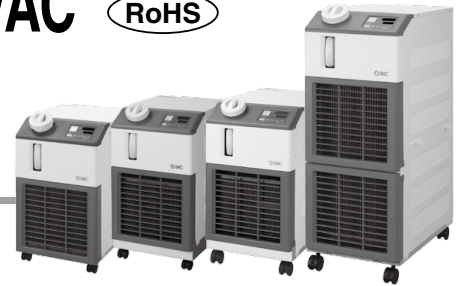

#### How to Order

Air-cooled refrigeration

HRS 018 - A - 20 -

#### Cooling capacity\*

012	Cooling capacity 1100/1300 W (50/60 Hz)
018	Cooling capacity 1700/1900 W (50/60 Hz)
024	Cooling capacity 2100/2400 W (50/60 Hz)
030	Cooling capacity 2600/3200 W (50/60 Hz)
040	Cooling capacity 3800/4200 W (50/60 Hz)
050	Cooling capacity 4700/5100 W (50/60 Hz)
060	Cooling capacity 4900/5900 W (50/60 Hz)

\* UL Standards: Applicable to only 60 Hz  
The pump of 050 and 060 have a mechanical seal and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF004, as a preventive measure.

#### Cooling method\*

A	Air-cooled refrigeration
---	--------------------------

#### Pipe thread type\*

Nil	Rc
F	G (with PT-G conversion fitting set)
N	NPT (with PT-NPT conversion fitting set)

#### Option

Symbol	Option	Applicable model
Nil	None	
B	With earth leakage breaker	HRS012/018/024
J	With automatic fluid fill function	030/040/050/060
M	Applicable to deionized water piping*1	
T	High-pressure pump mounted*2	HRS012/018/024/030/040
G	High-temperature environment specification	HRS012/018/024
W	SI unit only	HRS012/018/024 030/040/050/060

• When multiple options are combined, indicate symbols in alphabetical order.  
\*1 If using deionized water that is 1 MΩ·cm or more (1 μS/cm or less), please select this option.  
\*2 The cooling capacity will decrease by about 300 W from the value in the catalog.  
The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

#### Power supply\*1

Symbol	Power supply
20	Single-phase 200 to 230 VAC (50/60 Hz)

\*1 UL Standards: Applicable to only 60 Hz

#### Specifications

\* There are different values from standard specifications. Refer to pages 52 to 54 for details.

Model		HRS012-A□-20	HRS018-A□-20	HRS024-A□-20	HRS030-A□-20	HRS040-A□-20	HRS050-A□-20	HRS060-A□-20	
Cooling method		Air-cooled refrigeration							
Refrigerant		R407C (HFC)				R410A (HFC)			
Refrigerant charge                   kg		0.35	0.36	0.36	0.57	0.53	0.65	0.85	
Control method		PID control							
Ambient temperature/Humidity/Altitude*1, 12		Temperature: 5 to 40°C, High-temperature environment specification (option): 5 to 45°C, Humidity: 30 to 70%, Altitude: less than 3000 m							
Circulating fluid system	Circulating fluid*2	Tap water, 15% ethylene glycol aqueous solution*4							
	Set temperature range*1           °C	5 to 40							
	Cooling capacity (50/60 Hz)*3   W	1100/1300	1700/1900	2100/2400	2600/3200	3800/4200	4700/5100	4900/5900	
	Heating capacity (50/60 Hz)*3   W	530/650			600/640	900/1100	1100/1400	1000/1300	
	Temperature stability*5           °C	±0.1							
	Pump	Rated flow (50/60 Hz)*6, 7   L/min	7 (0.13 MPa)/7 (0.18 MPa)					23 (0.24 MPa)/28 (0.32 MPa)	23 (0.21 MPa)/28 (0.29 MPa)
		Maximum flow rate (50/60 Hz)   L/min	27/29			34/40		31/42	29/38
		Maximum pump head (50/60 Hz)   m	14/19				50		
		Output                               W	200				550		
	Tank capacity                       L		Approx. 5						
Port size		Rc1/2							
Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC							
Electrical system	Power supply	Single-phase 200 to 230 VAC (50/60 Hz) Allowable voltage range ±10%							
	Circuit protector                   A	10				20		30	
	Applicable earth leakage breaker capacity*8   A	10				20		30	
	Rated operating current           A	4.6/5.1	4.7/5.2	5.1/5.9	5.2/6.0	7.9/9.6	8/11	8.9/11.5	
	Rated power consumption (50/60 Hz)*3   kVA	0.9/1.0	0.9/1.0	1.0/1.2	1.0/1.2	1.6/1.9	1.7/2.2	1.8/2.3	
	Noise level (50/60 Hz)*9           dB	60/61			62/65	64/66	65/68	66/68	
Accessories		Fitting (for drain outlet) 1 pc.*11, Input/output signal connector 1 pc., Power supply connector 1 pc.*12, Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1*12, Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by the user.							
Weight*10                               kg		43			47	53	69	73	

\*1 No condensation should be present.

\*2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.

\*3 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water  
Refer to the cooling capacity and heating capacity graphs on pages 39 to 43 for details.

\*4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.

\*5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected.  
The installation environment and power supply are within the specification range and stable.

\*6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

\*7 The required minimum flow rate for maintaining the cooling capacity or temperature stability  
The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

\*8 Purchase an earth leakage breaker with a sensitivity current of 30 mA separately.  
(A product with an optional earth leakage breaker (option B) is also available.)

\*9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See \*3.

\*10 Weight in the dry state without circulating fluids

\*11 It is not provided for the HRS050/060.

\*12 It is not provided for the HRS040/050/060.

\*13 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 72) Item 14 "For altitudes of 1000 m or higher."



## How to Order

## Water-cooled refrigeration

**HRS 018 - W - 20 -**

## Cooling capacity

<b>012</b>	Cooling capacity 1100/1300 W (50/60 Hz)
<b>018</b>	Cooling capacity 1700/1900 W (50/60 Hz)
<b>024</b>	Cooling capacity 2100/2400 W (50/60 Hz)
<b>030</b>	Cooling capacity 2600/3200 W (50/60 Hz)
<b>040</b>	Cooling capacity 3800/4200 W (50/60 Hz)
<b>050</b>	Cooling capacity 4700/5100 W (50/60 Hz)
<b>060</b>	Cooling capacity 4900/5900 W (50/60 Hz)

\* UL Standards: Applicable to only 60 Hz

The pump of 050 and 060 have a mechanical seal and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF004, as a preventive measure.

## Cooling method

<b>W</b>	Water-cooled refrigeration
----------	----------------------------

## Pipe thread type

<b>Nil</b>	Rc
<b>F</b>	G (with PT-G conversion fitting set)
<b>N</b>	NPT (with PT-NPT conversion fitting set)

## Option

Symbol	Option	Applicable model
<b>Nil</b>	None	
<b>B</b>	With earth leakage breaker	HRS012/018/024
<b>J</b>	With automatic fluid fill function	030/040/050/060
<b>M</b>	Applicable to deionized water piping*1	
<b>T</b>	High-pressure pump mounted*2	HRS012/018/024/030/040
<b>W</b>	SI unit only	HRS012/018/024 030/040/050/060

• When multiple options are combined, indicate symbols in alphabetical order.  
\*1 If using deionized water that is 1 MΩ·cm or more (1 μS/cm or less), please select this option.

\*2 The cooling capacity will decrease by about 300 W from the value in the catalog.  
The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

## Power supply\*1

Symbol	Power supply
<b>20</b>	Single-phase 200 to 230 VAC (50/60 Hz)

\*1 UL Standards: Applicable to only 60 Hz

## Specifications

\* There are different values from standard specifications. Refer to pages 52 to 54 for details.

Model		HRS012-W□-20	HRS018-W□-20	HRS024-W□-20	HRS030-W□-20	HRS040-W□-20	HRS050-W□-20	HRS060-W□-20	
Cooling method		Water-cooled refrigeration							
Refrigerant		R407C (HFC)				R410A (HFC)			
Refrigerant charge                      kg		0.3	0.31	0.31	0.5	0.6	0.65	0.75	
Control method		PID control							
Ambient temperature/Humidity/Altitude*1		Temperature: 5 to 40°C, Humidity: 30 to 70%, Altitude: less than 3000 m							
Circulating fluid system	Circulating fluid*2	Tap water, 15% ethylene glycol aqueous solution*4							
	Set temperature range*1                      °C	5 to 40							
	Cooling capacity (50/60 Hz)*3                      W	1100/1300	1700/1900	2100/2400	2600/3200	3800/4200	4700/5100	4900/5900	
	Heating capacity (50/60 Hz)*3                      W	530/650			400/600	700/1000	1000/1300		
	Temperature stability*5                      °C	±0.1							
	Pump	Rated flow (50/60 Hz)*6, 7                      L/min	7 (0.13 MPa)/7 (0.18 MPa)					23 (0.24 MPa)/28 (0.32 MPa)	23 (0.21 MPa)/28 (0.29 MPa)
		Maximum flow rate (50/60 Hz)                      L/min	27/29			34/40		31/42	29/38
		Maximum pump head (50/60 Hz)                      m	14/19					50	
		Output                      W	200					550	
	Tank capacity                      L		Approx. 5						
Port size		Rc1/2							
Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC							
Facility water system	Temperature range                      °C	5 to 40							
	Pressure range                      MPa	0.3 to 0.5							
	Required flow rate (50/60 Hz)*11                      L/min	8	12	14	15	15	16	17	
	Inlet-outlet pressure differential of facility water                      MPa	0.3 or more							
	Port size	Rc3/8					Rc1/2		
	Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Synthetic rubber						
	Power supply		Single-phase 200 to 230 VAC (50/60 Hz) Allowable voltage range ±10%						
Electrical system	Circuit protector                      A	10				20			
	Applicable earth leakage breaker capacity*8                      A	10				20			
	Rated operating current                      A	4.6/5.1	4.7/5.2	5.1/5.9	5.2/6.0	6.9/8.4	7.6/10	7.6/10.4	
	Rated power consumption (50/60 Hz)*3                      kVA	0.9/1.0	0.9/1.0	1.0/1.2	1.0/1.2	1.5/1.7	1.5/2.0	1.5/2.1	
	Noise level (50/60 Hz)*9                      dB	60/61			62/65	64/66	65/68	66/68	
	Accessories		Fitting (for drain outlet) 1 pc.*12, Input/output signal connector 1 pc., Power supply connector 1 pc.*13, Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1*13, Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by the user.						
Weight*10                      kg		43			46	53	67		

\*1 No condensation should be present.

\*2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.

\*3 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25°C. Refer to the cooling capacity and heating capacity graphs on pages 39 to 43 for details.

\*4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10°C or less.

\*5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected.  
The installation environment and power supply are within the specification range and stable.

\*6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

\*7 The required minimum flow rate for maintaining the cooling capacity or temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

\*8 Purchase an earth leakage breaker with a sensitivity current of 30 mA separately.  
(A product with an optional earth leakage breaker (option B) is also available.)

\*9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See \*3.

\*10 Weight in the dry state without circulating fluids

\*11 The required flow rate when the cooling capacity load is applied at a circulating fluid temperature of 20°C, and circulating fluid rated flow and facility water temperature of 25°C

\*12 It is not provided for the HRS050/060.


\*13 It is not provided for the HRS040/050/060.

\* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 72) Item 14 "For altitudes of 1000 m or higher."


\* For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

## Cooling Capacity


**HRS012-A-10, HRS012-W-10** (Single-phase 100/115 VAC) (50 Hz)

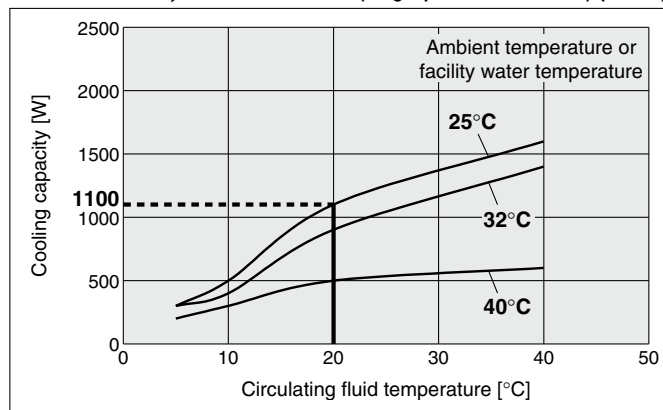


(60 Hz)

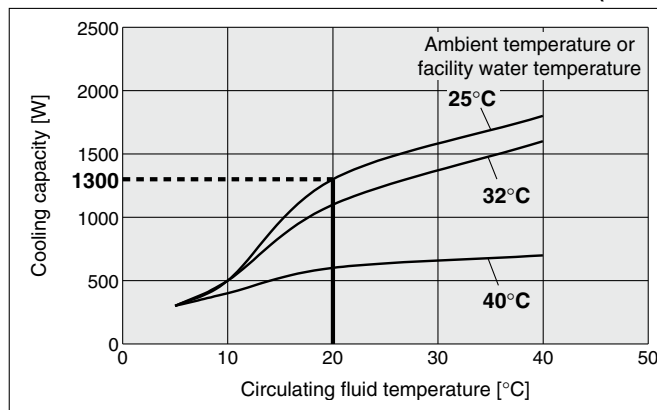


**HRS018-A-10, HRS018-W-10** (Single-phase 100/115 VAC) (50 Hz)

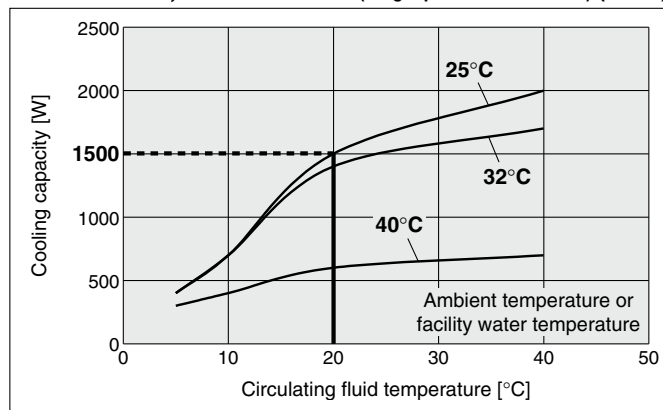


(60 Hz)

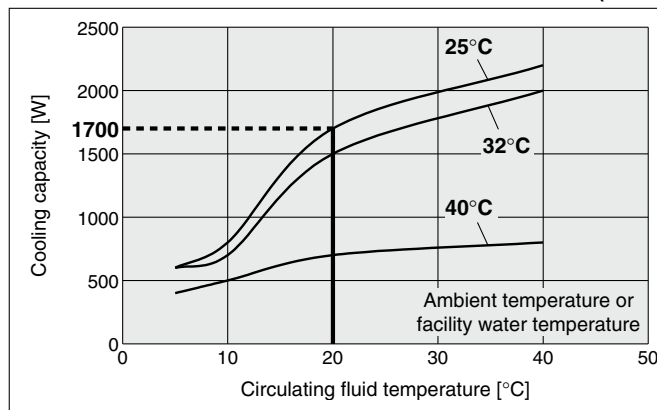


**HRS012-A-20, HRS012-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

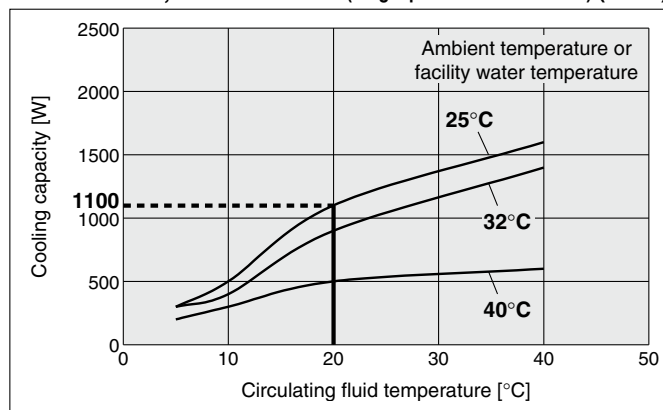


(60 Hz)

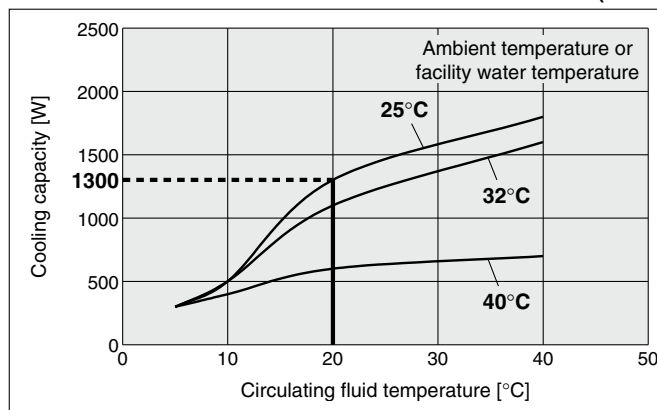

**HRS018-A-20, HRS018-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

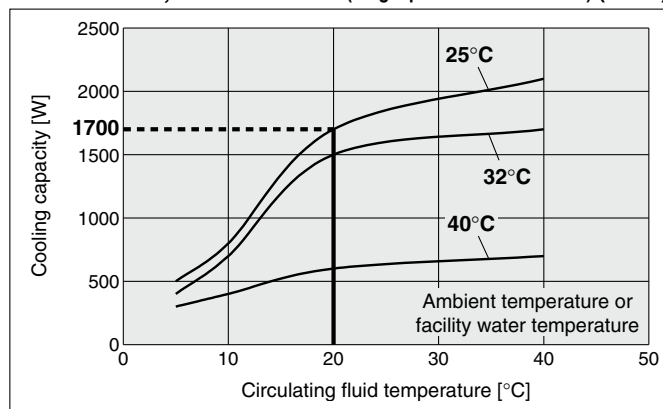

(60 Hz)

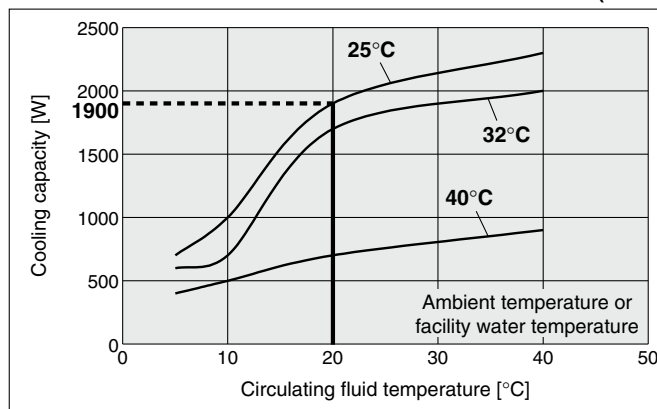





- \* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 72) Item 14 "For altitudes of 1000 m or higher."
- \* For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

## Cooling Capacity


**HRS024-A-20, HRS024-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

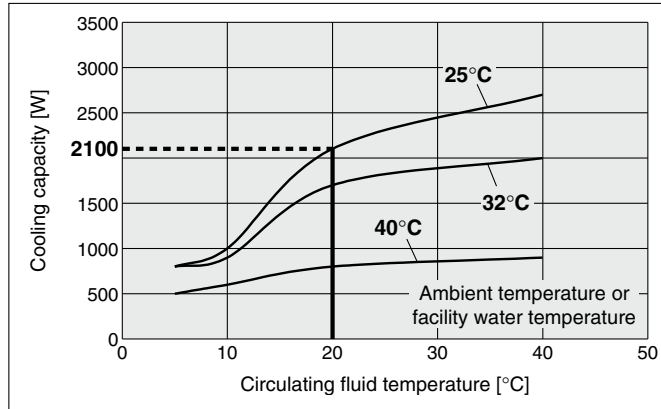


(60 Hz)

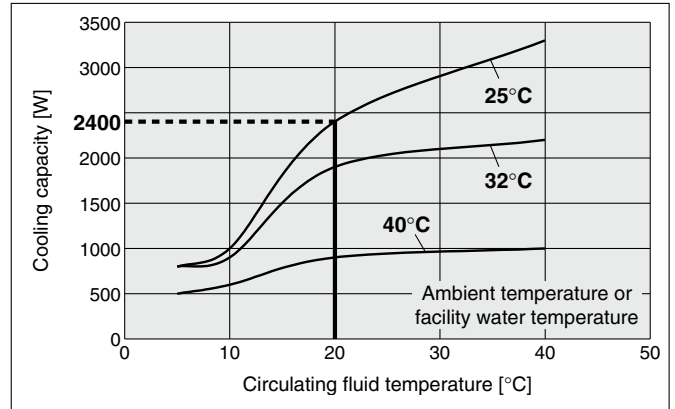


**HRS030-A-20, HRS030-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

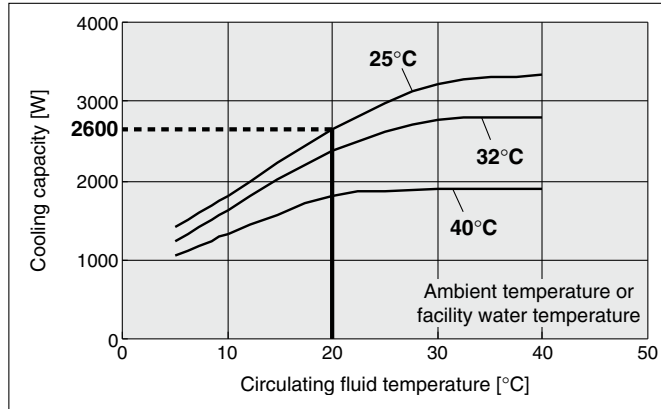


(60 Hz)

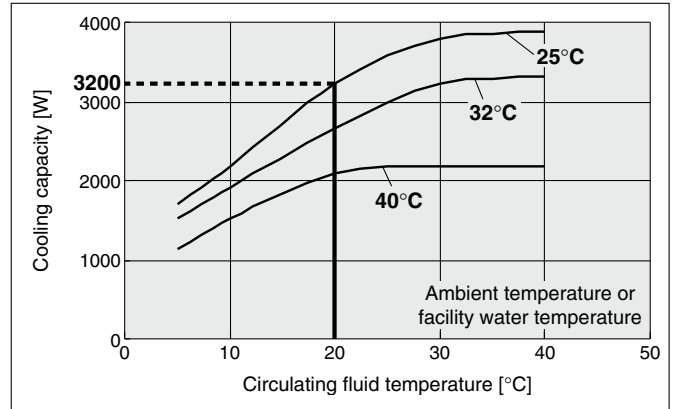


**HRS040-A-20, HRS040-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

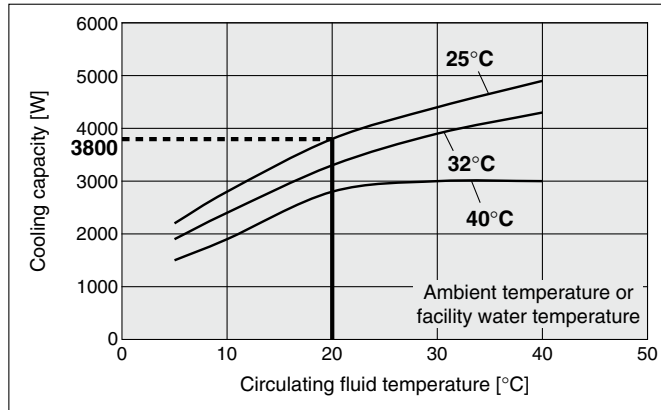


(60 Hz)

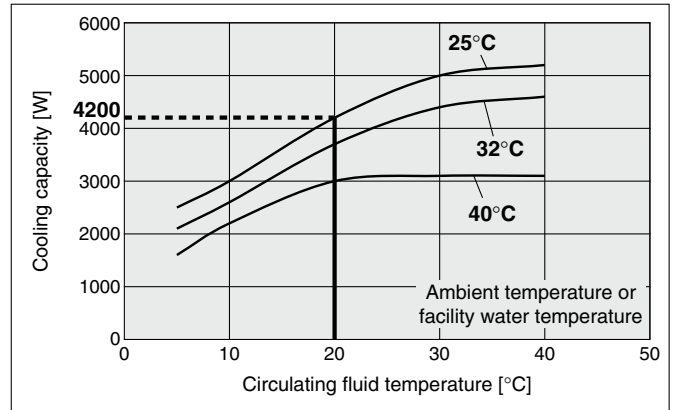

**HRS050-A-20, HRS050-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

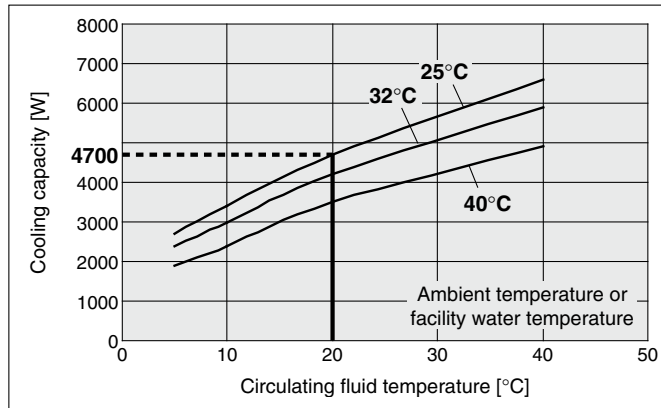

(60 Hz)

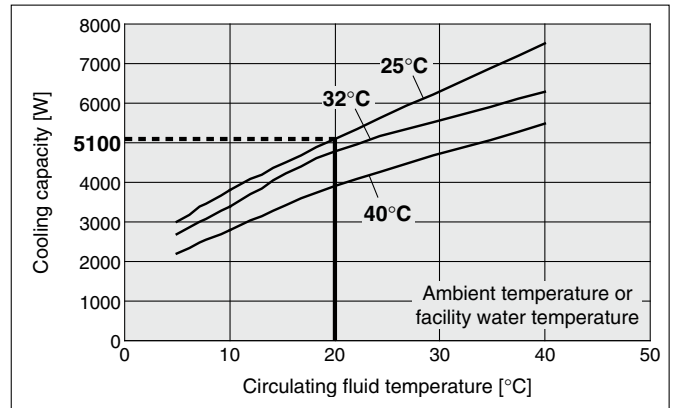


\* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 72) Item 14 "For altitudes of 1000 m or higher."


## Cooling Capacity

\* For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

**HRS060-A-20, HRS060-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

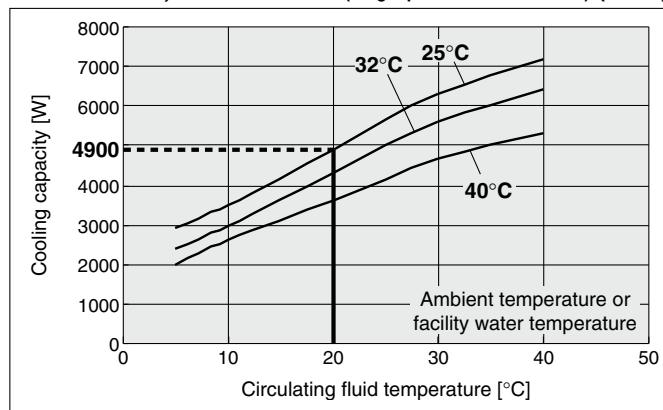


(60 Hz)

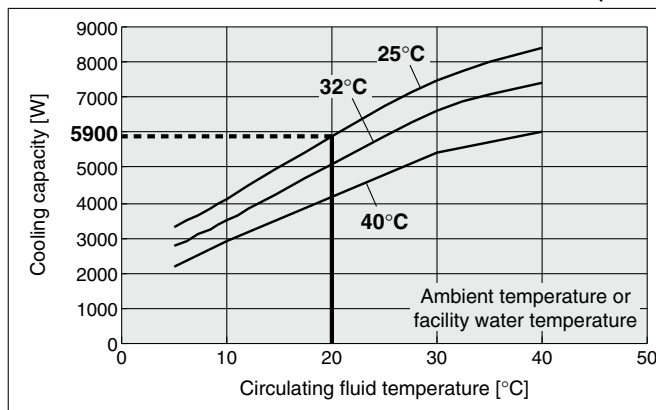


## Heating Capacity

**HRS<sup>012</sup><sub>018</sub>-A-W-10** (Single-phase 100/115 VAC)

(50 Hz)

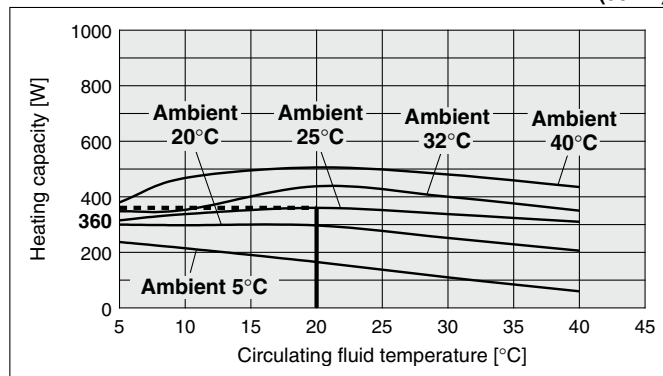


(60 Hz)

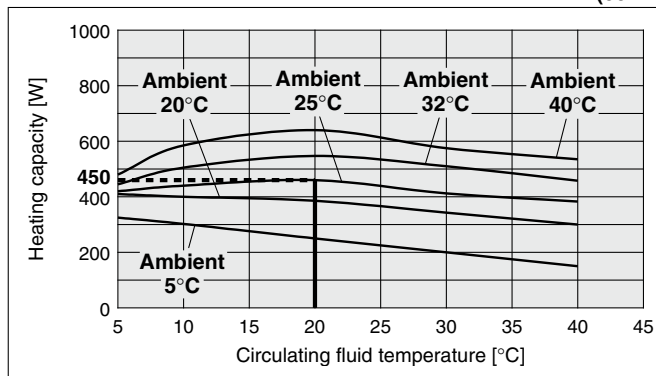


**HRS<sup>012</sup><sub>018</sub>-A-W-20** (Single-phase 200 to 230 VAC)

(50 Hz)

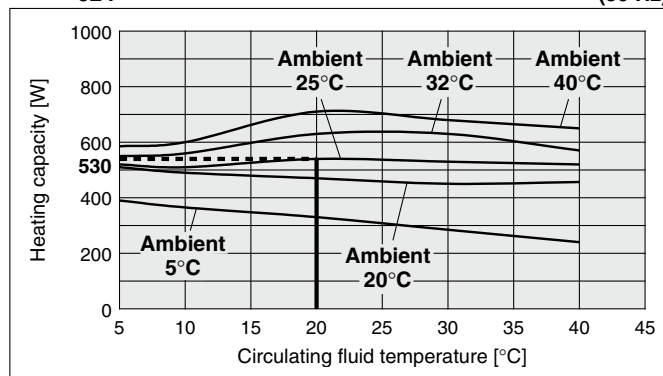


(60 Hz)

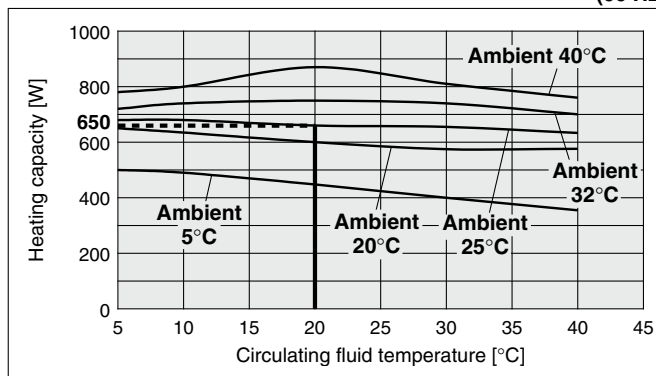


**HRS030-A-20** (Single-phase 200 to 230 VAC)

(50 Hz)

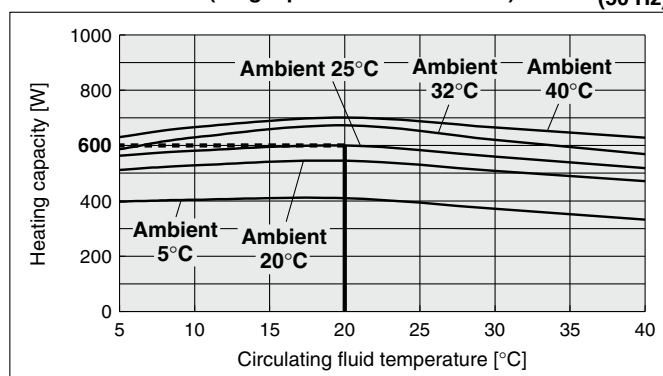


(60 Hz)

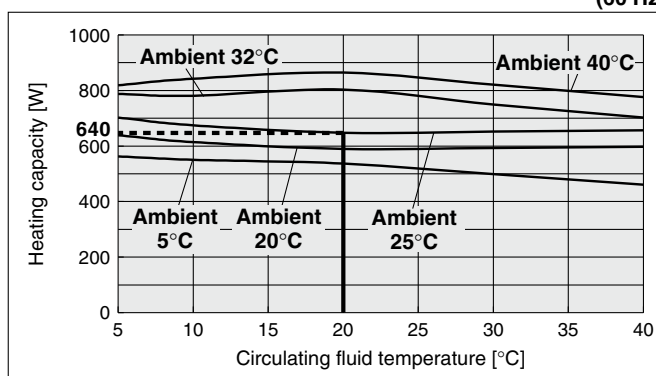


## Heating Capacity


**HRS030-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

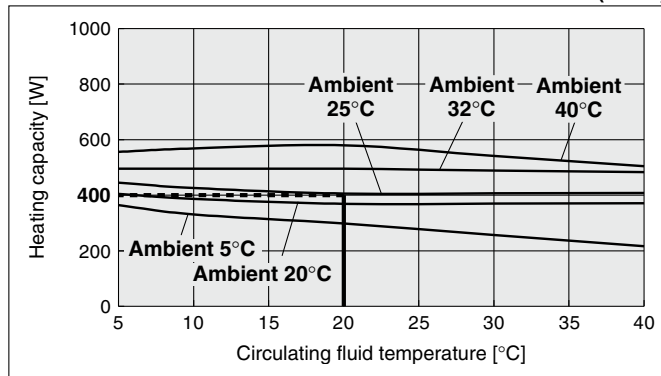


(60 Hz)

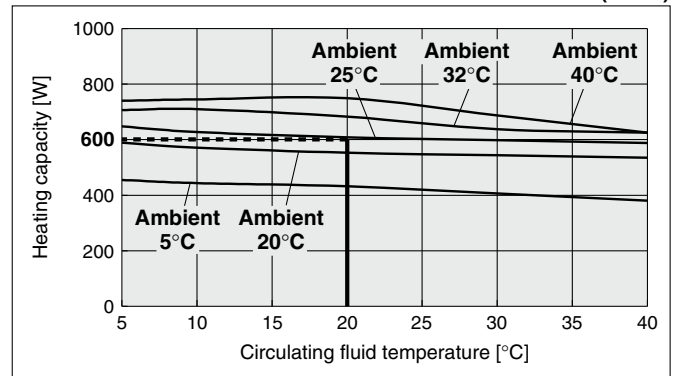


**HRS040-A-20** (Single-phase 200 to 230 VAC) (50 Hz)

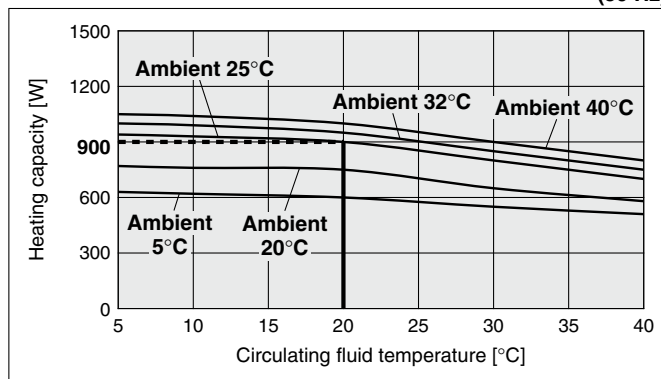


(60 Hz)

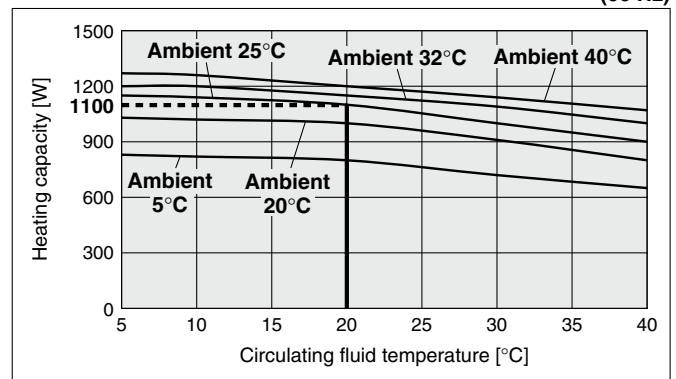


**HRS040-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

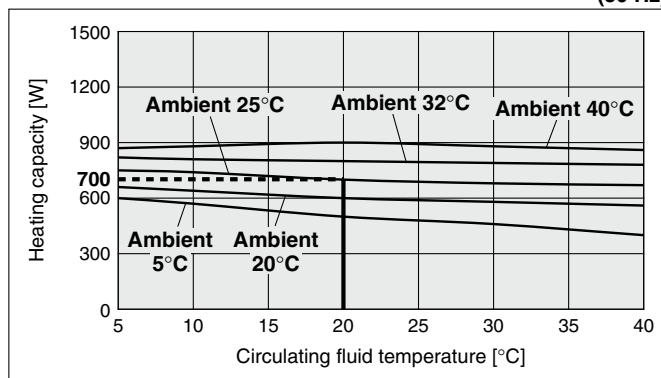


(60 Hz)

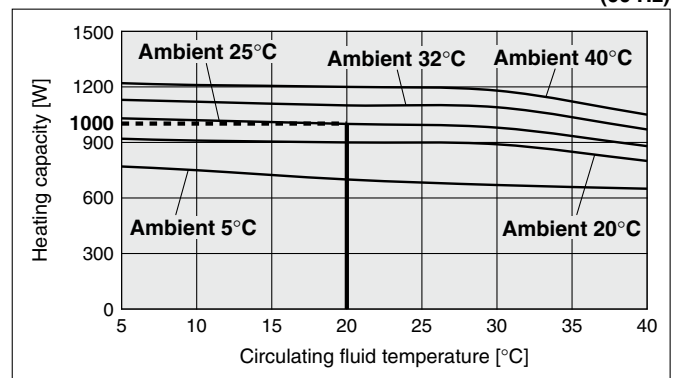

**HRS050-A-20** (Single-phase 200 to 230 VAC) (50 Hz)

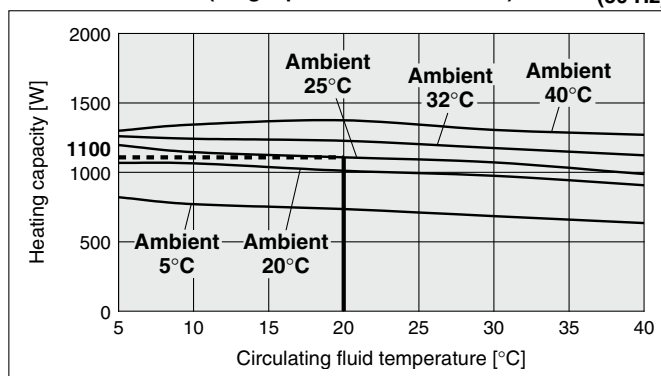


(60 Hz)

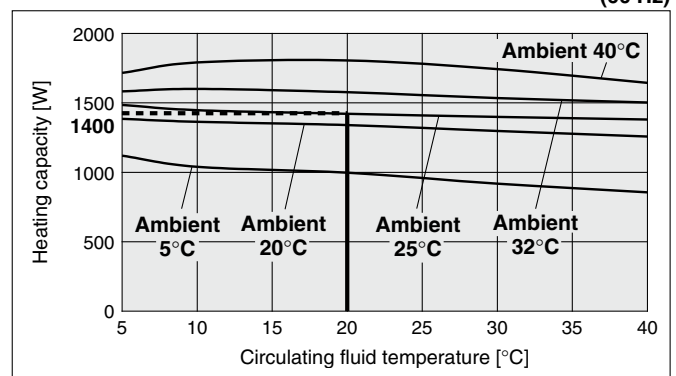


**Heating Capacity**


**HRS050-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

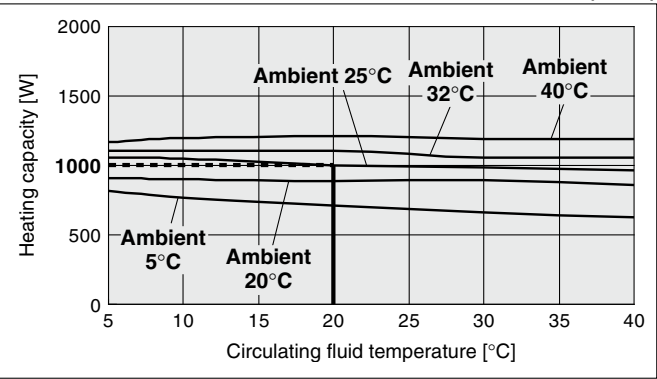


(60 Hz)

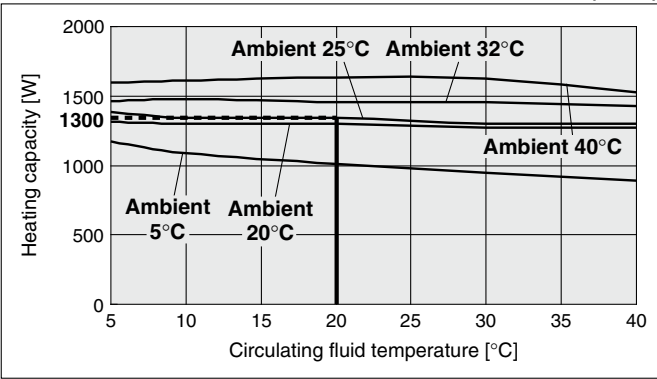


**HRS060-A-20** (Single-phase 200 to 230 VAC) (50 Hz)

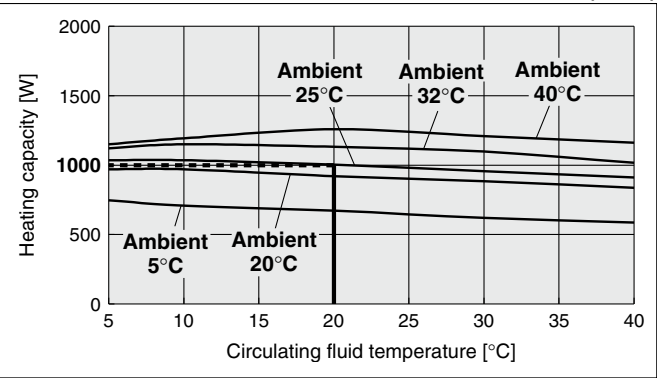


(60 Hz)

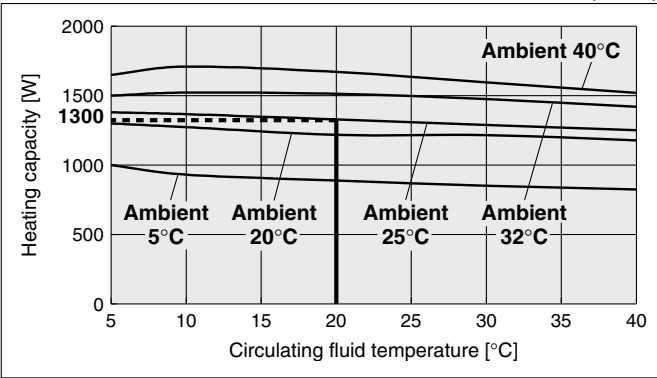

**HRS060-W-20** (Single-phase 200 to 230 VAC) (50 Hz)

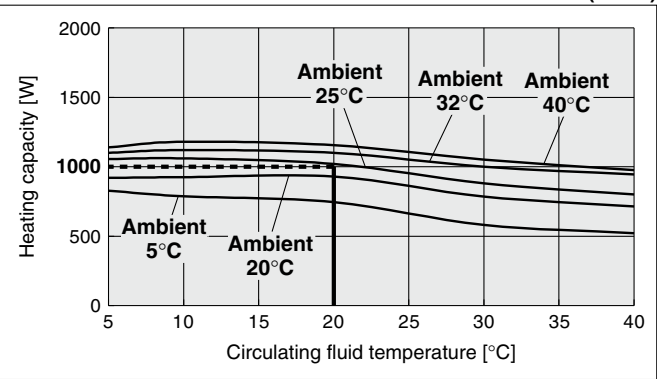


(60 Hz)

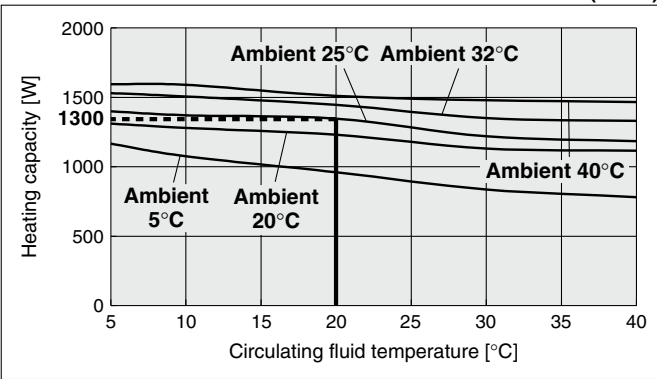




## Pump Capacity


**HRS<sup>012</sup><sub>018</sub>-A<sub>W</sub>-10** (Single-phase 100/115 VAC)

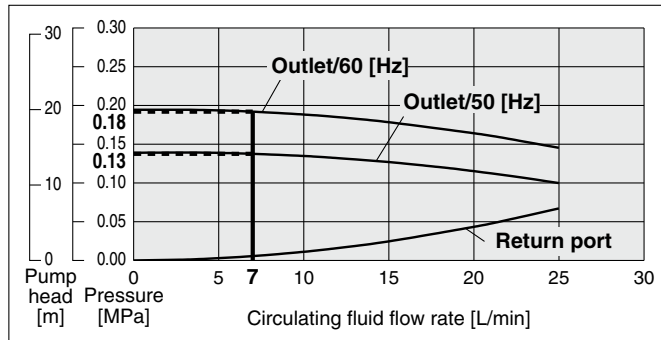


**HRS<sup>012</sup><sub>018</sub>-A<sub>W</sub>-20** (Single-phase 200 to 230 VAC)

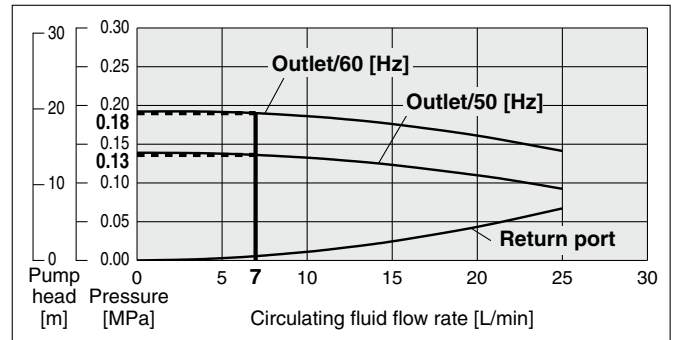


**HRS<sup>030</sup><sub>040</sub>-A<sub>W</sub>-20** (Single-phase 200 to 230 VAC)

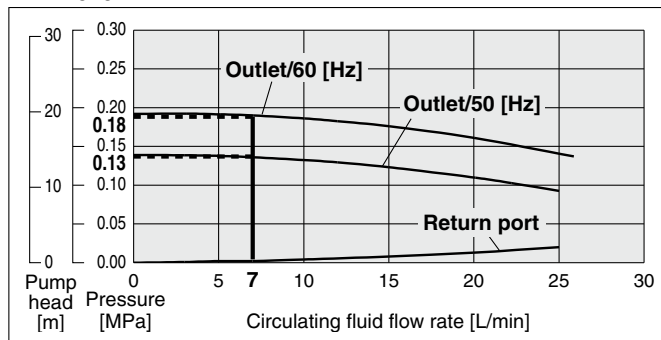

**HRS050-A<sub>W</sub>-20** (Single-phase 200 to 230 VAC)

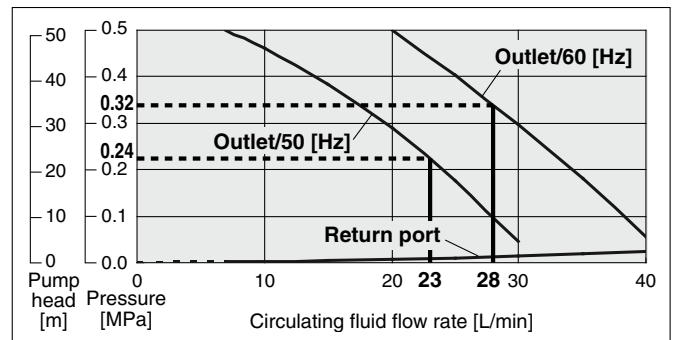


**HRS060-A<sub>W</sub>-20** (Single-phase 200 to 230 VAC)

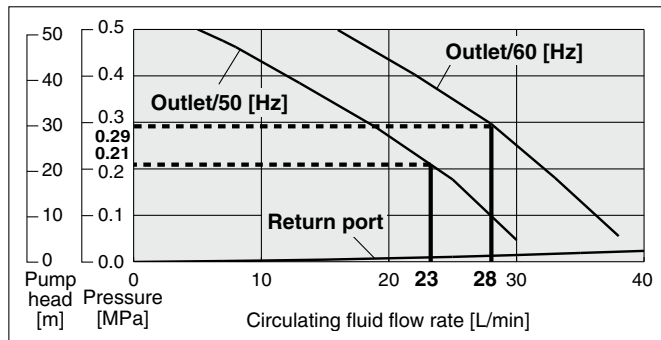

## Required Facility Water Flow Rate

**HRS012-W-<sup>10</sup><sub>20</sub>, HRS018-W-<sup>10</sup><sub>20</sub>, HRS024-W-20**  
**HRS030-W-20, HRS040-W-20, HRS050-W-20**  
**HRS060-W-20**

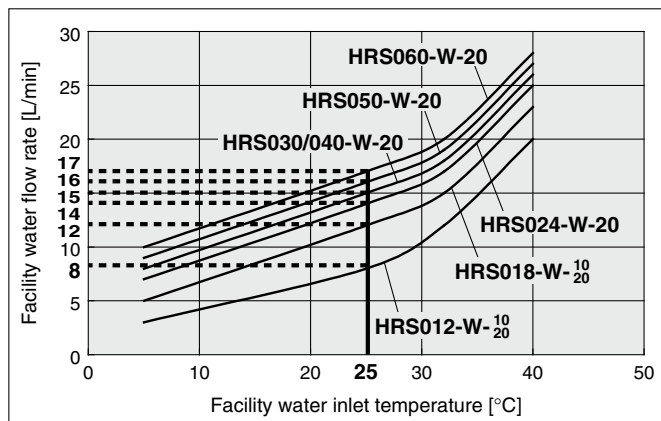


\* This is the facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.

## ⚠ Caution


### Mechanical Seal Pump

The pump used for the thermo-chiller HRS050/060 series uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

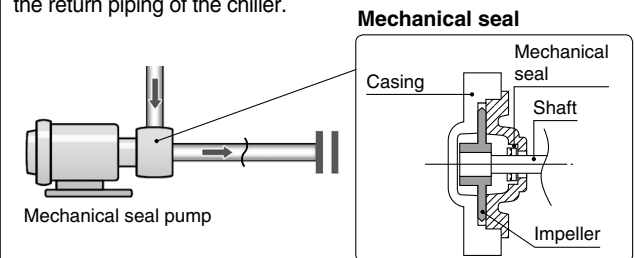


## Dimensions

### HRS012/018/024

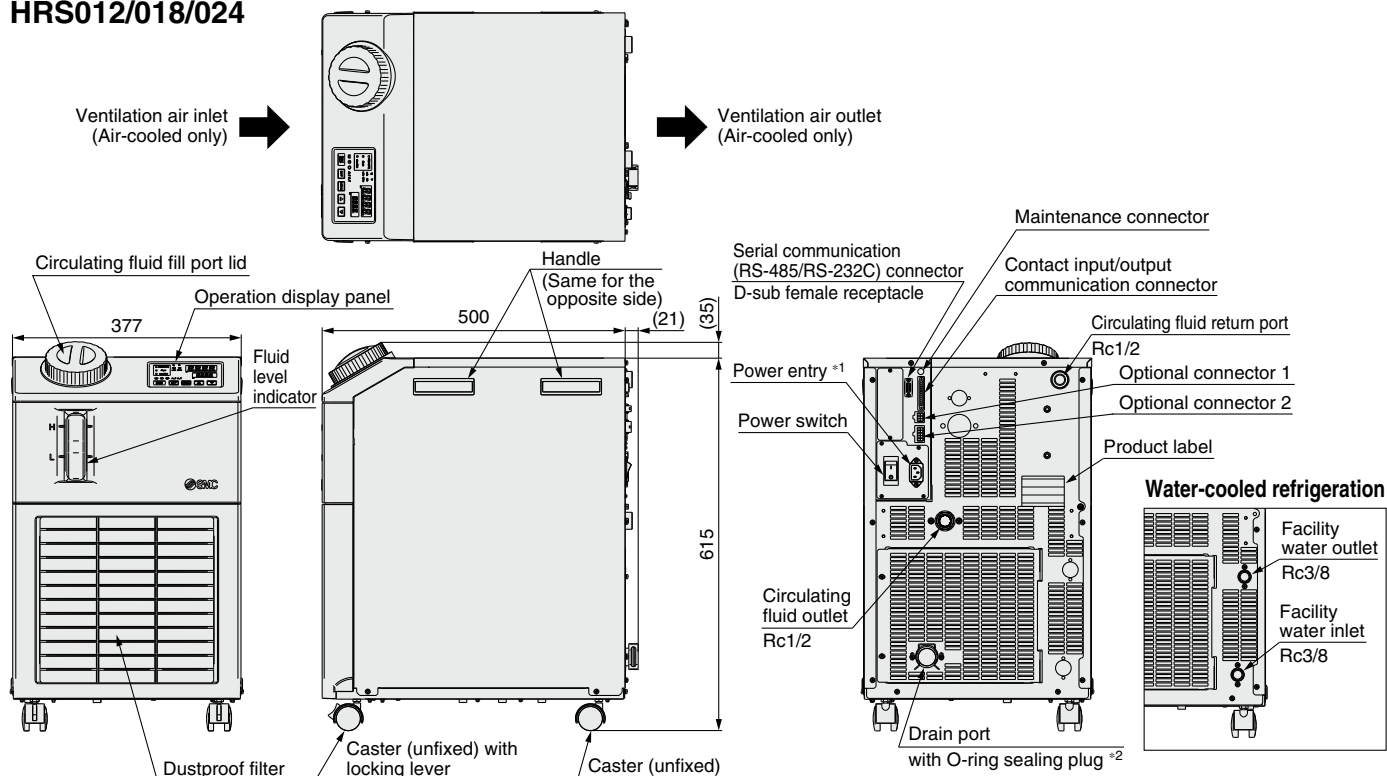

- \*1 The power supply cable is not provided. (The power supply connector is provided.)  
 \*2 The conversion fitting (R3/8 male thread) is provided.


### HRS030-A-20

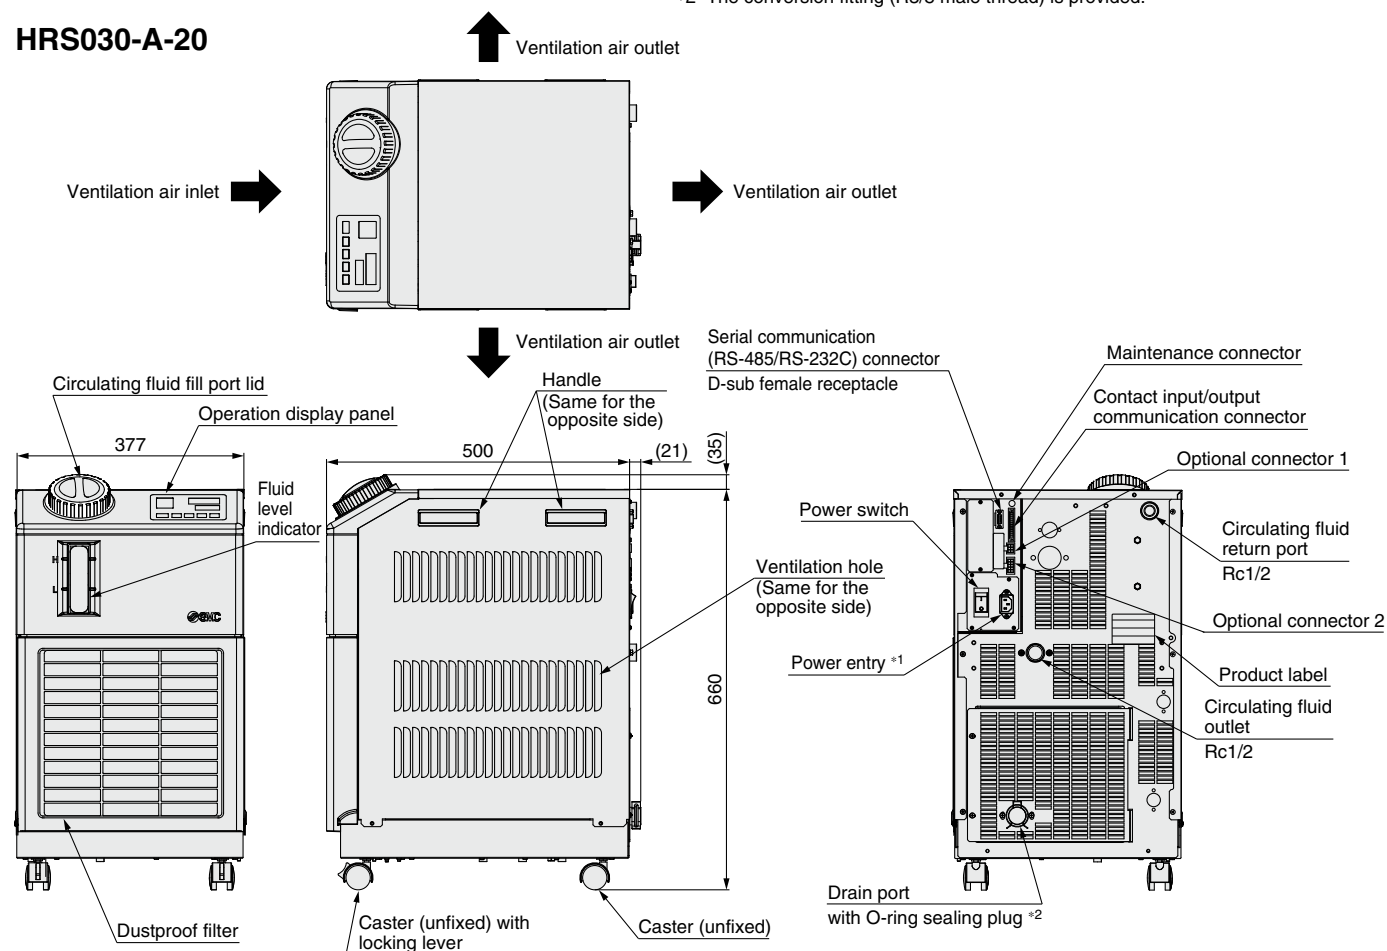


- \*1 The power supply cable is not provided. (The power supply connector is provided.)  
 \*2 The conversion fitting (R3/8 male thread) is provided.

## Dimensions

### HRS030-W-20

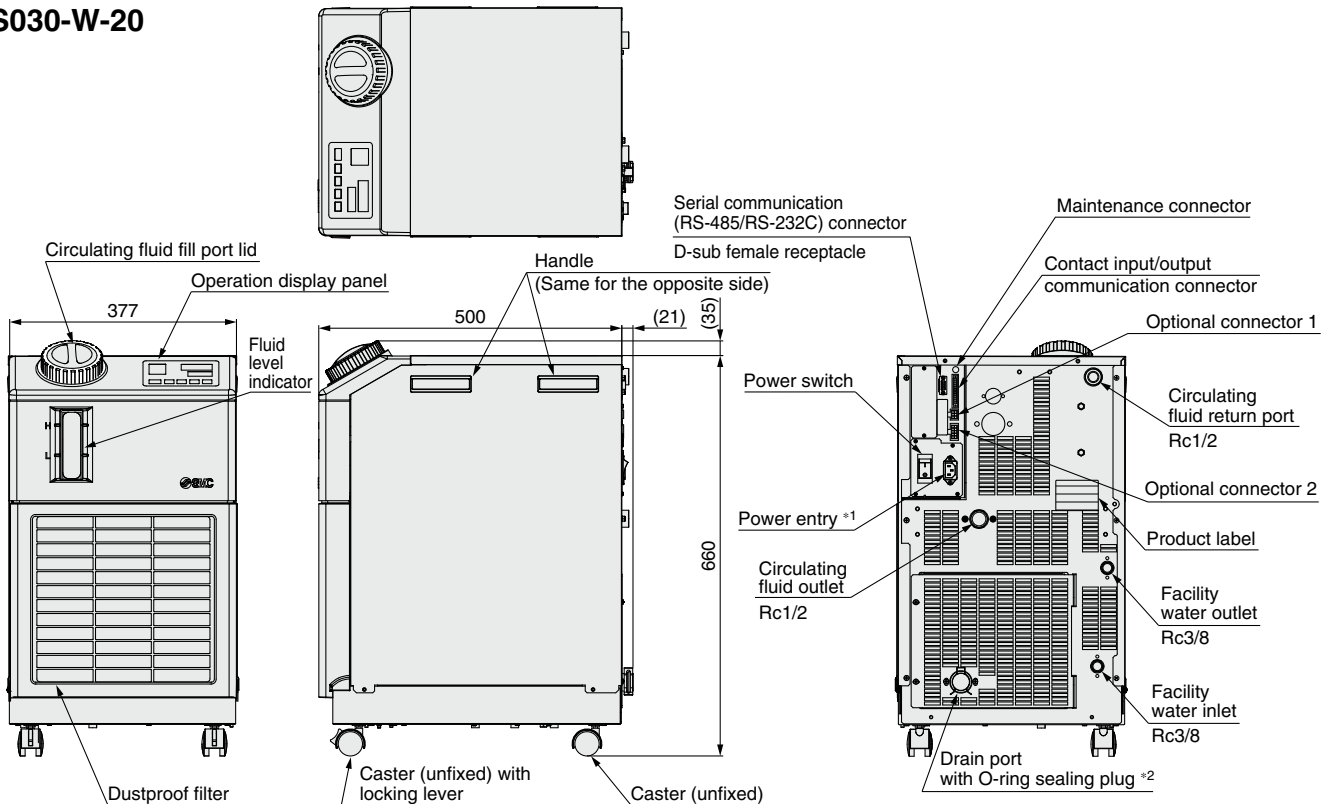


### HRS040-A-20

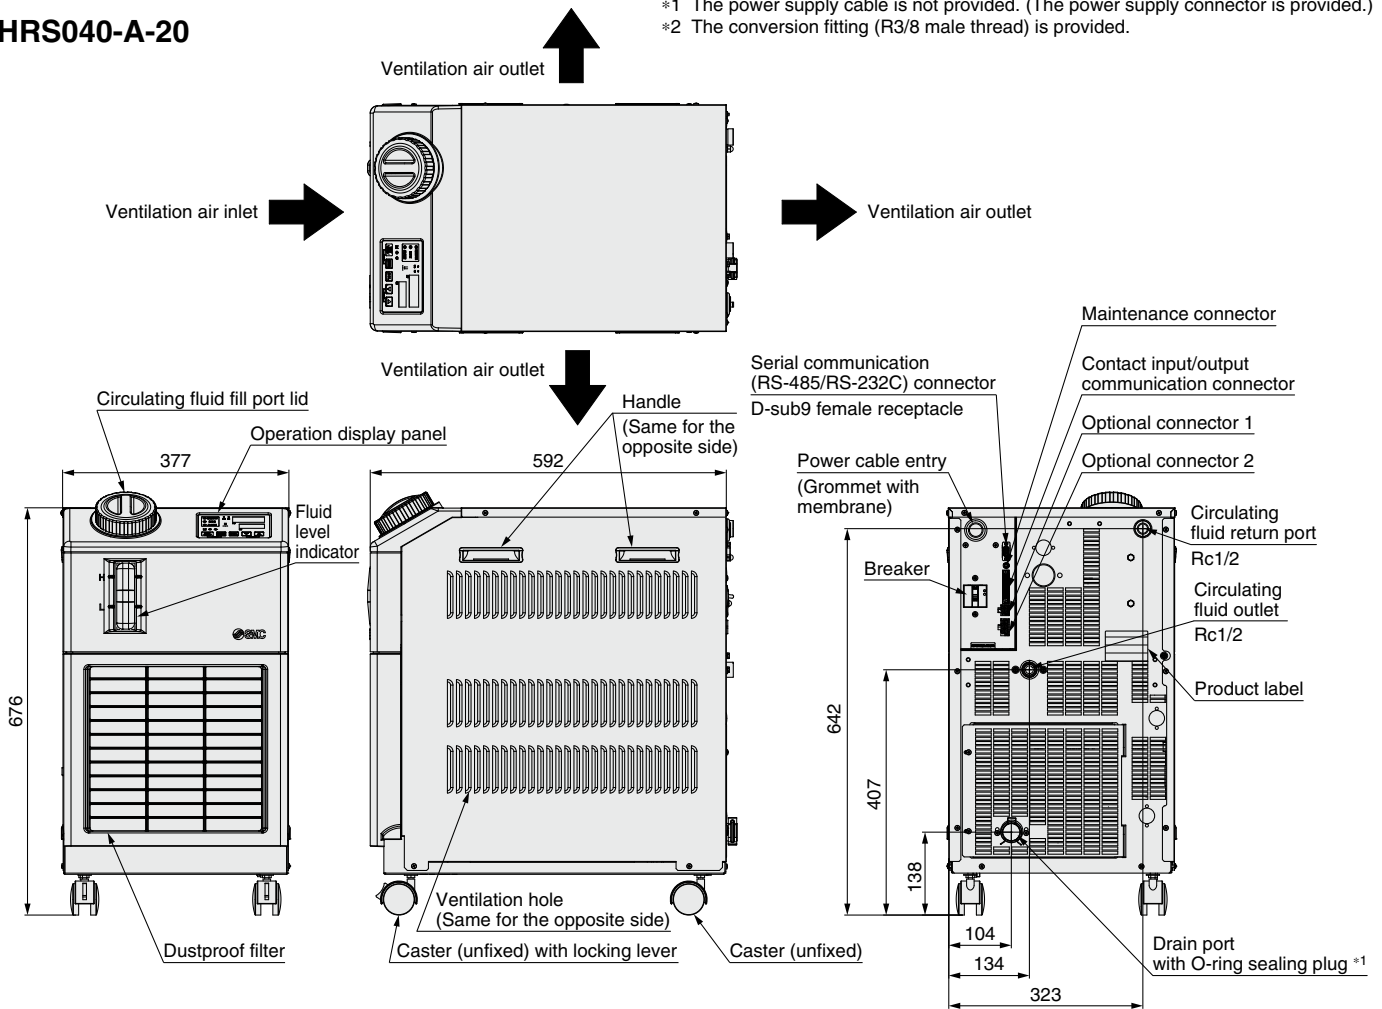

\*1 The product comes with a conversion fitting (R3/8 male thread).


## Dimensions

### HRS040-W-20

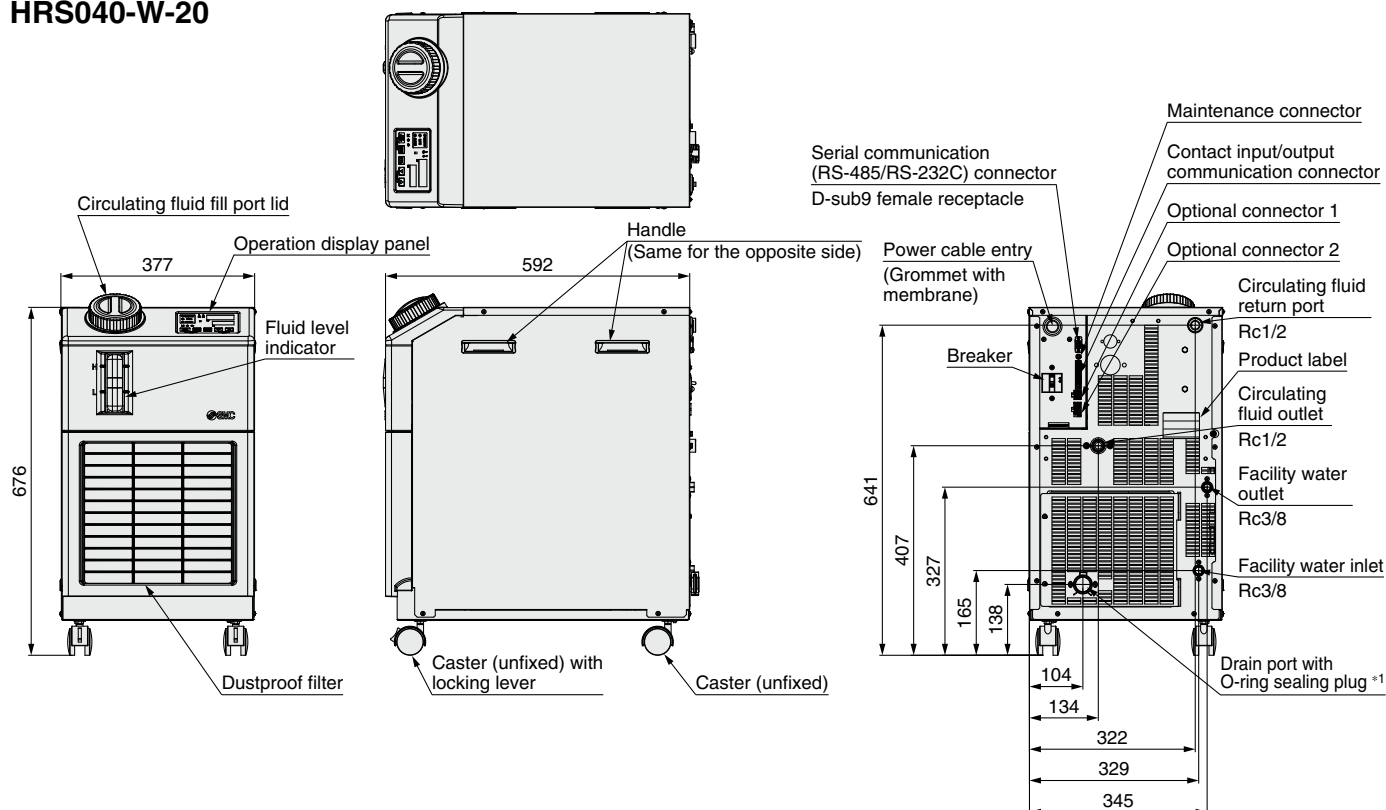

\*1 The product comes with a conversion fitting (R3/8 male thread).


### HRS050/060-A

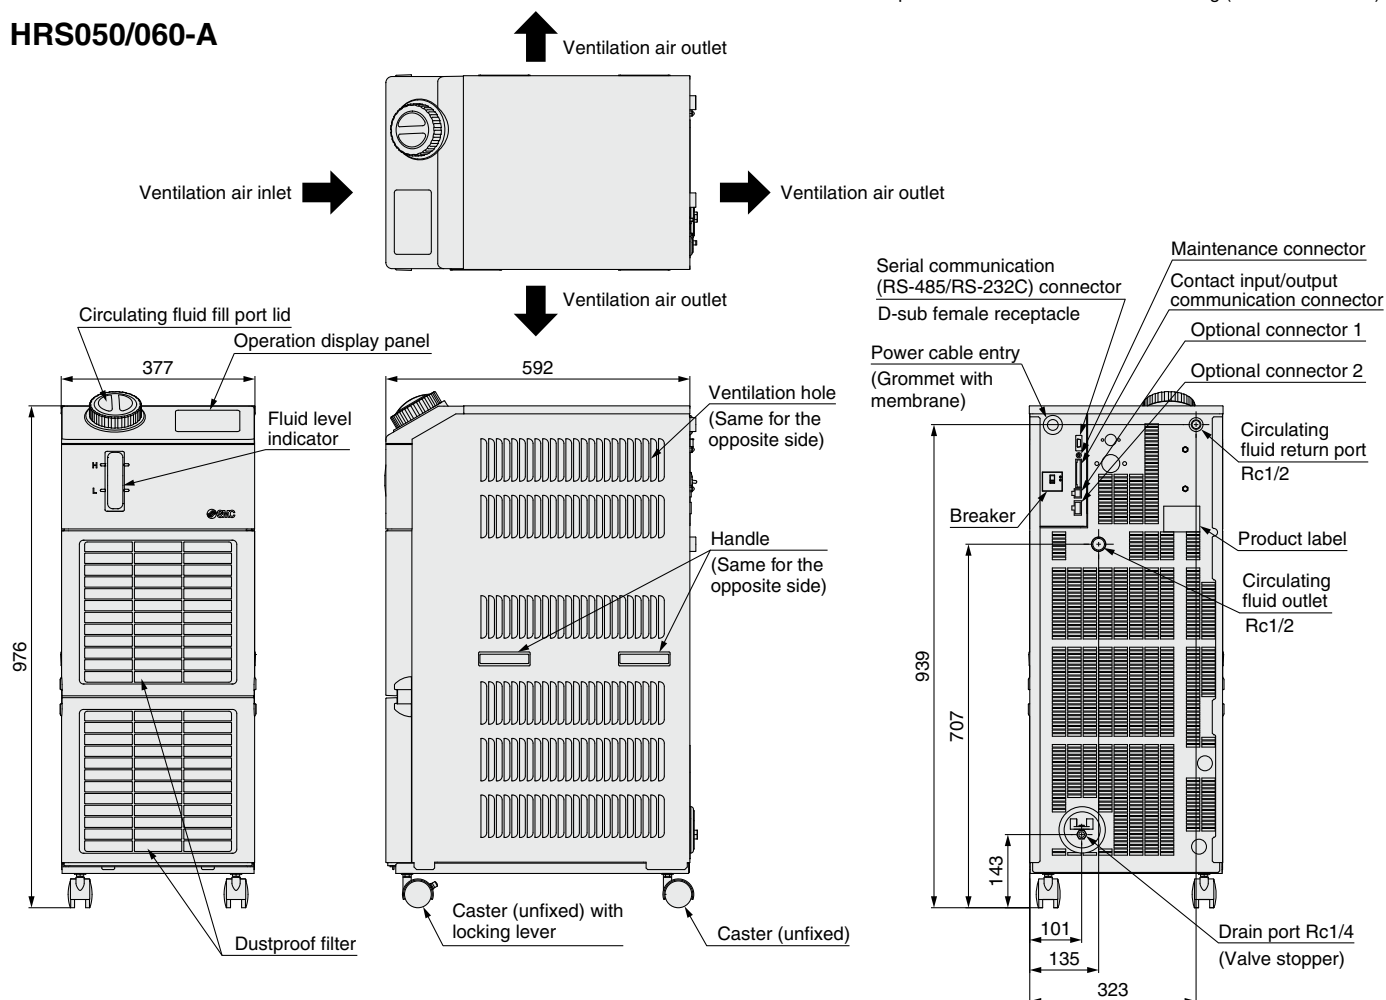



**Dimensions**


**HRS050/060-W**

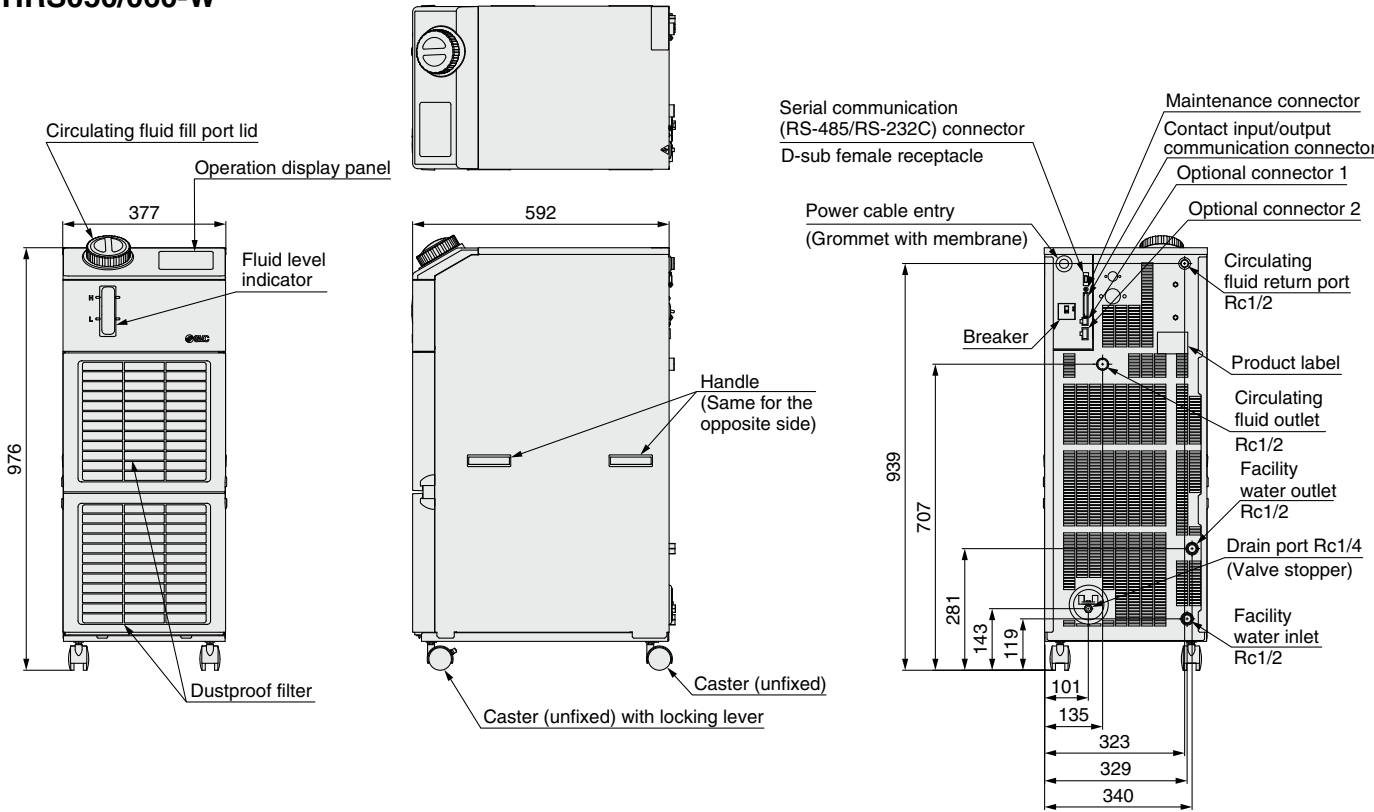

HRS
HRS-R
HRS090
HRS100/150
HRS200
HRS090
HRSH
HRSE
HRR
HRL
HRZ
HRZD
HRW
HECR
HEC
HEB
HED
Technical Data

## Recommended External Piping Flow

External piping circuit is recommended as shown below.

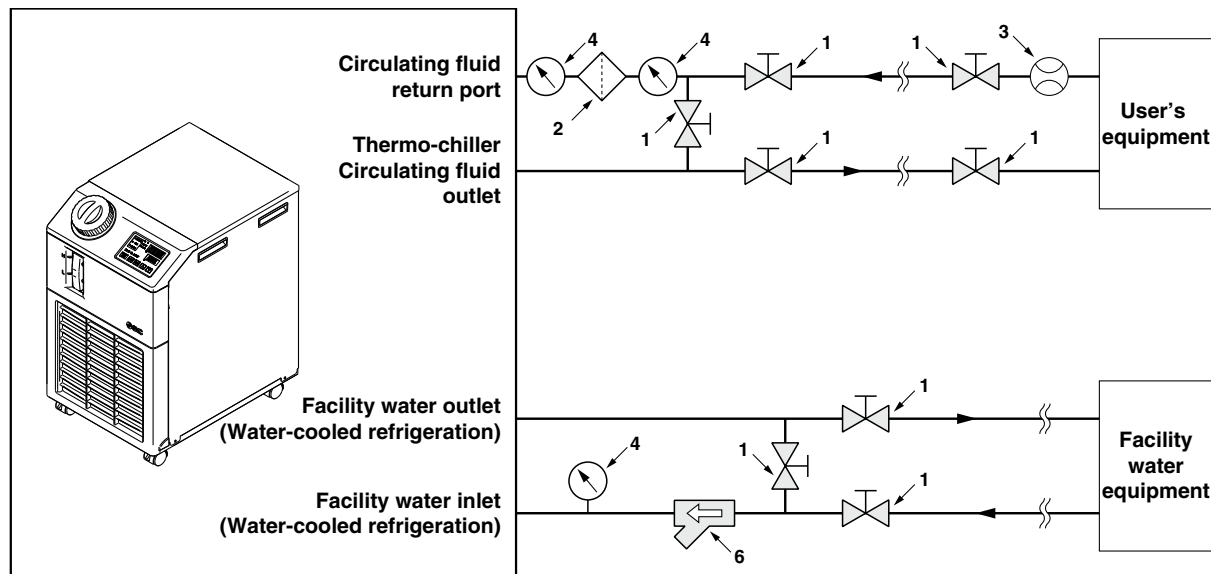

No.	Description	Size	Recommended part no.	Note
1	Valve	Rc1/2	—	—
2	Filter	Rc1/2 20 μm	HRS-PF□□□	If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter. For the recommended filter, refer to the optional accessory HRS-PF□□□ (page 64).
3	Flow meter	0 to 50 L/min	—	—
4	Pressure gauge	0 to 1.0 MPa	—	—
5	Others (pipe, hose, etc.)	ø15 or more	—	—
6	Y-strainer	Rc1/2 #40	—	Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter.
	Filter	Rc1/2 20 μm	FQ1011N-04-T020-B-X61*1	

\*1 The filter shown above cannot be directly connected to the thermo-chiller. Install it in the user's piping system.

## Cable Specifications


### Power Cable Specifications

Applicable model	Rated value for thermo-chiller			Power cable examples		
	Power supply	Applicable breaker rated current	Terminal block screw diameter	Cable size	Recommended crimped terminal	Optional accessories*1
HRS012-□□-10-□ HRS018-□□-10-□	Single-phase 100 VAC (50 Hz) Single-phase 100 to 115 VAC (60 Hz)	15 A	M3.5	3 cores x 2.0 mm <sup>2</sup> (3 cores x AWG14) * Including grounding cable	—	HRS-CA001
HRS012-□□-20-□ HRS018-□□-20-□ HRS024-□□-20-□ HRS030-□□-20-□	Single-phase 200 to 230 VAC (50/60 Hz)	10 A			—	HRS-CA002
HRS012-□□-20-□T HRS018-□□-20-□T HRS024-□□-20-□T HRS030-□□-20-□T		15 A			—	
HRS040-□□-20-□ HRS050-□□-20-□ HRS060-W□-20-□	Single-phase 200 to 230 VAC (50/60 Hz)	20 A	M4	3 cores x 3.5 mm <sup>2</sup> (3 cores x AWG12) * Including grounding cable	R5.5-4	HRS-CA004
HRS060-A□-20-□		30 A				—

\*1 The length of HRS-CA□□□ is 3 m.

## Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.

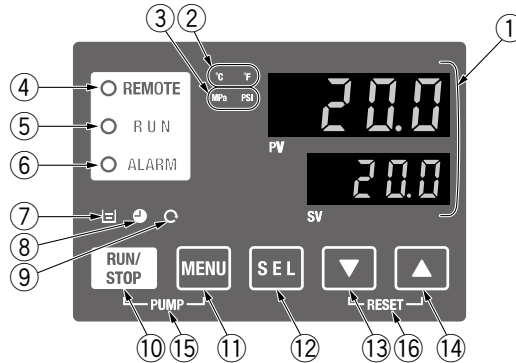

No.	Description	Function
①	<b>Digital display (7-segment, 4 digits)</b>	<b>PV</b> Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes). <b>SV</b> Displays the circulating fluid discharge temperature and the set values of other menus.
②	<b>[°C] [°F] lamp</b>	Equipped with a unit conversion function. Displays the unit of display temperature (default setting: °C).
③	<b>[MPa] [PSI] lamp</b>	Equipped with a unit conversion function. Displays the unit of display pressure (default setting: MPa).
④	<b>[REMOTE] lamp</b>	Enables remote operation (start and stop) by communication. Lights up during remote operation.
⑤	<b>[RUN] lamp</b>	Lights up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump.
⑥	<b>[ALARM] lamp</b>	Flashes with buzzer when alarm occurs.
⑦	<b>[ L ] lamp</b>	Lights up when the surface of the fluid level indicator falls below the L level.
⑧	<b>[ C ] lamp</b>	Equipped with a timer for start and stop. Lights up when this function is operated.
⑨	<b>[ C ] lamp</b>	Equipped with a power failure auto-restart function, which restarts the product automatically after stopped due to a power failure, is provided. Lights up when this function is operated.
⑩	<b>[RUN/STOP] key</b>	Makes the product start or stop.
⑪	<b>[MENU] key</b>	Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus (for monitoring and entry of set values).
⑫	<b>[SEL] key</b>	Changes the item in menu and enters the set value.
⑬	<b>[▼] key</b>	Decreases the set value.
⑭	<b>[▲] key</b>	Increases the set value.
⑮	<b>[PUMP] key</b>	Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).
⑯	<b>[RESET] key</b>	Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] indicator is reset.

## Alarm

This unit has 35 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

Alarm code	Alarm message	Operation status	Alarm code	Alarm message	Operation status
AL01	Low level in tank	Stop*1	AL20	Memory error	Stop
AL02	High circulating fluid discharge temperature	Stop	AL21	DC line fuse cut	Stop
AL03	Circulating fluid discharge temperature rise	Continue*1	AL22	Circulating fluid discharge temperature sensor failure	Stop
AL04	Circulating fluid discharge temperature drop	Continue*1	AL23	Circulating fluid return temperature sensor failure	Stop
AL05	High circulating fluid return temperature (60°C)	Stop	AL24	Compressor intake temperature sensor failure	Stop
AL06	High circulating fluid discharge pressure	Stop	AL25	Circulating fluid discharge pressure sensor failure	Stop
AL07	Abnormal pump operation	Stop	AL26	Compressor discharge pressure sensor failure	Stop
AL08	Circulating fluid discharge pressure rise	Continue*1	AL27	Compressor intake pressure sensor failure	Stop
AL09	Circulating fluid discharge pressure drop	Continue*1	AL28	Pump maintenance	Continue
AL10	High compressor intake temperature	Stop	AL29	Fan motor maintenance*3	Continue
AL11	Low compressor intake temperature	Stop	AL30	Compressor maintenance	Continue
AL12	Low super heat temperature	Stop	AL31*2	Contact 1 input signal detection	Stop*1
AL13	High compressor discharge pressure	Stop	AL32*2	Contact 2 inputs signal detection	Stop*1
AL15	Refrigerating circuit pressure (high pressure side) drop	Stop	AL33*4	Water leakage	Stop*1
AL16	Refrigerating circuit pressure (low pressure side) rise	Stop	AL34*4	Electric resistance rise	Continue
AL17	Refrigerating circuit pressure (low pressure side) drop	Stop	AL35*4	Electric resistance drop	Continue
AL18	Compressor overload	Stop	AL36*4	Electric resistance sensor failure	Continue
AL19*2	Communication error*2	Continue*1			

\*1 "Stop" or "Continue" are default settings. Users can change them to "Continue" and "Stop". For details, refer to the Operation Manual.

\*2 "AL19, AL31, AL32" are disabled in the default setting. If this function is necessary, it should be set by the user, referring to the Operation Manual.

\*3 For water-cooled models, the alarm is not activated.

\*4 This alarm function can be used when the option (sold separately) is used.

Please download the Operation Manual via our website, <https://www.smcworld.com>

## Communication Functions

### Contact Input/Output

Item		Specifications
Connector type (to the product/to the socket (Accessory))		MC1,5/12-GF-3,5 / MC1,5/12-STF-3,5 (made by PHOENIX CONTACT)
Input signal	Insulation method	Photocoupler
	Rated input voltage	24 VDC
	Operating voltage range	21.6 VDC to 26.4 VDC
	Rated input current	5 mA TYP
	Input impedance	4.7 kΩ
Contact output signal	Rated load voltage	48 VAC or less/30 VDC or less
	Maximum load current	500 mA AC/DC (Resistance load)
	Minimum load current	5 VDC 10 mA
Output voltage		24 VDC ±10% 0.5 A MAX
Circuit diagram		<p>To the thermo-chiller    User's equipment side</p> <p>24 VDC (0.5 A MAX)*2 24 VCOM</p> <p>12 24 VDC output 11 24 VCOM output 10 Run/Stop signal 9 Not set when shipping from factory 8 Operation status signal 7 Remote signal 6 Alarm signal 5 4 3 2 1</p> <p>Settings at the time of shipment from the factory*1 (Users can modify the settings.)</p>

\*1 The pin numbers and output signals can be set by the user. For details, refer to the Operation Manual.

\*2 When using with optional accessories, depending on the accessory, the allowable current of 24 VDC devices will be reduced. Refer to the operation manual of the optional accessories for details.

### Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out.

For details, refer to the Operation Manual for communication.

Writing	Readout	
Run/Stop Circulating fluid temperature setting (SV)	Circulating fluid present temperature Circulating fluid discharge pressure Electric resistance *1 Status information Alarm occurrence information	*1 When the optional accessory, "electric resistance sensor set" is used.

Item	Specifications	
Connector type	D-sub 9-pin, Female connector (Mounting screw: M2.6 x 0.45)	
Protocol	Modicon Modbus compliant/Simple communication protocol	
Standards	EIA standard RS-485	EIA standard RS-232C
Circuit diagram	<p>To the thermo-chiller    User's equipment side</p> <p>1 SD+ 5 SG 9 SD-</p>	<p>To the thermo-chiller    User's equipment side</p> <p>2 RD 3 SD 5 SG</p>

\* The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual. Do not connect other than in the way shown above, as it can result in failure.



# HRS Series Options

\* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

## B Option symbol

### With Earth Leakage Breaker


HRS ☐ - ☐ - ☐ - **B**

● With earth leakage breaker

Earth leakage breaker

In the event of a short circuit, overcurrent or overheating, the earth leakage breaker will automatically shut off the power supply.

Applicable model	HRS012/018- <input type="checkbox"/> <input type="checkbox"/> -10-B	HRS012/018/024/030- <input type="checkbox"/> <input type="checkbox"/> -20-B	HRS040- <input type="checkbox"/> <input type="checkbox"/> -20-B HRS050- <input type="checkbox"/> <input type="checkbox"/> -20-B HRS060-W <input type="checkbox"/> <input type="checkbox"/> -20-B	HRS060-A <input type="checkbox"/> <input type="checkbox"/> -20-B
Rated current sensitivity [mA]	30	30	30	30
Rated shutdown current [A]	15	10	20	30
Short circuit display method	Mechanical button			

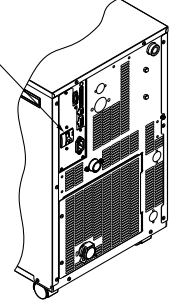

## J Option symbol

### With Automatic Fluid Fill Function


HRS ☐ - ☐ - ☐ - **J**

● With automatic fluid fill function

By installing this at the automatic fluid fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a fluid fill while the circulating fluid is decreasing.

Applicable model	HRS012/018/024/030/040/050/060- <input type="checkbox"/> <input type="checkbox"/> - <b>J</b>
Fluid fill method	Built-in solenoid valve for automatic fluid fill
Fluid fill pressure [MPa]	0.2 to 0.5

\* When the option, with automatic fluid fill function, is selected, the weight increases by 1 kg.

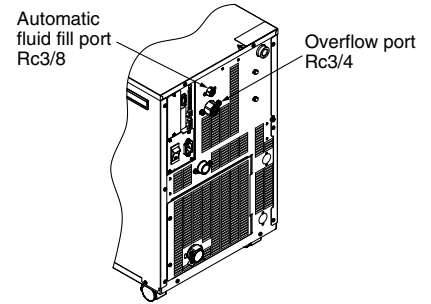

## M Option symbol

### Applicable to Deionized Water Piping

HRS ☐ - ☐ - ☐ - **M**

● Applicable to deionized water piping

Contact material of the circulating fluid circuit is made from non-copper materials. Select this when using deionized water with a conductivity of 1 MΩ·cm or more (1 μs/cm or less).

Applicable model	HRS012/018/024/030/040/050/060- <input type="checkbox"/> <input type="checkbox"/> - <b>M</b>
Contact material for circulating fluid	Stainless steel (including heat exchanger brazing), Alumina ceramic, SiC, Carbon, PP, PE, POM, FKM, NBR, EPDM, PVC

\* No change in external dimensions

## T Option symbol

### High-Pressure Pump Mounted

HRS ☐ - ☐ - ☐ - **T /MT**

● High-pressure pump mounted

Possible to choose a high-pressure pump in accordance with user's piping resistance. Cooling capacity will decrease by heat generated in the pump.

\* The HRS050/060 cannot be selected.

Applicable model			HRS012/018-□□-10-T/MT	HRS012/018/024/030-□□-20-T	HRS012/018/024/030-□□-20-MT*1	HRS040-□□-20-T/MT
Pump	Rated flow (50/60 Hz)*2, 3	L/min	7 (0.36 MPa)/10 (0.42 MPa)	10 (0.44 MPa)/14 (0.40 MPa)	10 (0.32 MPa)/14 (0.32 MPa)	23 (0.18 MPa)/28 (0.23 MPa)
	Maximum flow rate (50/60 Hz)	L/min	18/22			30/35
	Maximum pump head (50/60 Hz)	m	55	70	60	50
	Output	W	320	550		
Circuit protector		A	15	15 (10 A for standard)		20
Recommended earth leakage breaker capacity		A	15			20
Cooling capacity*4		W	The cooling capacity reduces about 300 W from the value in the catalog. (due to an increase in the heat generation of the pump)			

\*1 -MT: Applicable to deionized water piping + High-pressure pump

\*2 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

\*3 The required minimum flow rate for maintaining the cooling capacity or temperature stability


\*4 Cooling capacity will decrease as pump power increases.

\* When the option, high-pressure pump mounted, is selected, the weight increases by 4 kg for -10 type and 6 kg for -20 type.


\* No change in external dimensions

## Pump Capacity


### HRS012/018-□□-10-T/MT

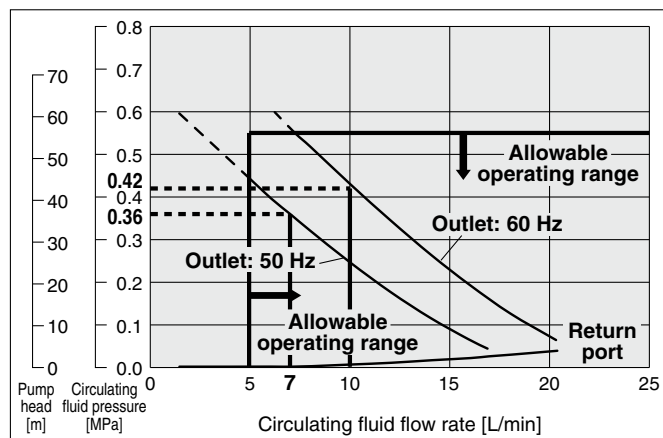


### HRS012/018/024-□□-20-T

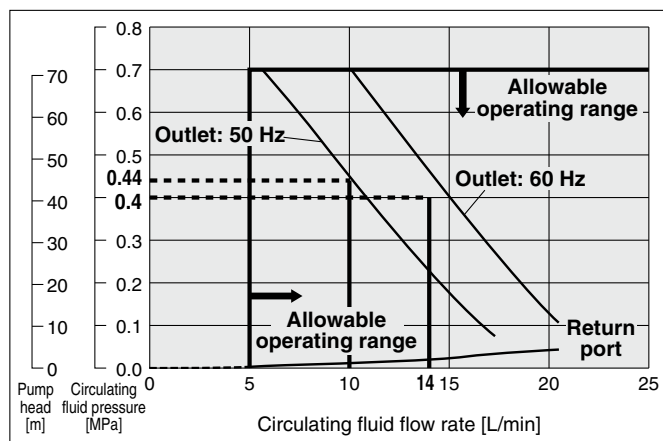

### HRS030-□□-20-T

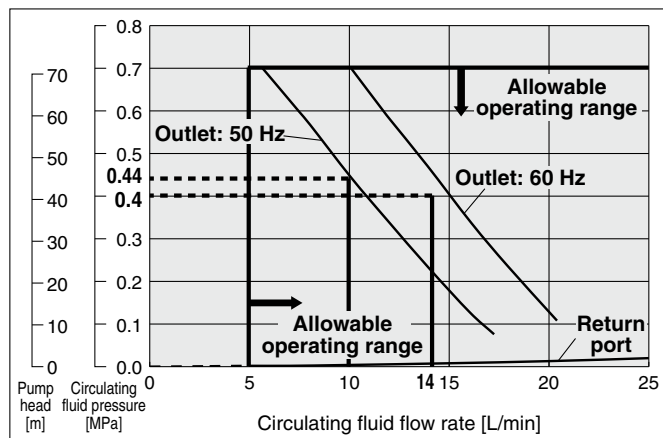


### HRS040-□□-20-T/MT

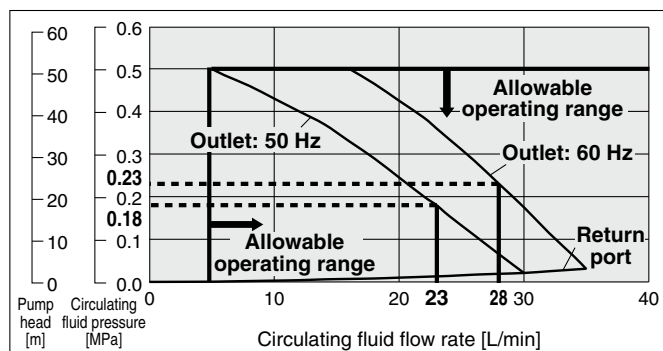


## ⚠ Caution

### Mechanical Seal Pump


The pump used for the option T/MT of the thermo-chiller HRS012 to 040 uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

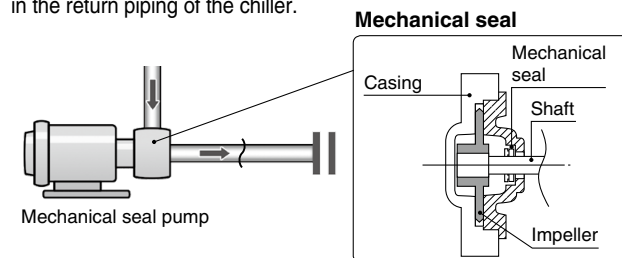

### HRS012/018/024-□□-20-MT

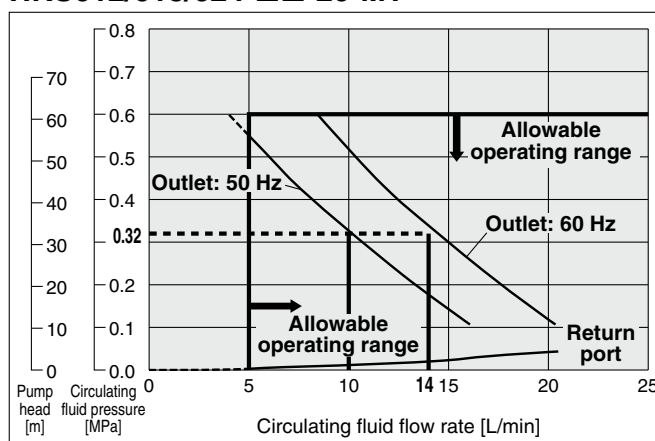

### HRS030-□□-20-MT

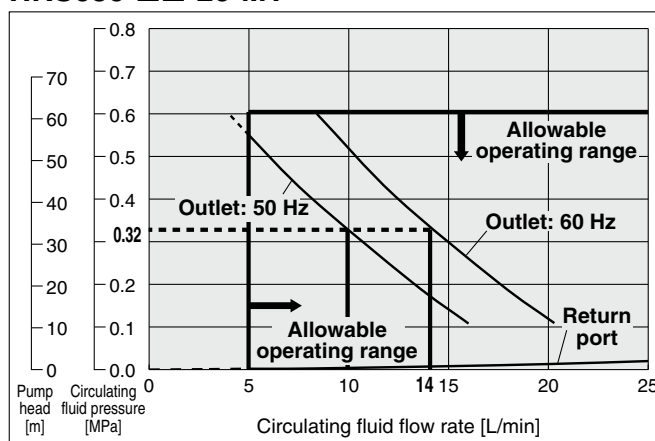

## W Option symbol

### SI Unit Only

HRS ☐ - ☐ ☐ - ☐ - **W**

• SI unit only

The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only.  
If this option is not selected, a product with a unit selection function will be provided by default.  
\* No change in external dimensions

\* Options have to be selected when ordering the thermo-chiller.  
It is not possible to add them after purchasing the unit.

## G Option symbol

### High-Temperature Environment Specification

HRS ☐ - **A** ☐ - **20** - **G**

• High-temperature environment specification


Applicable model	<b>HRS012/018/024-A□-20-G</b>
Cooling method	Air-cooled refrigeration
Power supply	Single-phase 200 to 230 VAC (50/60 Hz)

\* No change in external dimensions

\* The HRS030/040/050/060 cannot be selected.

This product makes use at ambient temperatures of up to 45°C possible.  
Also increases cooling capacity at ambient temperature of 32°C.  
(Cooling capacity is equal to standard products at ambient temperatures of less than 32°C.)

\* Ventilation slots are added to thermo-chiller side panels. For this reason, please provide 300 mm of ventilation space next to the side panels (do not install with sides touching walls).

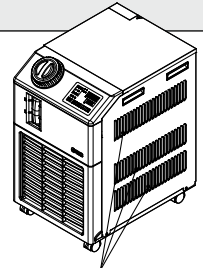

Ventilation slots are added to side panels (on both sides).


\* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 72) Item 14 "For altitudes of 1000 m or higher."

\* For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.


## Cooling Capacity

### HRS012-A□-20-G

(50 Hz)

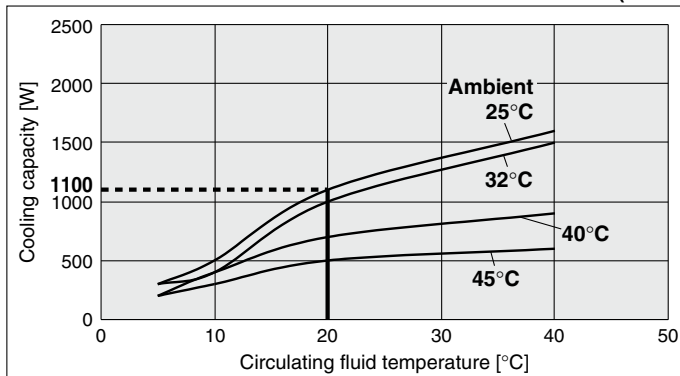


(60 Hz)

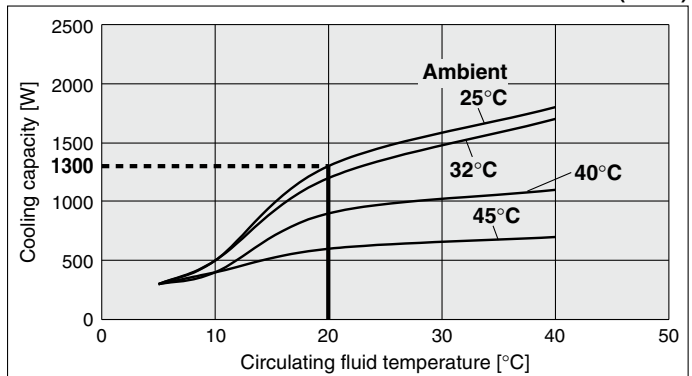


### HRS018-A□-20-G

(50 Hz)

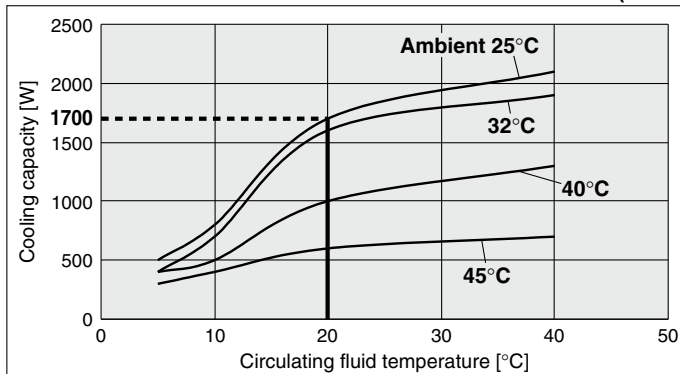


(60 Hz)

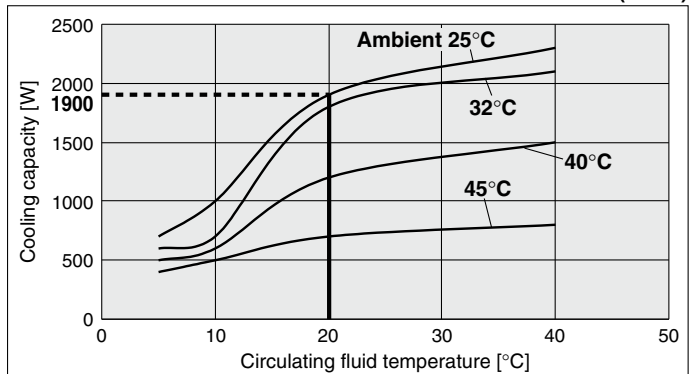


### HRS024-A□-20-G

(50 Hz)

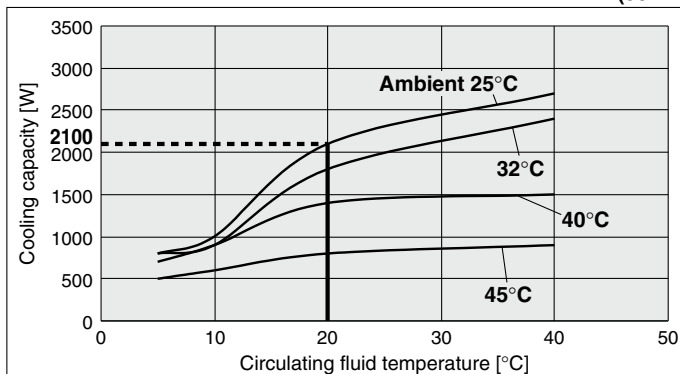

(60 Hz)

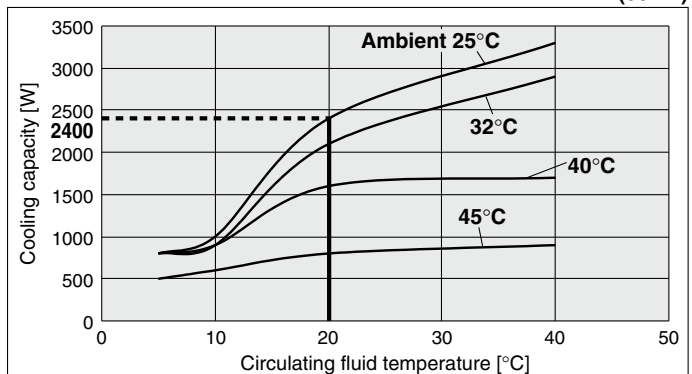

# HRS Series

## Optional Accessories

### Applicable Model List/Air-Cooled Refrigeration

- Optional accessories applicable to this model
- ★ Optional accessories recommended to be used for this model

No.	Description	Part no.	HRS012-A HRS018-A		HRS024-A-20	HRS030-A-20	HRS040-A-20	HRS050-A-20 HRS060-A-20	Option		Page
			-10	-20					(for -J)	(for -T)	
①	Anti-quake bracket	HRS-TK001	●	●	●	●	—	—	—	—	57
		HRS-TK002	—	—	—	—	●	●	—	—	
②	Piping conversion fitting (for air-cooled refrigeration)	G thread conversion fitting set	HRS-EP001	●	●	●	●	—	—	—	57
		NPT thread conversion fitting set	HRS-EP002	●	●	●	●	—	—	—	
		G thread conversion fitting set	HRS-EP009	—	—	—	—	●	—	—	
		NPT thread conversion fitting set	HRS-EP010	—	—	—	—	●	—	—	
③	Piping conversion fitting*1 (for automatic fluid fill port)	G thread conversion fitting set	HRS-EP005	—	—	—	—	—	●	—	58
		NPT thread conversion fitting set	HRS-EP006	—	—	—	—	—	●	—	
	Piping conversion fitting*2 (for drain outlet)	G thread conversion fitting set	HRS-EP007	—	—	—	—	—	—	●	
		NPT thread conversion fitting set	HRS-EP008	—	—	—	—	—	—	●	
④	Concentration meter	HRZ-BR002	●	●	●	●	●	●	●	●	59
⑤	Bypass piping set	HRS-BP001	●	●	●	●	—	—	—	—	59
		HRS-BP004	—	—	—	—	●	●	—	—	
⑥	Power supply cable	For single-phase 100/115 VAC type	HRS-CA001	●	—	—	—	—	—	—	60
		For single-phase 200 VAC type	HRS-CA002	—	●	●	—	—*3	—*3	—	
		For single-phase 100/115 VAC type	HRS-CA003	●	—	—	—	—	—	—	
		For single-phase 200 VAC type	HRS-CA004	—	—	—	●	●*4	—	—	
	Retaining clip	HRS-S0074	●	●	●	●	—	—	—	—	
⑦	DI filter set	HRS-DP001	●	●	●	●	●	●	—	—	61
		HRS-DP002	●	●	●	●	●	●	—	—	
⑧	Electric resistance sensor set	HRS-DI001	●	●	●	●	●	●	—	—	62
	Electric resistance control set	With control function/bypass	HRS-DI003	●	●	●	—	—	—	—	
		With bypass	HRS-DI004	●	●	●	—	—	—	—	
		With control function	HRS-DI005	●	●	●	●	●	—	—	
⑨	Electric conductivity sensor set	HRS-DI008	●	●	●	●	●	●	—	—	63
	Electric conductivity control set	With control function/bypass	HRS-DI009	●	●	●	—	—	—	—	
		With control function	HRS-DI011	●	●	●	●	●	—	—	
⑩	Particle filter set	(#5) OUT side	HRS-PF001	●	●	●	●	●	—	—	64
		(#10) OUT side	HRS-PF002	—	—	—	—	●	—	—	
		(#5) IN side	HRS-PF003	●	●	●	●	★	—	★	
		(#10) IN side	HRS-PF004	—	—	—	—	★	—	★	
⑪	Drain pan set	With water leakage sensor	HRS-WL001	●	●	●	●	—	—	—	65
			HRS-WL002	—	—	—	●	●	—	—	
⑫	Connector cover	HRS-BK001	●	●	●	●	—	—	—	—	66
		HRS-BK002	—	—	—	—	●	●	—	—	
⑬	Analog gateway unit	HRS-CV001	●	●	●	●	●	●	—	—	66
⑭	Replacement type dustproof filter set	HRS-FL001	●	●	●	—	—	—	—	—	66
	Replacement type dustproof filter	HRS-FL002	●	●	●	—	—	—	—	—	
⑮	Separately-installed*5 power transformer	IDF-TR1000-1	●	—	—	—	—*3		—	—	67
		IDF-TR1000-2	●	—	—	—			—	—	
		IDF-TR1000-3	●	—	—	—			—	—	
		IDF-TR1000-4	●	—	—	—			—	—	
		IDF-TR2000-9	—	●	●	●			—	—	
		IDF-TR2000-10	—	●	●	●			—	—	
		IDF-TR2000-11	—	●	●	●			—	—	
⑯	Filter for circulating fluid fill port	HRS-PF007	●	●	●	●	●	●	●	●	68

\*1 When option J is selected.

\*2 When option T or the HRS050/060 is selected.

\*3 For the HRS040/050/060 models: To be prepared by the user.

\*4 Not applicable for the HRS060-A□-20. To be prepared by the user.

\*5 This product does not have CE marking and is not compliant with UL standards.



## Applicable Model List/Water-Cooled Refrigeration

● Optional accessories applicable to this model  
★ Optional accessories recommended to be used for this model

No.	Description	Part no.	HRS012-W HRS018-W		HRS024-W-20	HRS030-W-20	HRS040-W-20	HRS050-W-20 HRS060-W-20	Option		Page
			-10	-20					(for ~J)	(for ~T)	
①	Anti-quake bracket	HRS-TK001	●	●	●	●	—	—	—	—	57
		HRS-TK002	—	—	—	—	●	●	—	—	
②	Piping conversion fitting (for water-cooled refrigeration)	G thread conversion fitting set	HRS-EP003	●	●	●	●	—	—	—	58
		NPT thread conversion fitting set	HRS-EP004	●	●	●	●	—	—	—	
		G thread conversion fitting set	HRS-EP011	—	—	—	—	●	—	—	
		NPT thread conversion fitting set	HRS-EP012	—	—	—	—	●	—	—	
③	Piping conversion fitting*1 (for automatic fluid fill port)	G thread conversion fitting set	HRS-EP005	—	—	—	—	●	●	—	58
		NPT thread conversion fitting set	HRS-EP006	—	—	—	—	●	●	—	
	Piping conversion fitting*2 (for drain outlet)	G thread conversion fitting set	HRS-EP007	—	—	—	—	—	—	●	
		NPT thread conversion fitting set	HRS-EP008	—	—	—	—	—	—	●	
④	Concentration meter	HRZ-BR002	●	●	●	●	●	●	●	●	59
⑤	Bypass piping set	HRS-BP001	●	●	●	●	—	—	—	—	59
		HRS-BP004	—	—	—	—	●	●	—	—	
⑥	Power supply cable	For single-phase 100/115 VAC type	HRS-CA001	●	—	—	—	—	—	—	60
		For single-phase 200 VAC type	HRS-CA002	—	●	●	—	—*3	—*3	—	
		For single-phase 100/115 VAC type	HRS-CA003	●	—	—	—	—	—	—	
		For single-phase 200 VAC type	HRS-CA004	—	—	—	●	●*4	—	—	
	Retaining clip	HRS-S0074	●	●	●	●	—	—	—	—	
⑦	DI filter set	HRS-DP001	●	●	●	●	●	●	—	—	61
		HRS-DP002	●	●	●	●	●	●	—	—	
⑧	Electric resistance sensor set	HRS-DI001	●	●	●	●	●	●	—	—	62
	Electric resistance control set	With control function/bypass	HRS-DI003	●	●	●	●	—	—	—	
		With bypass	HRS-DI004	●	●	●	●	—	—	—	
		With control function	HRS-DI005	●	●	●	●	●	—	—	
⑨	Electric conductivity sensor set	HRS-DI008	●	●	●	●	●	●	—	—	63
	Electric conductivity control set	With control function/bypass	HRS-DI009	●	●	●	●	—	—	—	
		With control function	HRS-DI011	●	●	●	●	●	—	—	
⑩	Particle filter set	(#5) OUT side	HRS-PF001	●	●	●	●	●	—	—	64
		(#10) OUT side	HRS-PF002	—	—	—	—	●	—	—	
		(#5) IN side	HRS-PF003	●	●	●	●	★	—	★	
		(#10) IN side	HRS-PF004	—	—	—	—	★	—	★	
⑪	Drain pan set	With water leakage sensor	HRS-WL001	●	●	●	●	—	—	—	65
			HRS-WL002	—	—	—	●	●	—	—	
⑫	Connector cover	HRS-BK001	●	●	●	●	—	—	—	—	66
		HRS-BK002	—	—	—	—	●	●	—	—	
⑬	Analog gateway unit	HRS-CV001	●	●	●	●	●	●	—	—	66
⑭	Replacement type dustproof filter set	—	—	—	—	—	—	—	—	—	—
	Replacement type dustproof filter	—	—	—	—	—	—	—	—	—	
⑮	Separately-installed*5 power transformer	IDF-TR1000-1	●	—	—	—	—*3	—	—	—	67
		IDF-TR1000-2	●	—	—	—		—	—	—	
		IDF-TR1000-3	●	—	—	—		—	—	—	
		IDF-TR1000-4	●	—	—	—		—	—	—	
		IDF-TR2000-9	—	●	●	●		—	—	—	
		IDF-TR2000-10	—	●	●	●		—	—	—	
		IDF-TR2000-11	—	●	●	●		—	—	—	
⑯	Filter for circulating fluid fill port	HRS-PF007	●	●	●	●	●	●	●	●	68


\*1 When option J is selected.  
\*2 When option T or the HRS050/060 is selected.  
\*3 For the HRS040/050/060 models: To be prepared by the user.  
\*4 Not applicable for the HRS060-A□-20. To be prepared by the user.  
\*5 This product does not have CE marking and is not compliant with UL standards.

# HRS Series

## ① Anti-Quake Bracket

This bracket can be used to reduce product damage in the case of an earthquake. An anchor bolt (M8) suitable for the flooring material should be prepared separately by the user. (Anti-quake bracket thickness: 1.6 mm)

[mm]			
Part no. (per unit)	Applicable model	A	B
<b>HRS-TK001</b>	HRS012-□□-□	555	(590)
	HRS018-□□-□		
	HRS024-□□-□		
<b>HRS-TK002</b>	HRS030-□□-□	546	(581)
	HRS040-□□-□		
	HRS050-□□-□		
<b>HRS-TK002</b>	HRS060-□□-□	664	(698)
	HRS060-□□-□		

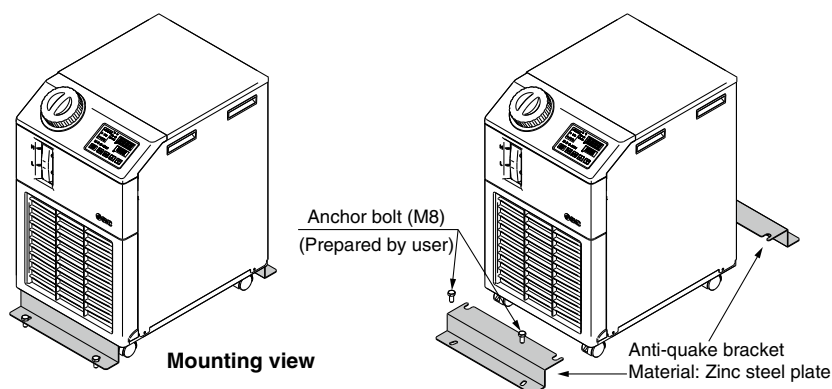

## ② Piping Conversion Fitting (For Air-Cooled Refrigeration)

### ■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet HRS012-A□-□, HRS018-A□-□, HRS024-A□-□, HRS030-A□-□, HRS040-A□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in “How to Order” since it is included in the product.

Part no.		Applicable model
<b>HRS-EP001</b>	G thread conversion fitting set	HRS012-A-□ HRS018-A-□ HRS024-A-□
<b>HRS-EP002</b>	NPT thread conversion fitting set	HRS030-A-□ HRS040-A-□

When the options, with automatic fluid fill function “-J”, or high-pressure pump mounted “-T” are selected, purchase ③ piping conversion fitting (for option), too.

### HRS050-A□-□, HRS060-A□-□



This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in “How to Order” since it is included in the product.

Part no.		Applicable model
<b>HRS-EP009</b>	G thread conversion fitting set	HRS050-A-□
<b>HRS-EP010</b>	NPT thread conversion fitting set	HRS060-A-□

When the option, with automatic fluid fill function “-J”, is selected, purchase ③ piping conversion fitting (for option), too.



Protrusion when  
the conversion  
fitting for  
circulating fluid  
is mounted

Approx. 43 mm

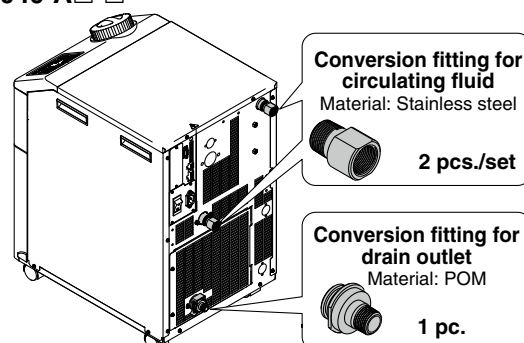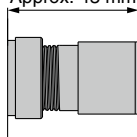

Protrusion when  
the conversion  
fitting for  
circulating fluid  
is mounted

Approx. 43 mm

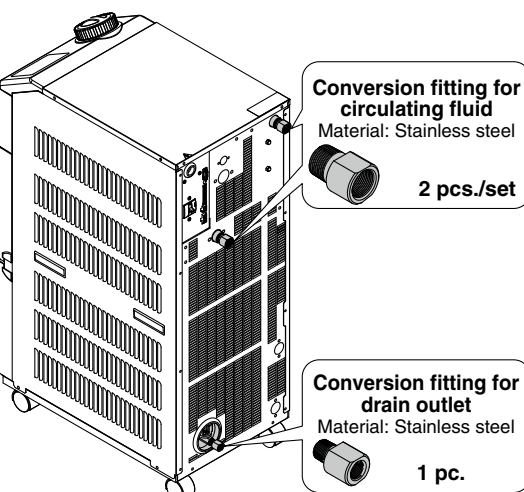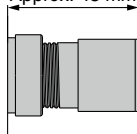

## ② Piping Conversion Fitting (For Water-Cooled Refrigeration)

### ■ Conversion fitting for circulating fluid + Conversion fitting for facility water + Conversion fitting for drain outlet HRS012-W□-□, HRS018-W□-□, HRS024-W□-□, HRS030-W□-□, HRS040-W□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.	Applicable model
<b>HRS-EP003</b> G thread conversion fitting set	HRS012-W□-□ HRS018-W□-□ HRS024-W□-□
<b>HRS-EP004</b> NPT thread conversion fitting set	HRS030-W□-□ HRS040-W□-□

When the options, with automatic fluid fill function "-J", or high-pressure pump mounted "-T" are selected, purchase ③ piping conversion fitting (for option), too.


### HRS050-W□-□, HRS060-W□-□

This fitting changes the port size for circulating fluid or facility water from Rc1/2 to G1/2 or NPT1/2 and for drain from Rc1/4 to G1/4 or NPT1/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.	Applicable model
<b>HRS-EP011</b> G thread conversion fitting set	HRS050-W□-□ HRS060-W□-□
<b>HRS-EP012</b> NPT thread conversion fitting set	HRS050-W□-□ HRS060-W□-□

When the option, with automatic fluid fill function "-J", is selected, purchase ③ piping conversion fitting (for option), too.

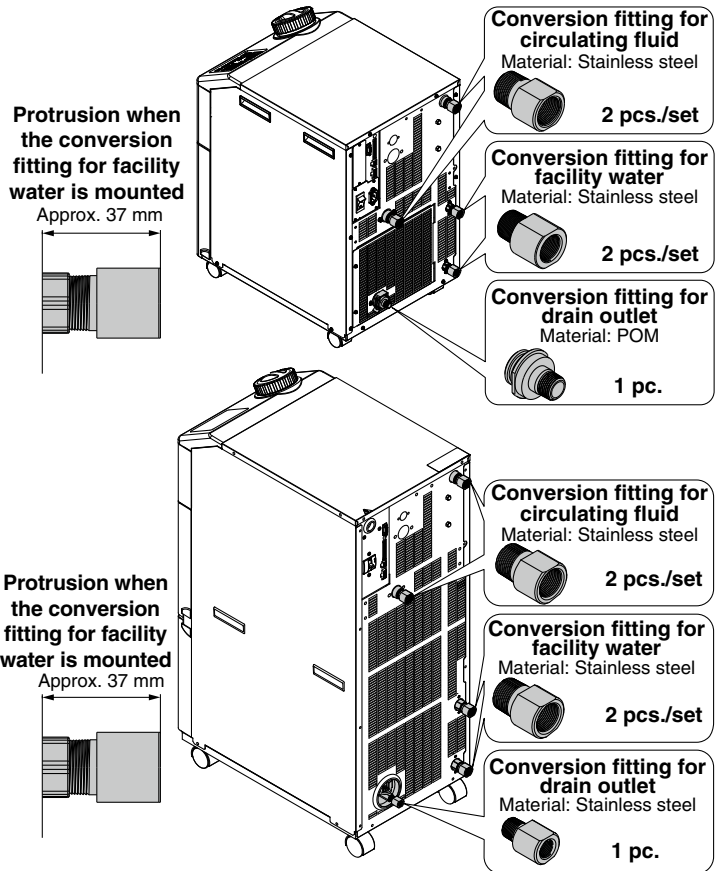


## ③ Piping Conversion Fitting (For Option)

### ■ Conversion fitting for automatic fluid fill port

This fitting changes the port size for the option, with automatic fluid fill function "-J" from Rc3/8, Rc3/4 to G3/8, G3/4 or NPT3/8, NPT3/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.


Part no.	Applicable model
<b>HRS-EP005</b> G thread conversion fitting set	HRS012-□-□-J HRS018-□-□-J HRS024-□-□-J HRS030-□-□-J
<b>HRS-EP006</b> NPT thread conversion fitting set	HRS040-□-□-J HRS050-□-□-J HRS060-□-□-J

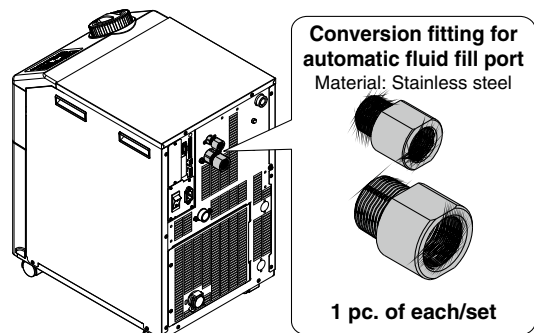

### ■ Conversion fitting for drain outlet

This fitting changes the port size for drain outlet for the option, high-pressure pump mounted "-T" from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.	Applicable model
<b>HRS-EP007</b> G thread conversion fitting	HRS012-□-□-T HRS018-□-□-T HRS024-□-20-T HRS030-□-20-T HRS040-□-20-T
<b>HRS-EP008</b> NPT thread conversion fitting	HRS050-□-20*1 HRS060-□-20*1

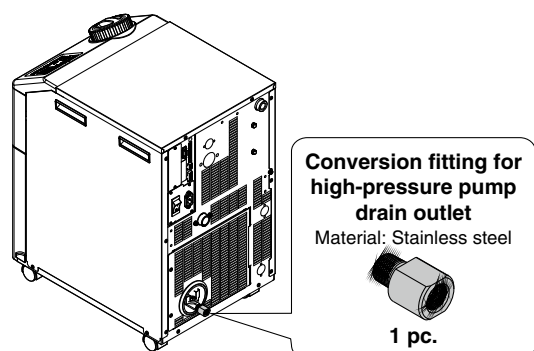


\*1 It is not necessary to purchase this when you purchase the HRS-EP009 to 012 since it is included in the product.

④ Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

Part no.	Applicable model
HRZ-BR002	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□

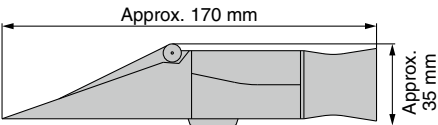

⑤ Bypass Piping Set

When the circulating fluid goes below the rated flow (7 L/min for the HRS012, 018, 024, 030 and 23/28 L/min for the HRS040, 050, 060), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set. A high-pressure pump is also available.

Part no.	Applicable model
HRS-BP001	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□


Parts List

No.	Description	Fluid contact material	Qty.
①	Bypass tube (Part no.: TL0806)	PFA	1 (Approx. 700 mm)
②	Outlet piping (With ball valve)	Stainless steel	1
③	Return port piping	Stainless steel	1
④	Nipple (Size: 1/2)	Stainless steel	2

Part no.	Applicable model
HRS-BP004	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□

Parts List

No.	Description	Fluid contact material	Qty.
①	Hose	PVC	1 (Approx. 700 mm)
②	Outlet piping (With ball valve)	Stainless steel	1
③	Return port piping	Stainless steel	1
④	Nipple (Size: 1/2)	Stainless steel	2
⑤	Hose band	—	2

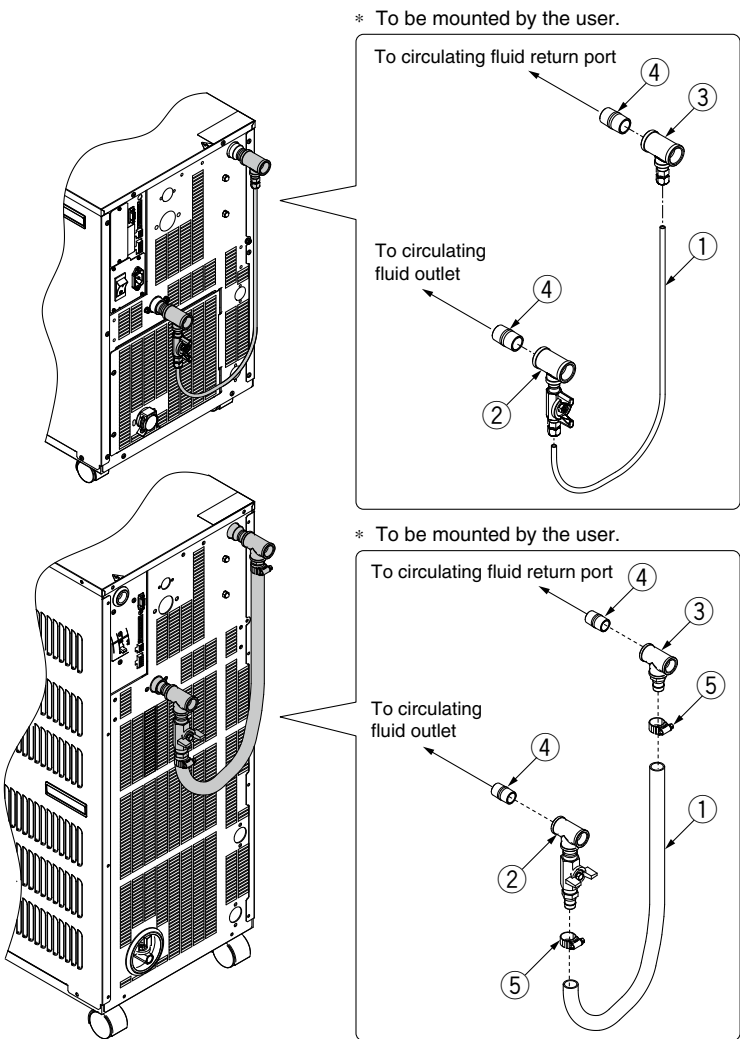


## ⑥ Power Supply Cable

### ■ For single-phase 100/115 VAC type

\* Not applicable for the 200 V type.


Part no.	Applicable model
<b>HRS-CA001</b>	HRS012-□□-10 HRS018-□□-10

\* Not applicable to retaining clip.

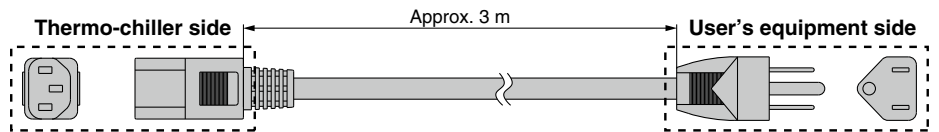

Part no.	Applicable model
<b>HRS-CA003</b>	HRS012-□□-10 HRS018-□□-10

\* Applicable to retaining clip.

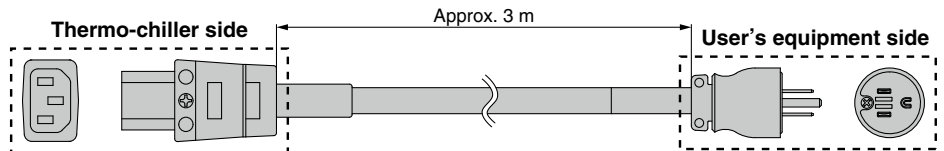


### ■ For single-phase 200 VAC type

\* Not applicable for the 100 V type.

Part no.	Applicable model
<b>HRS-CA002</b>	HRS012-□□-20 HRS018-□□-20 HRS024-□□-20 HRS030-□□-20


\* Applicable to retaining clip.

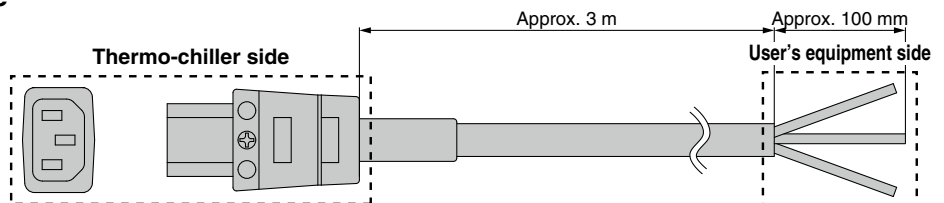

Part no.	Applicable model
<b>HRS-CA004</b>	HRS040-□□-20 HRS050-□□-20 HRS060-W□-20

\* Not available for the HRS060-A□-20.  
To be prepared by the user.



\* Not applicable to retaining clip.

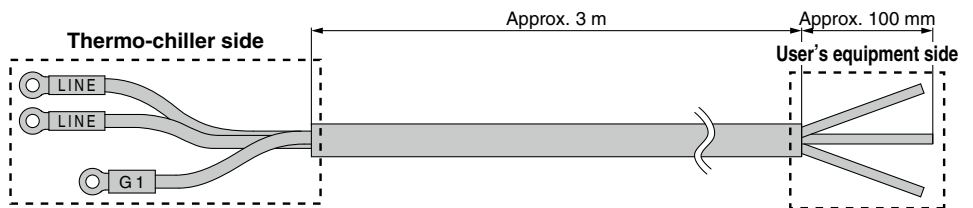

### ■ Retaining clip

Holds the connector on the thermo-chiller side in position.

Part no.	Applicable power supply cable
<b>HRS-S0074</b>	HRS-CA002 HRS-CA003 Power supply connector for accessory

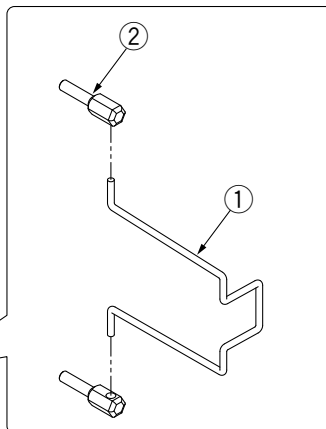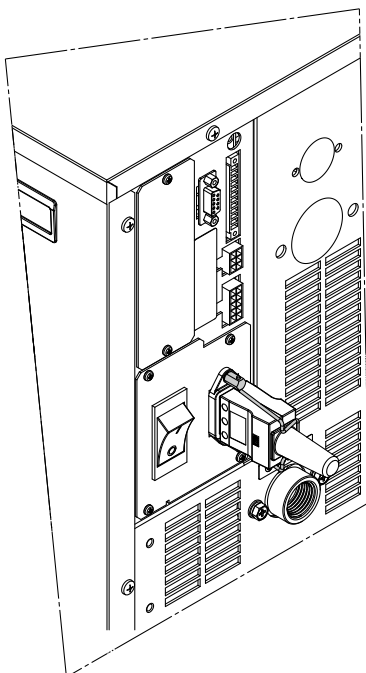

### Parts List

No.	Description
①	Retaining clip
②	Holding screw



⑦ DI Filter Set


It is possible to retain the level of electric resistance and electric conductivity by flowing the circulating through the ion replacement resin (DI filter). The set parts are in order to install DI filter to bypass circuit and flow the fixed rate of the circulating fluid to DI filter. It is not to control the value of electric resistance and electric conductivity. (Replacement cartridge: HRS-DF001)

■ Stainless steel type

Suitable for locations with dusty atmospheres.

Part no.	Applicable model
HRS-DP001	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□

\* Cannot be installed in combination with particle filter set (HRS-PF001 to PF004).

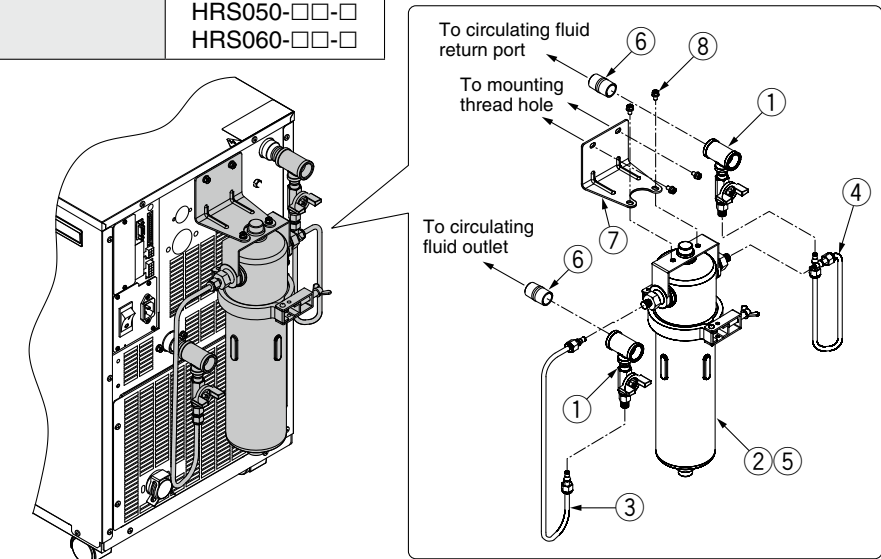

Parts List

No.	Description	Fluid contact material	Qty.
①	Branch line	Stainless steel	2
②	DI filter vessel	Stainless steel	1
③	DI filter inlet tube	PFA, POM	1
④	DI filter outlet tube	PFA, POM	1
⑤	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1
⑥	Nipple (Size: 1/2)	Stainless steel	2
⑦	Mounting bracket	—	1
⑧	Mounting screw (M6 screw, M5 screw)	—	2 pcs. each


\*1 The product should be replaced when it can no longer preserve the electrical resistivity/electrical conductivity set values.

■ Resin type

Lightweight and compact  
Can be installed in combination with the HRS-PF001, PF002.

Part no.	Applicable model
HRS-DP002	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□

\* Cannot be installed in combination with particle filter set (HRS-PF003, PF004).

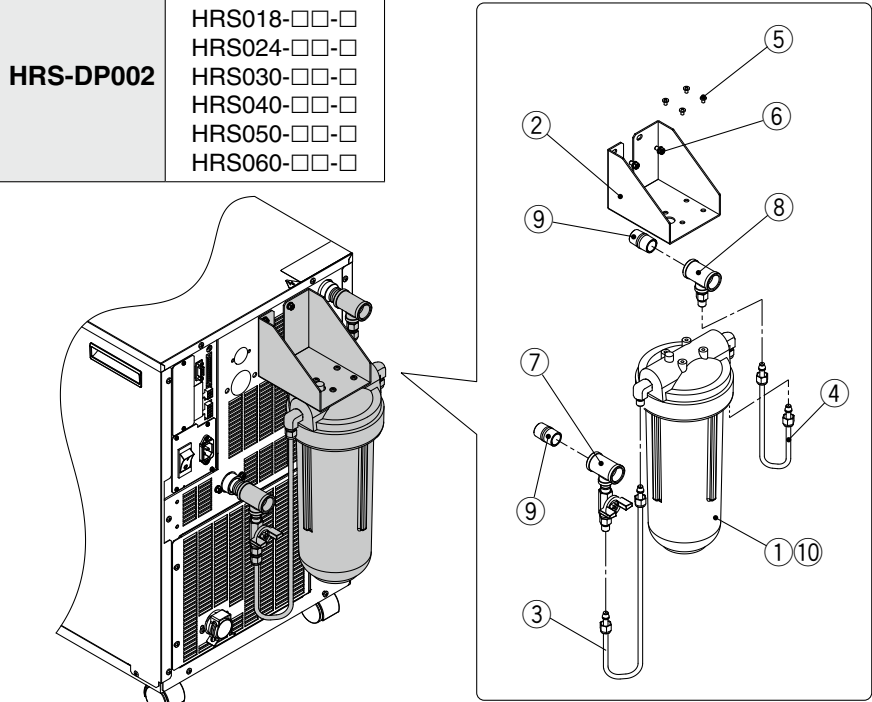

Parts List

No.	Description	Fluid contact material	Qty.
①	DI filter vessel	PC, PP	1
②	Mounting bracket	—	1
③	DI filter inlet tube	PFA, POM	1
④	DI filter outlet tube	PFA, POM	1
⑤	Tapping screw	—	4
⑥	Mounting screw (M5 screw)	—	2
⑦	Branch line for inlet	Stainless steel	1
⑧	Branch line for outlet	Stainless steel	1
⑨	Nipple (Size: 1/2)	Stainless steel	2
⑩	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1

\*1 The product should be replaced when it can no longer preserve the electrical resistivity/electrical conductivity set values.

## ⑧ Electric Resistance Sensor Set/Electric Resistance Control Set

**Option M needs to be selected at the time of purchase.**  
(When the electrical resistivity of the circulating fluid is 1 MΩ·cm or higher)

This product can be used to display, maintain, and control the electric resistivity of the circulating fluid (deionized water). The function differs according to the model (Refer to the table below). Refer to the Operation Manual for details.

Part no.	Applicable model
<b>HRS-DI001</b> <b>HRS-DI005</b>	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□
<b>HRS-DI003</b> <b>HRS-DI004</b>	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□

### List of Function

Optional accessories	Description	Electric resistivity display*1, *2	Electric resistivity maintenance	Electric resistivity control	Bypass*3
HRS-DI001	Electric resistance sensor set	○	×	×	×
HRS-DI003	Electric resistance control set	○	○	○	○
HRS-DI004	Electric resistance sensor set	○	○	×	○
HRS-DI005	Electric resistance control set	○	○	○	×

\*1 Display range is 0 to 4.5 MΩ·cm.


\*2 Readout using serial communications (RS-485/RS-232C) can be performed.

\*3 This function is dedicated for the HRS-BP001 and cannot be used for the HRS040/050/060.


### Specifications

	Electric resistance sensor set	Electric resistance control set
Measurement range of electric resistivity	0 to 4.5 MΩ·cm	
Set range of electric resistivity target	—	0.2 to 4.0 MΩ·cm
Set range of electric resistivity hysteresis	—	0.1 to 0.9 MΩ·cm
Operating temperature range (Circulating fluid temperature)	5 to 60°C	
Operating pressure range	0.5 MPa or less	
Current consumption	100 mA or less	400 mA or less
Installation environment	Indoors	

#### [Mounting example: HRS012-A-20-M + HRS-DI001]

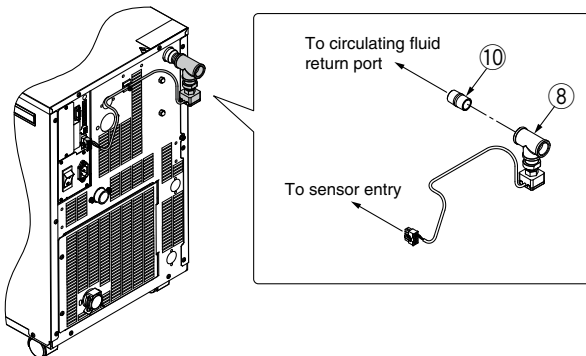

#### [Mounting example: HRS012-A-20-M + HRS-DI003]

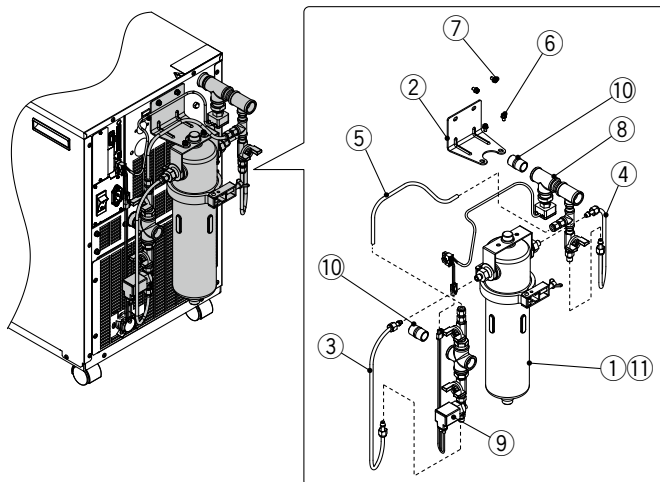

### Parts List

No.	Description	Fluid contact material	Qty.			
			DI001	DI003	DI004	DI005
①	DI filter vessel	Stainless steel	—	1	1	—
		PC, PP	—	—	—	1
②	Mounting bracket	—	—	1	1	1
③	DI filter inlet tube	PFA, POM	—	1	1	1
④	DI filter outlet tube	PFA, POM	—	1	1	1
⑤	Bypass tube	PFA	—	1	1	—
⑥	Mounting screw (M6 screw)	—	—	2	2	—
⑦	Mounting screw (M5 screw)	—	—	2	2	6
⑧	Electric resistance sensor	Stainless steel, PPS	1	1	1	1
⑨	Solenoid valve for control	Stainless steel, EPDM	—	1	—	1
⑩	Nipple (Size: 1/2)	Stainless steel	1	2	2	2
⑪	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	—	1	1	1

\*1 The product should be replaced when it can no longer preserve the electrical resistivity set value.

## ⑨ Electric Conductivity Sensor Set/Electric Conductivity Control Set

This product can be used to display, maintain, and control the electric conductivity of the circulating fluid (deionized water). The function differs according to the model (Refer to the table below). Refer to the Operation Manual for details.

Part no.	Applicable model
<b>HRS-DI008</b> <b>HRS-DI011</b>	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□
<b>HRS-DI009</b>	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□

### List of Function

Optional accessories	Description	Electric conductivity display*1, *2	Electric conductivity maintenance	Electric conductivity control	Bypass*3
HRS-DI008	Electric conductivity sensor set	○	×	×	×
HRS-DI009	Electric conductivity control set	○	○	○	○
HRS-DI011	Electric conductivity control set	○	○	○	×

\*1 Display range is 2 to 48  $\mu\text{S}/\text{cm}$ .


\*2 Readout using serial communications (RS-485/RS-232C) can be performed.

\*3 This function is dedicated for the HRS-BP001 and cannot be used for the HRS040/050/060.


### Specifications

	Electric conductivity sensor set	Electric conductivity control set
Measurement range of electric conductivity	2.0 to 48.0 $\mu\text{S}/\text{cm}$	
Set range of electric conductivity target	—	5.0 to 45.0 $\mu\text{S}/\text{cm}$
Set range of electric conductivity hysteresis	—	2.0 to 10.0 $\mu\text{S}/\text{cm}$
Operating temperature range (Circulating fluid temperature)	5 to 60°C	
Operating pressure range	0.5 MPa or less	
Current consumption	100 mA or less	400 mA or less
Installation environment	Indoors	

#### [Mounting example: HRS012-A-20 + HRS-DI008]

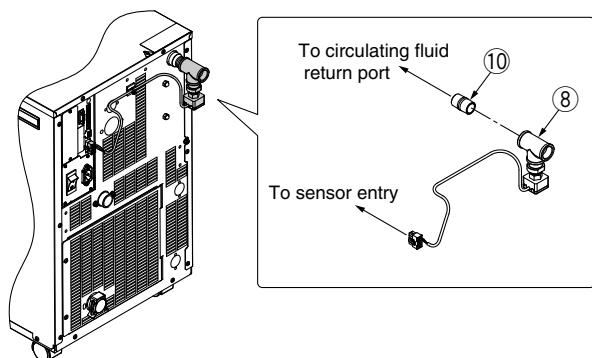

#### [Mounting example: HRS012-A-20 + HRS-DI009]

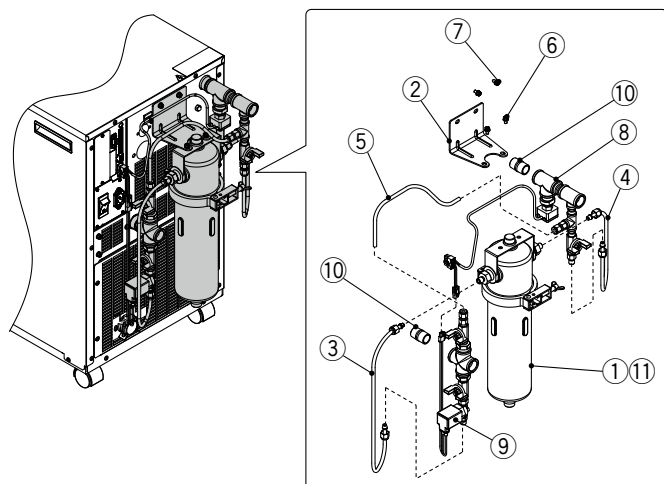

### Parts List

No.	Description	Fluid contact material	Qty.		
			DI008	DI009	DI011
①	DI filter vessel	Stainless steel	—	1	—
		PC, PP	—	—	1
②	Mounting bracket	—	—	1	1
③	DI filter inlet tube	PFA, POM	—	1	1
④	DI filter outlet tube	PFA, POM	—	1	1
⑤	Bypass tube	PFA	—	1	—
⑥	Mounting screw (M6 screw)	—	—	2	—
⑦	Mounting screw (M5 screw)	—	—	2	6
⑧	Electric conductivity sensor	Stainless steel, PPS	1	1	1
⑨	Solenoid valve for control	Stainless steel, EPDM	—	1	1
⑩	Nipple (Size: 1/2)	Stainless steel	1	2	2
⑪	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	—	1	1

\*1 The product should be replaced when it can no longer preserve the electrical conductivity set value.

## ⑩ Particle Filter Set

This set can be used to remove foreign matter from the circulating fluid.

**HRS-PF001-W075-H**

**PF002**  
**PF003**  
**PF004**

### ● Filtration

Symbol	Nominal filtration accuracy [μm]	Element part no. for PF001/ PF003 (individual part)	Element part no. for PF002/ PF004 (individual part)
<b>Nil</b>	Without element	—	—
<b>W005</b>	5	EJ202S-005X11	EJ302S-005X11
<b>W075</b>	75	EJ202S-075X11	EJ302S-075X11


### ● Accessory

Symbol	Accessory
<b>Nil</b>	None
<b>H</b>	With handle

### ■ For circulating fluid outlet [Used to protect your tool]

Part no.	Applicable model
<b>HRS-PF001</b> (Element length L = 125 mm)	HRS012-□□-□ HRS040-□□-□ HRS018-□□-□ HRS050-□□-□ HRS024-□□-□ HRS060-□□-□ HRS030-□□-□
<b>HRS-PF002</b> (Element length L = 250 mm)	HRS050-□□-□ HRS060-□□-□

#### Mounting view

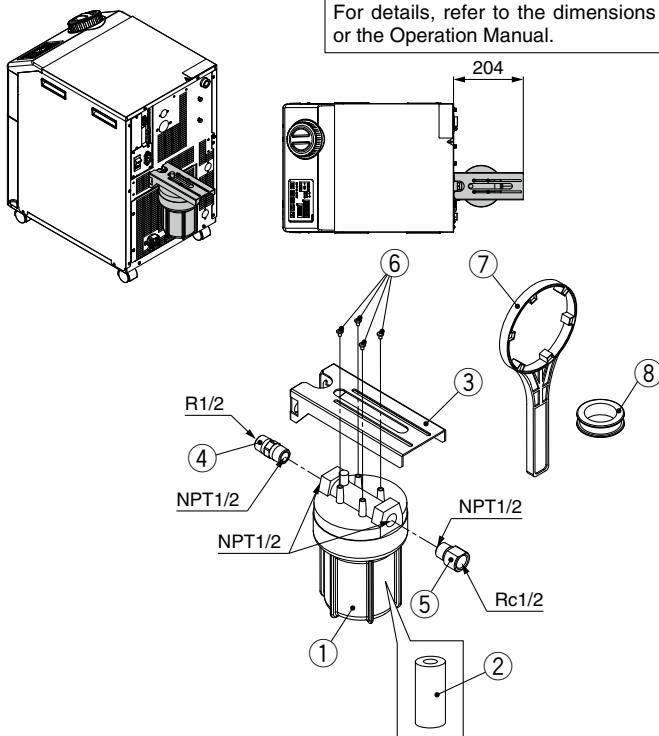


The following reference drawing shows the HRS-PF001 mounted on the HRS012 to 024.  
For details, refer to the dimensions or the Operation Manual.

### ■ For circulating fluid return port [Used to protect thermo-chiller]

If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter set.

Part no.	Applicable model
<b>HRS-PF003</b> (Element length L = 125 mm)	HRS012-□□-□ HRS040-□□-□ HRS018-□□-□ HRS050-□□-□ HRS024-□□-□ HRS060-□□-□ HRS030-□□-□
<b>HRS-PF004</b> (Element length L = 250 mm)	HRS050-□□-□ HRS060-□□-□

#### Mounting view

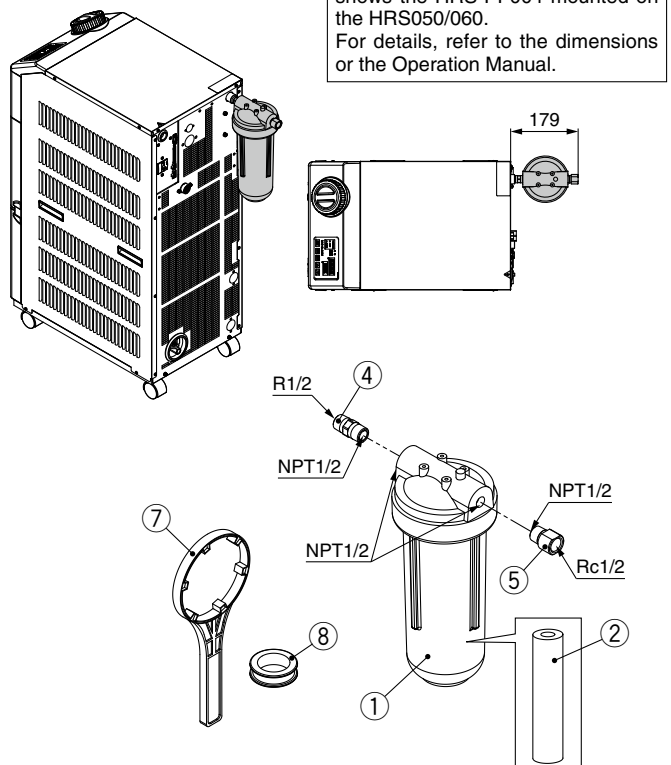

The following reference drawing shows the HRS-PF004 mounted on the HRS050/060.  
For details, refer to the dimensions or the Operation Manual.


### Parts List

No.	Model	Description	Fluid contact material	Qty.	Note
①	—	Body	PP	1	—
②	EJ202S-005X11	Element (Length L = 125 mm)	PP/PE	1	For HRS-PF001/003 The product should be replaced when the pressure drop reaches 0.1 MPa. For HRS-PF002/004
	EJ202S-075X11	Element (Length L = 125 mm)		1	
	EJ302S-005X11	Element (Length L = 250 mm)		1	
	EJ302S-075X11	Element (Length L = 250 mm)		1	
③	—	Particle filter bracket	—	1	For HRS-PF001/002
④	—	Nipple	Stainless steel	1	Conversion from R to NPT
⑤	—	Extension piece	Stainless steel	1	Conversion from NPT to Rc
⑥	—	Tapping screw	—	4	—
⑦	—	Handle	—	1	When -H is selected
⑧	—	Sealant tape	PTFE	1	—


⑪ Drain Pan Set (With Water Leakage Sensor)

Drain pan for the thermo-chiller. Liquid leakage from the thermo-chiller can be detected by mounting the attached water leakage sensor. Anchor bolt (M8) suitable for the flooring material should be prepared separately by the user.

Part no.	Applicable model
HRS-WL001	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□

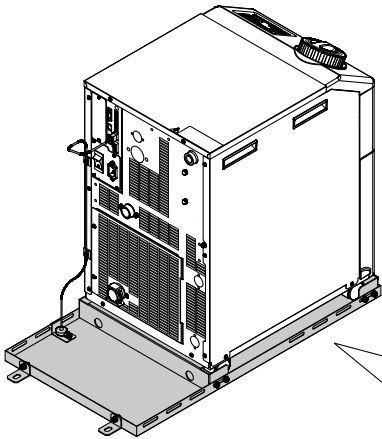


HRS012/018/024/030

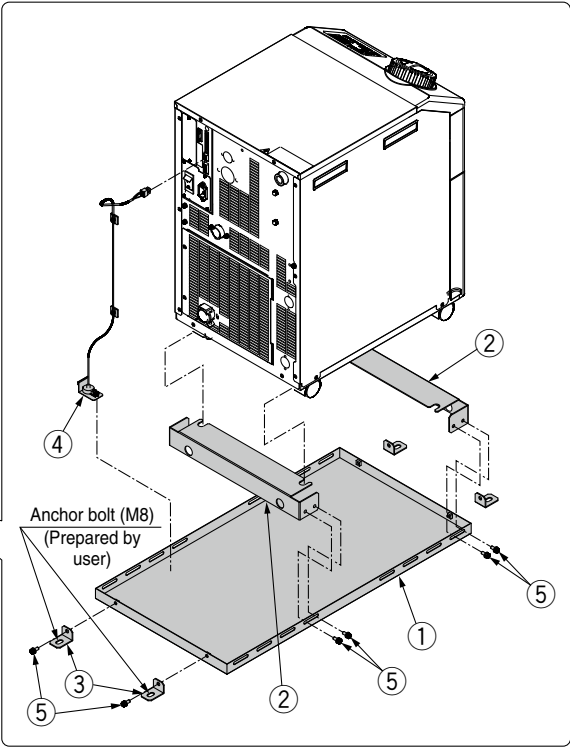


Parts List

No.	Description
①	Drain pan
②	Thermo-chiller fixing bracket (2 pcs.)
③	Drain pan fixing bracket (4 pcs.)
④	Water leakage sensor
⑤	Bracket fixing screw (M6 screw, 12 pcs.)

Part no.	Applicable model
HRS-WL002	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□

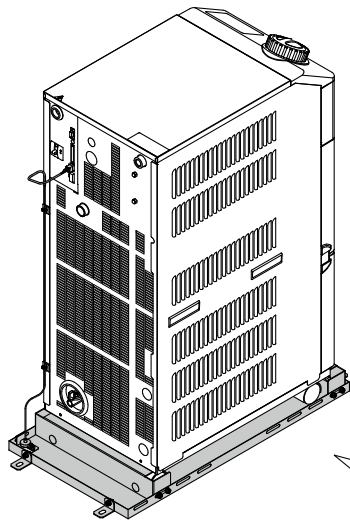

HRS050/060

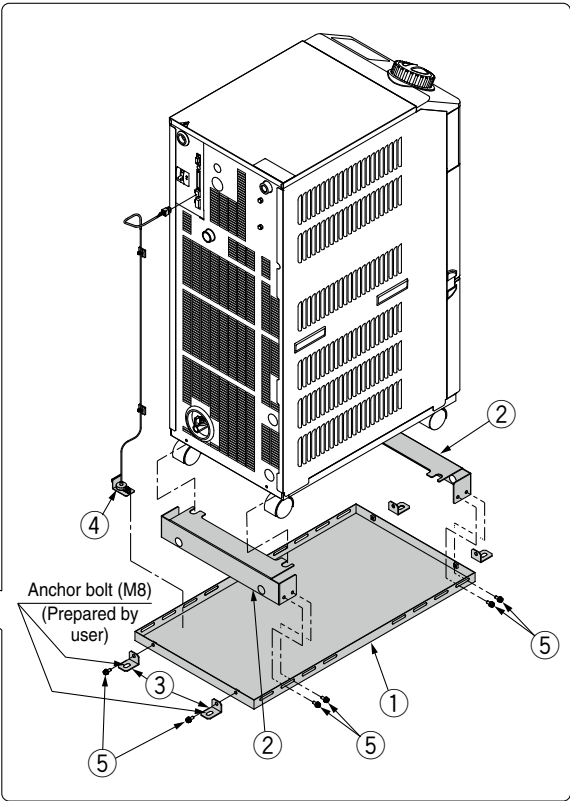

Parts List


No.	Description
①	Drain pan
②	Thermo-chiller fixing bracket (2 pcs.)
③	Drain pan fixing bracket (4 pcs.)
④	Water leakage sensor
⑤	Bracket fixing screw (M6 screw, 12 pcs.)




## ⑫ Connector Cover

This product can be used for protecting the connector on the rear side.

Part no.	Applicable model
<b>HRS-BK001</b>	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□

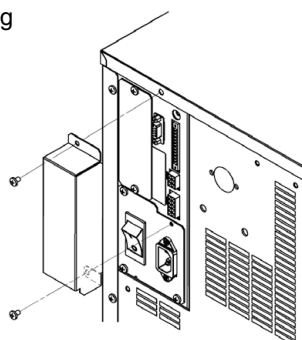

Part no.	Applicable model
<b>HRS-BK002</b>	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□

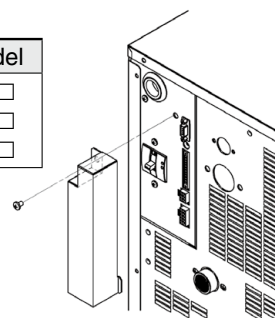

## ⑬ Analog Gateway Unit

This is an expansion unit for adding analog communication functions.  
“Analog communication, contact input/output” functions can be used.

### ● Analog communication

The set circulating fluid temperature can be changed by entering the analog voltage.

Converts the current circulating fluid temperature and current electric resistance value (\*1) to an analog voltage for output.

\*1 Displayed when optional “Electric resistance sensor set/HRS-DI001, DI003, DI004, and DI005” are used.

### ● Contact input/output

The Run/Stop of the thermo-chiller HRS series can be operated by a contact signal.


The contact signal of the operation status, alarm occurrence status and the TEMP READY status can also be output.

Part no.	Applicable model
<b>HRS-CV001</b>	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□


### Parts List

No.	Description
①	Analog gateway box
②	Connection cable
③	Mounting bracket
④	Mounting screw (M3, 2 pcs.)

When this product is used, the “contact input/output” and “serial communication” functions standardly equipped in the thermo-chiller HRS series cannot be used.

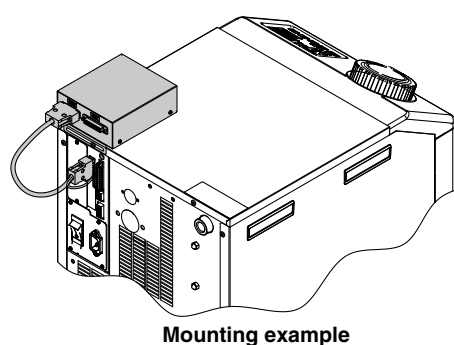

Mounting example

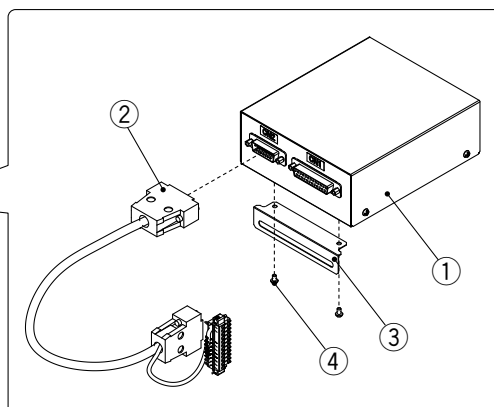


## ⑭ Replacement Type Dustproof Filter Set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

Part no.	Applicable model
<b>HRS-FL001</b>	HRS012-A□-□
	HRS018-A□-□
	HRS024-A□-□

### Parts List

No.	Description	Part no.	Note
①	Replacement type dustproof filter set	HRS-FL001	A front panel with hook-and-loop fastener for holding the filter, 5 filters are included. (No dustproof net is included.)
②	Replacement type dustproof filter	HRS-FL002	5 filters per set Size: 300 x 370

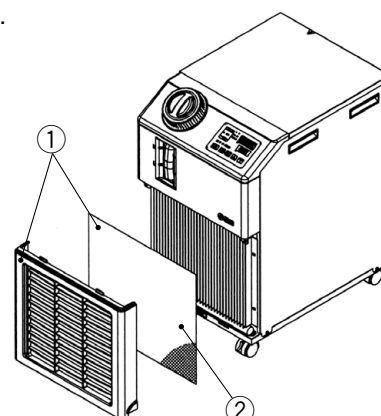

15 Separately-Installed Power Transformer


This transformer does not have CE marking and is not compliant with UL standards.

Specifications


Part no.	Applicable model	Volume	Type	Inlet voltage		Outlet voltage	
				50 Hz	60 Hz	50 Hz	60 Hz
IDF-TR1000-1	HRS012-□-10 HRS018-□-10	1 kVA	Single-phase	110 VAC	120 VAC	100 VAC	100, 110 VAC
IDF-TR1000-2				240 VAC	240 to 260 VAC		
IDF-TR1000-3				380, 400, 415 VAC	380 to 420 VAC		
IDF-TR1000-4				420, 440, 480 VAC	420 to 520 VAC		
IDF-TR2000-9	HRS012-□-20 HRS018-□-20 HRS024-□-20 HRS030-□-20	2 kVA	Single-phase	—	240 VAC	200 VAC	200, 220 VAC
IDF-TR2000-10				380, 400, 415 VAC	380 to 400, 400 to 415, 415 to 440 VAC		
IDF-TR2000-11				440, 460 VAC	440 to 460, 460 to 500 VAC		
IDF-TR2000-11							

\* For the HRS040/050/060 models: To be prepared by the user.


IDF-TR1000-1

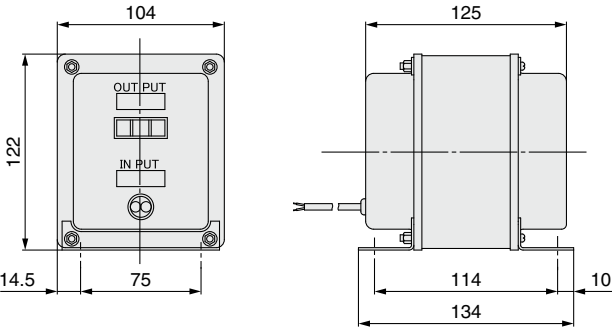


IDF-TR1000-2

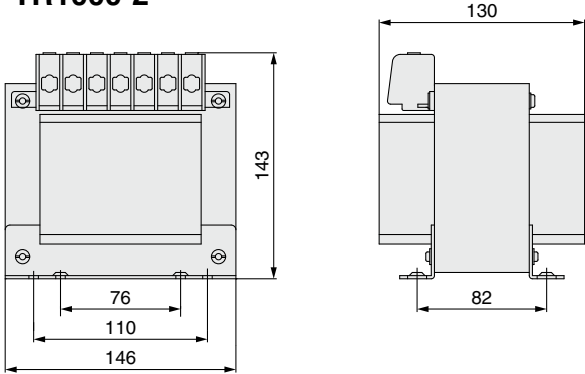


IDF-TR1000-3, 4

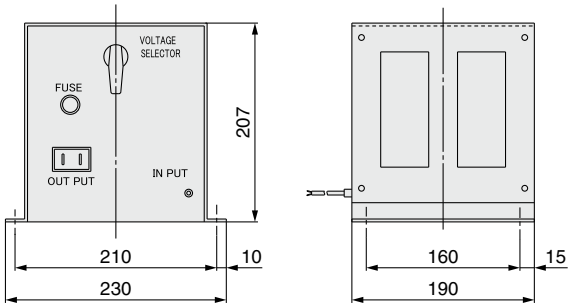

IDF-TR2000-9

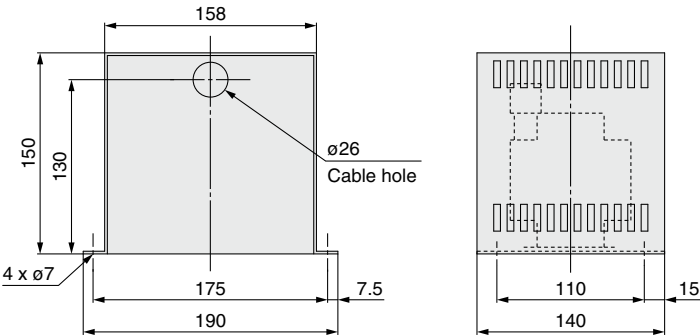

IDF-TR2000-10, 11

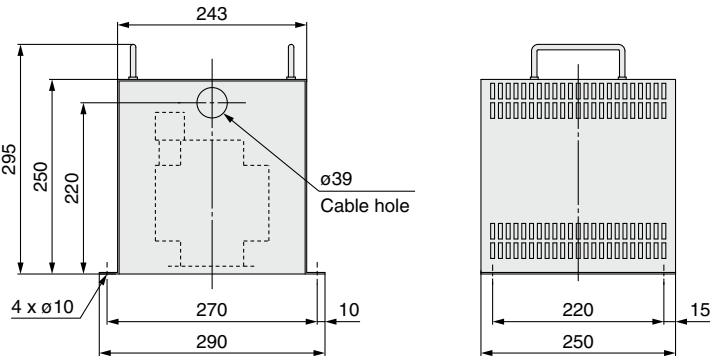


⑩ **Filter for Circulating Fluid Fill Port**

Prevents foreign matter from entering the tank when supplying the circulating fluid. Can be used just by fitting into the circulating fluid fill port.

■ **Filter for circulating fluid fill port**  
**HRS-PF007**

Material	Stainless steel 304, Stainless steel 316
Mesh size	200

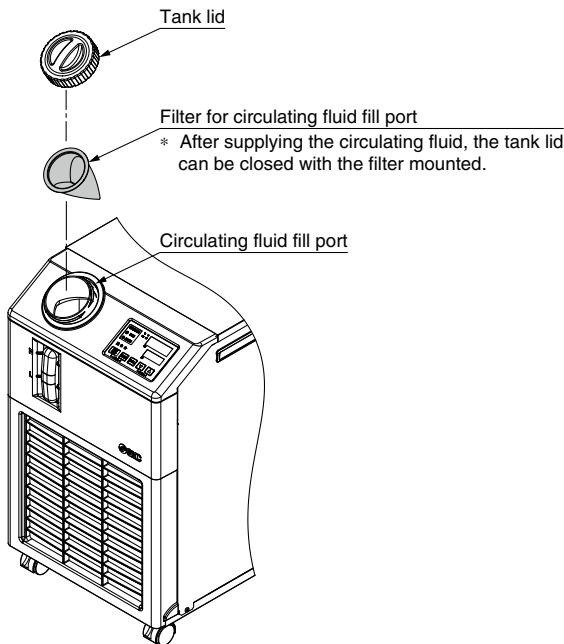

HRS
HRS-R
HRS090
HRS 100/150
HRS200
HRS090
HRSH
HRSE
HRR
HRL
HRZ
HRZD
HRW
HECR
HEC
HEB
HED
Technical Data

# Cooling Capacity Calculation

## Required Cooling Capacity Calculation

### Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.\*1

Q: Heat generation amount

#### ① Derive the heat generation amount from the power consumption.

Power consumption P: 1000 [W]

$$Q = P = 1000 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$1000 \text{ [W]} \times 1.2 = 1200 \text{ [W]}$$

#### ② Derive the heat generation amount from the power supply output.

Power supply output VI: 1.0 [kVA]

$$Q = P = V \times I \times \text{Power factor}$$

In this example, using a power factor of 0.85:

$$= 1.0 \text{ [kVA]} \times 0.85 = 0.85 \text{ [kW]} = 850 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$850 \text{ [W]} \times 1.2 = 1020 \text{ [W]}$$

#### ③ Derive the heat generation amount from the output.

Output (shaft power, etc.) W: 800 [W]


$$Q = P = \frac{W}{\text{Efficiency}}$$

In this example, using an efficiency of 0.7:

$$= \frac{800}{0.7} = 1143 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$1143 \text{ [W]} \times 1.2 = 1372 \text{ [W]}$$

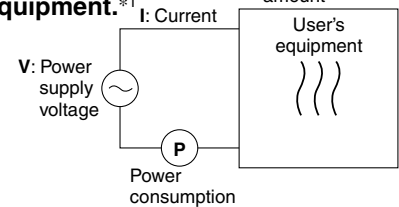

\*1 The examples above calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

### Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q : Unknown [W] ([J/s])  
 Circulating fluid : Tap water\*1  
 Circulating fluid mass flow rate  $q_m$  :  $(= \rho \times q_v \div 60)$  [kg/s]  
 Circulating fluid density  $\rho$  : 1 [kg/dm<sup>3</sup>]  
 Circulating fluid (volume) flow rate  $q_v$  : 10 [dm<sup>3</sup>/min]  
 Circulating fluid specific heat C :  $4.2 \times 10^3$  [J/(kg·K)]  
 Circulating fluid outlet temperature T<sub>1</sub> : 293 [K] (20 [°C])  
 Circulating fluid return temperature T<sub>2</sub> : 295 [K] (22 [°C])  
 Circulating fluid temperature difference  $\Delta T$  : 2.0 [K] ( $= T_2 - T_1$ )  
 Conversion factor: minutes to seconds (SI units) : 60 [s/min]

\*1 Refer to page 70 for the typical physical property value of tap water or other circulating fluids.


$$Q = q_m \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times q_v \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^3 \times 2.0}{60}$$

$$= 1400 \text{ [J/s]} \approx 1400 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$1400 \text{ [W]} \times 1.2 = 1680 \text{ [W]}$$

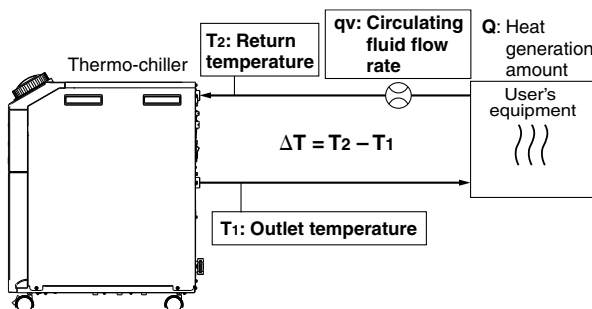

#### Example of conventional units (Reference)

Heat generation amount by user's equipment Q : Unknown [cal/h] → [W]  
 Circulating fluid : Tap water\*1  
 Circulating fluid weight flow rate  $q_m$  :  $(= \rho \times q_v \times 60)$  [kgf/h]  
 Circulating fluid weight volume ratio  $\gamma$  : 1 [kgf/L]  
 Circulating fluid (volume) flow rate  $q_v$  : 10 [L/min]  
 Circulating fluid specific heat C :  $1.0 \times 10^3$  [cal/(kgf·°C)]  
 Circulating fluid outlet temperature T<sub>1</sub> : 20 [°C]  
 Circulating fluid return temperature T<sub>2</sub> : 22 [°C]  
 Circulating fluid temperature difference  $\Delta T$  : 2.0 [°C] ( $= T_2 - T_1$ )  
 Conversion factor: hours to minutes : 60 [min/h]  
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{q_m \times C \times (T_2 - T_1)}{860}$$

$$= \frac{\gamma \times q_v \times 60 \times C \times \Delta T}{860}$$

$$= \frac{1 \times 10 \times 60 \times 1.0 \times 10^3 \times 2.0}{860}$$

$$= \frac{1200000 \text{ [cal/h]}}{860}$$

$$\approx 1400 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$1400 \text{ [W]} \times 1.2 = 1680 \text{ [W]}$$

**Required Cooling Capacity Calculation****Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.**

Heat quantity by cooled substance (per unit time) **Q**: Unknown [W] [(J/s)]  
 Cooled substance : Water  
 Cooled substance mass **m** : (=  $\rho \times V$ ) [kg]  
 Cooled substance density  $\rho$  : 1 [kg/L]  
 Cooled substance total volume **V** : 20 [dm<sup>3</sup>]  
 Cooled substance specific heat **C** :  $4.2 \times 10^3$  [J/(kg·K)]  
 Cooled substance temperature when cooling begins **T<sub>0</sub>** : 305 [K] (32 [°C])  
 Cooled substance temperature after t hour **T<sub>t</sub>** : 293 [K] (20 [°C])  
 Cooling temperature difference  $\Delta T$  : 12 [K] (=  $T_0 - T_t$ )  
 Cooling time  $\Delta t$  : 900 [s] (= 15 [min])


\* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$

$$= \frac{1 \times 20 \times 4.2 \times 10^3 \times 12}{900} = 1120 \text{ [J/s]} \approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$1120 \text{ [W]} \times 1.2 = 1344 \text{ [W]}$$

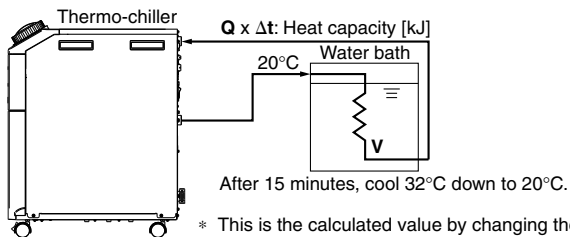

\* This is the calculated value by changing the fluid temperature only.  
 Thus, it varies substantially depending on the water bath or piping shape.

**Example of conventional units (Reference)**

Heat quantity by cooled substance (per unit time) **Q**: Unknown [cal/h] → [W]  
 Cooled substance : Water  
 Cooled substance weight **m** : (=  $\rho \times V$ ) [kgf]  
 Cooled substance weight volume ratio  $\gamma$  : 1 [kgf/L]  
 Cooled substance total volume **V** : 20 [L]  
 Cooled substance specific heat **C** :  $1.0 \times 10^3$  [cal/(kgf·°C)]  
 Cooled substance temperature when cooling begins **T<sub>0</sub>** : 32 [°C]  
 Cooled substance temperature after t hour **T<sub>t</sub>** : 20 [°C]  
 Cooling temperature difference  $\Delta T$  : 12 [°C] (=  $T_0 - T_t$ )  
 Cooling time  $\Delta t$  : 15 [min]  
 Conversion factor: hours to minutes : 60 [min/h]  
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^3 \times 12}{15 \times 860}$$

$$\approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

$$1120 \text{ [W]} \times 1.2 = 1344 \text{ [W]}$$

**Precautions on Cooling Capacity Calculation****1. Heating capacity**

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

**2. Pump capacity****<Circulating fluid flow rate>**

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

**<Circulating fluid discharge pressure>**

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

**Circulating Fluid Typical Physical Property Values****1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity.**

Density  $\rho$ : 1 [kg/L] (or, using conventional units, weight volume ratio  $\gamma = 1$  [kgf/L])  
 Specific heat **C**:  $4.19 \times 10^3$  [J/(kg·K)] (or, using conventional units,  $1 \times 10^3$  [cal/(kgf·°C)])

**2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference.****Water**

Physical property value Temperature	Density $\rho$ [kg/L]	Specific heat <b>C</b> [J/(kg·K)]	Conventional units	
			Weight volume ratio $\gamma$ [kgf/L]	Specific heat <b>C</b> [cal/(kgf·°C)]
5°C	1.00	$4.2 \times 10^3$	1.00	$1 \times 10^3$
10°C	1.00	$4.19 \times 10^3$	1.00	$1 \times 10^3$
15°C	1.00	$4.19 \times 10^3$	1.00	$1 \times 10^3$
20°C	1.00	$4.18 \times 10^3$	1.00	$1 \times 10^3$
25°C	1.00	$4.18 \times 10^3$	1.00	$1 \times 10^3$
30°C	1.00	$4.18 \times 10^3$	1.00	$1 \times 10^3$
35°C	0.99	$4.18 \times 10^3$	0.99	$1 \times 10^3$
40°C	0.99	$4.18 \times 10^3$	0.99	$1 \times 10^3$

**15% Ethylene Glycol Aqueous Solution**

Physical property value Temperature	Density $\rho$ [kg/L]	Specific heat <b>C</b> [J/(kg·K)]	Conventional units	
			Weight volume ratio $\gamma$ [kgf/L]	Specific heat <b>C</b> [cal/(kgf·°C)]
5°C	1.02	$3.91 \times 10^3$	1.02	$0.93 \times 10^3$
10°C	1.02	$3.91 \times 10^3$	1.02	$0.93 \times 10^3$
15°C	1.02	$3.91 \times 10^3$	1.02	$0.93 \times 10^3$
20°C	1.01	$3.91 \times 10^3$	1.01	$0.93 \times 10^3$
25°C	1.01	$3.91 \times 10^3$	1.01	$0.93 \times 10^3$
30°C	1.01	$3.91 \times 10^3$	1.01	$0.94 \times 10^3$
35°C	1.01	$3.91 \times 10^3$	1.01	$0.94 \times 10^3$
40°C	1.01	$3.92 \times 10^3$	1.01	$0.94 \times 10^3$

\* Shown above are reference values. Contact circulating fluid supplier for details.





## HRS Series

# Specific Product Precautions 1

Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

### Design

## Warning

### 1. This catalog shows the specifications of a single unit.

- 1) Check the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
- 2) Although a protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating conditions. Also, the user is requested to carry out a safety design for the whole system.

### 2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks and to carry back the entire flow volume of circulating fluid that is released.

### 3. Use non-corrosive material for circulating fluid contact parts.

The recommended circulating fluid is tap water or 15% ethylene glycol aqueous solution. Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Therefore, take sufficient care when selecting fluid contact part materials such as piping.

### 4. Design the piping so that no foreign matter enters the chiller.

If foreign matter, such as scales in the piping, enters the circulating fluid, this may cause the pump to malfunction. In particular, when the option T (High-pressure pump mounted) or HRS050/060 is used, it is strongly recommended to install the particle filter.

### Selection

## Warning

### 1. Model selection

When selecting a thermo-chiller model, the amount of heat generation from the user's equipment must be known. Obtain this value, referring to "Cooling Capacity Calculation" on pages 69 and 70 before selecting a model.

### Handling

## Warning

### 1. Thoroughly read the operation manual.

Read the operation manual completely before operation, and keep the manual where it can be referred to as necessary.

### Transportation/Carriage/Movement

## Warning


### 1. This product is heavy. Pay attention to safety and the position of the product when it is transported, carried, and moved.

### 2. Read the operation manual carefully before moving the product after unpacking.

## Caution

### 1. Never put the product down on its side as this may cause failure.

The product will be delivered in the packaging shown below.

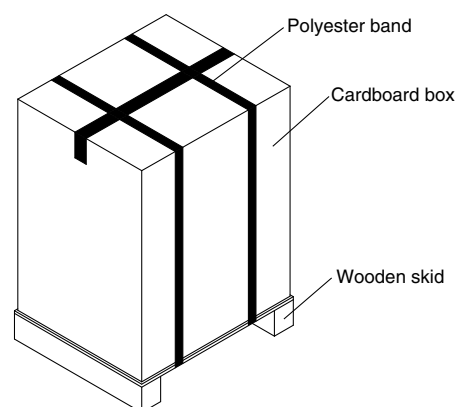

Model	Weight [kg]*1	Dimensions [mm]
HRS012-□□-10 HRS018-□□-10	49	Height 790 x Width 470 x Depth 580
HRS012-□□-20 HRS018-□□-20 HRS024-□□-20	52	Height 790 x Width 470 x Depth 580
HRS030-A□-20	56	Height 830 x Width 470 x Depth 580
HRS030-W□-20	55	
HRS040-□□-20	63	Height 900 x Width 450 x Depth 670
HRS050-A□-20	80	Height 1160 x Width 450 x Depth 670
HRS050-W□-20	78	
HRS060-A□-20	84	
HRS060-W□-20	78	

\*1 For models with an option, the weight increases as shown below.

Option symbol	Description	Additional weight
-B	With earth leakage breaker	No additional weight
-J	With automatic fluid fill function	+1 kg
-M	Applicable to deionized water piping	No additional weight
-T	High-pressure pump mounted (100 V type)	+4 kg
	High-pressure pump mounted (200 V type)	+6 kg
-G	High-temperature environment specification	No additional weight

## Caution

If this product is to be transported after delivery, please use the original packaging the product was delivered in. If other packaging is to be used, carefully package the product so as to prevent the product from incurring any damage during transport.



## HRS Series

# Specific Product Precautions 2

Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

### Operating Environment/Storage Environment

## Warning

### 1. Do not use in the following environment as it will lead to a breakdown.

- 1) Outdoors
- 2) In locations where water, water vapor, salt water, and oil may splash on the product
- 3) In locations where there are dust and particles
- 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present (This product is not explosion proof.)
- 5) In locations where the ambient temperature exceeds the limits as mentioned below

During transportation/storage: 0 to 50°C (But as long as water or circulating fluid are not left inside the pipings)

During operation: 5 to 40°C (When option G, high-temperature environment specification, is selected: 5 to 45°C)

- 6) In locations where the ambient humidity is out of the following range or where condensation occurs

During transportation/storage: 15 to 85%

During operation: 30 to 70%

- 7) In locations which receive direct sunlight or radiated heat
- 8) In locations where there is a heat source nearby and the ventilation is poor
- 9) In locations where temperature substantially changes
- 10) In locations where strong magnetic noise occurs (In locations where strong electric fields, strong magnetic fields, and surge voltage occur)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity
- 12) In locations where high frequency occurs
- 13) In locations where damage is likely to occur due to lightning
- 14) In locations at an altitude of 3000 m or higher (Except during storage and transportation)

\* For altitudes of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at an altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.

② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	① Upper limit of ambient temperature [°C]		② Cooling capacity coefficient
	40°C products	45°C products (For high-temperature environment specification, Option G)	
Less than 1000 m	40	45	1.00
Less than 1500 m	38	42	0.85
Less than 2000 m	36	38	0.80
Less than 2500 m	34	35	0.75
Less than 3000 m	32	32	0.70

- 15) In locations where strong impacts or vibrations occur
- 16) In locations where a massive force strong enough to deform the product is applied or the weight from a heavy object is applied
- 17) In locations where there is not sufficient space for maintenance

### 2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

### 3. Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalog, which will activate the safety detector and stop the operation.

In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

### 4. The product is not designed for clean room usage. It generates particles internally.

HRS

HRS-R

HRS090

HRS 100/150

HRS200

HRS090

HRSH

HRSE

HRR

HRL

HRZ

HRZD

HRW

HECR

HEC

HEB

HED

Technical Data



# HRS Series Specific Product Precautions 3

Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

## Mounting/Installation

### Warning


1. Do not use the product outdoors.
2. Do not place heavy objects on top of this product, or step on it.  
The external panel can be deformed and danger can result.

### Caution

1. Install on a rigid floor which can withstand this product's weight.
2. When installing without the casters, use the adjuster feet, etc. to raise the chiller to the following heights or more.  
This product cannot be directly installed on the floor as some screws come out from the bottom of the product.
  - HRS012 to 030 10 mm
  - HRS040 to 060 15 mm
3. Refer to the operation manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.

#### <Air-cooled refrigeration>

1. The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 40°C\*1, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
  - \*1 When option G, high-temperature environment specification, is selected: 45°C
2. For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

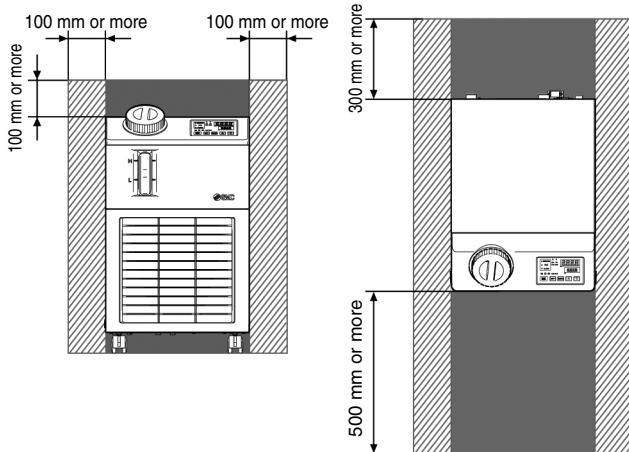

When option G, high-temperature environment specification, is selected: HRS030/HRS040/HRS050/HRS060  
(A ventilation space is required since the ventilation slots are provided on the sides of the product.)

#### <Heat radiation amount/Required ventilation rate>

Model	Heat radiation amount [kW]	Required ventilation rate [m <sup>3</sup> /min]	
		Differential temp. of 3°C between inside and outside of installation area	Differential temp. of 6°C between inside and outside of installation area
HRS012-A	Approx. 2	40	20
HRS018-A	Approx. 4	70	40
HRS024-A	Approx. 5	90	50
HRS030-A	Approx. 6	100	60
HRS040-A	Approx. 8	120	70
HRS050-A	Approx. 10	140	70
HRS060-A	Approx. 10	140	70

## Piping

### Caution

1. The circulating fluid and facility water piping should be prepared by the customer with consideration of the operating pressure, temperature, and circulating fluid/facility compatibility.  
If the operating performance is not sufficient, the pipings may burst during operation. Also, the use of corrosive materials such as aluminum or iron for fluid contact parts, such as piping, may not only lead to clogging or leakage in the circulating fluid and facility water circuits but also refrigerant leakage and other unexpected problems. Provide protection against corrosion when you use the product.
2. Select the piping port size which can exceed the rated flow.  
For the rated flow, refer to the pump capacity table.
3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
5. This product series is constant-temperature fluid circulating machines with built-in tanks.  
Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.
6. The facility water flow rate is adjusted automatically according to the operating conditions.  
In addition, the facility water return temperature is 60°C at maximum.

## Electrical Wiring


### Warning

1. Grounding should never be connected to a water line, gas line or lightning rod.

### Caution

1. Communication cable should be prepared by the user.
2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 μsec., it may result in malfunction.

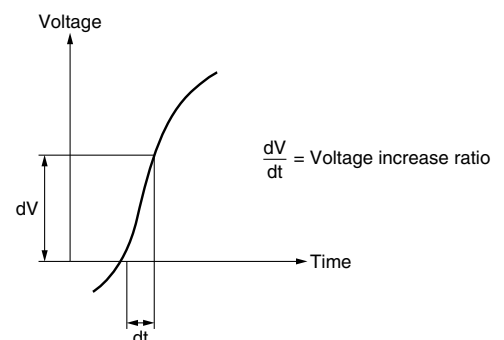



## HRS Series

# Specific Product Precautions 4

Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

### Circulating Fluid

## ⚠ Caution

1. Avoid oil or other foreign matter entering the circulating fluid.
2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

### Tap Water (as a Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association  
JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

	Item	Unit	Standard value	Influence	
				Corrosion	Scale generation
Standard item	pH (at 25°C)	—	6.0 to 8.0	○	○
	Electric conductivity (25°C)	[μS/cm]	100*1 to 300*1	○	○
	Chloride ion (Cl <sup>-</sup> )	[mg/L]	50 or less	○	
	Sulfuric acid ion (SO <sub>4</sub> <sup>2-</sup> )	[mg/L]	50 or less	○	
	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		○
	Total hardness	[mg/L]	70 or less		○
	Calcium hardness (CaCO <sub>3</sub> )	[mg/L]	50 or less		○
	Ionic state silica (SiO <sub>2</sub> )	[mg/L]	30 or less		○
Reference item	Iron (Fe)	[mg/L]	0.3 or less	○	○
	Copper (Cu)	[mg/L]	0.1 or less	○	
	Sulfide ion (S <sub>2</sub> <sup>-</sup> )	[mg/L]	Should not be detected.	○	
	Ammonium ion (NH <sub>4</sub> <sup>+</sup> )	[mg/L]	0.1 or less	○	
	Residual chlorine (Cl)	[mg/L]	0.3 or less	○	
	Free carbon (CO <sub>2</sub> )	[mg/L]	4.0 or less	○	

\*1 In the case of [MΩ·cm], it will be 0.003 to 0.01.

- : Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.

4. When using ethylene glycol aqueous solution, maintain a maximum concentration of 15%.

Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10°C or lower and cause the thermo-chiller to break down.

5. A magnet pump or mechanical seal pump is used as the circulating pump for the circulating fluid.

It is particularly impossible to use liquid including metallic powders such as iron powder.

6. The circulating fluids listed below have been tested for thermo-chiller compatibility.

No.	Fluid	Manufacturer	Concentration
1	Dowcal™ 100 Heat Transfer Fluid	The Dow Chemical Company	Dilute to 30% in water
2	ControXid 1642	Oelheld GmbH	Ready to use
3	Hexid A4	Applied Thermal Control Limited	Ready to use
4	Coolflow IGE	Hydratech Division of Liquitherm Technologies Group Ltd	Dilute to 25% in water
5	NALCO® CCL105	Nalco Water, an Ecolab Company	Ready to use

- The chiller cooling capacity and pump capacity performance may change with using the fluids listed. Customers should verify the performances with the fluid and decide to use the fluid.
- Check the compatibility with the piping and the wetted parts of the customer's equipment before use.
- Check with the circulating fluid manufacturer for the following.
  - 1) Countries and regions where it can be obtained and used
  - 2) Handling and maintenance
  - 3) Safety data sheets
  - 4) Specifications and physical properties
- Concentration has to be value listed or less. Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10°C or lower and cause the thermo-chiller to break down.
- Using the fluid listed for a long time, the chiller heat exchanger performance may be reduced due to additive deposits. It is recommended to regularly flush the inside of the piping and chiller with clean water.
- In the case of a mechanical seal pump, additive deposits may appear on the outside, it is not a malfunction.

### Facility Water Supply

## ⚠ Warning

### <Water-cooled refrigeration>

1. The water-cooled refrigeration type thermo-chiller radiates heat to the facility water. Prepare the facility water system that satisfies the heat radiation and the facility water specifications below.

### ■ Required facility water system

### <Heat radiation amount/Facility water specifications>

Model	Heat radiation [kW]	Facility water specifications
HRS012-W□-□	Approx. 2	Refer to "Facility water system" in the specifications.
HRS018-W□-□	Approx. 4	
HRS024-W□-20	Approx. 5	
HRS030-W□-20	Approx. 6	
HRS040-W□-20	Approx. 8	
HRS050-W□-20	Approx. 10	
HRS060-W□-20	Approx. 12	

2. When using tap water as facility water, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below.

If the water quality standards are not met, clogging or leakage in the facility water piping, or other problems such as refrigerant leakage, etc., may result.

### <Tap Water (as a Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association  
JRA GL-02-1994 "Cooling water system – Circulation type – Circulating water"

	Item	Unit	Standard value	Influence	
				Corrosion	Scale generation
Standard item	pH (at 25°C)	—	6.5 to 8.2	○	○
	Electric conductivity (25°C)	[μS/cm]	100*1 to 800*1	○	○
	Chloride ion (Cl <sup>-</sup> )	[mg/L]	200 or less	○	
	Sulfuric acid ion (SO <sub>4</sub> <sup>2-</sup> )	[mg/L]	200 or less	○	
	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		○
	Total hardness	[mg/L]	200 or less		○
	Calcium hardness (CaCO <sub>3</sub> )	[mg/L]	150 or less		○
	Ionic state silica (SiO <sub>2</sub> )	[mg/L]	50 or less		○
Reference item	Iron (Fe)	[mg/L]	1.0 or less	○	○
	Copper (Cu)	[mg/L]	0.3 or less	○	
	Sulfide ion (S <sub>2</sub> <sup>-</sup> )	[mg/L]	Should not be detected.	○	
	Ammonium ion (NH <sub>4</sub> <sup>+</sup> )	[mg/L]	1.0 or less	○	
	Residual chlorine (Cl)	[mg/L]	0.3 or less	○	
	Free carbon (CO <sub>2</sub> )	[mg/L]	4.0 or less	○	

\*1 In the case of [MΩ·cm], it will be 0.001 to 0.01.

- : Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- We recommend to use the filter kit, FQ1011N-04-T020-B-X61, when you do not know the quality of circulating fluid to prevent leakage and other issues.

3. Supply pressure of 0.5 MPa or less.

If the supply pressure is high, it will cause water leakage.

4. Be sure to prepare your utilities so that the pressure of the thermo-chiller facility water outlet is at 0 MPa (atmospheric pressure) or more.

If the facility water outlet pressure becomes negative, the internal facility water piping may collapse, and proper flow control of facility water will be impossible.

Using deionized water as facility water may cause problems such as clogging in the piping due to metal ion.

5. Do not use fluid that includes metallic powders and other foreign materials.

It can cause issues: clogging of the circulating fluid circuit or leakage.





## HRS Series

# Specific Product Precautions 5

Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

### Operation

## ⚠ Warning

### 1. Confirmation before operation

- 1) The fluid level of a tank should be within the specified range of "HIGH" and "LOW."  
When exceeding the specified level, the circulating fluid will overflow.

- 2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.

Pump can be operated independently.

### 2. Confirmation during operation

- Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 5 and 40°C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

### 3. Emergency stop method

- When an abnormality is confirmed, stop the machine immediately. After pushing the [OFF] switch, be sure to turn off the power switch.

### Operation Restart Time/Operation and Suspension Frequency

## ⚠ Caution

1. Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.

2. Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

### Protection Circuit

## ⚠ Caution

1. If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.

- Power supply voltage is not within the rated voltage range of  $\pm 10\%$ .
- In case the water level inside the tank is reduced abnormally.
- Circulating fluid temperature is too high.
- Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
- Ambient temperature is too high. (40°C or more)
- Refrigerant pressure is too high.
- Ventilation hole is clogged with dust or dirt.

### Maintenance

## ⚠ Caution

### <Periodical inspection every one month>

#### 1. Clean the ventilation hole.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

### <Periodical inspection every three months>

#### 1. Inspect the circulating fluid.

- 1) When using tap water

- Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria and algae. Replace it regularly according to your usage conditions.

- Tank cleaning

Consider whether dirt, slime, or foreign matter may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.

- 2) When using ethylene glycol aqueous solution

Use a concentration meter to confirm that the concentration does not exceed 15%.

Dilute or add as needed to adjust the concentration.

### <Periodical inspection during the winter season>

#### 1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

#### 2. Contact a professional.

For additional methods to prevent freezing (such as commercially available tape heaters, etc.), contact a professional for advice.

### ■ Refrigerant with GWP reference

Refrigerant	Global warming potential (GWP)	
	Regulation (EU) No 517/2014 (Based on the IPCC AR4)	Revised Fluorocarbons Recovery and Destruction Law (Japanese law)
R134a	1,430	1,430
R404A	3,922	3,920
R407C	1,774	1,770
R410A	2,088	2,090

\* This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.

\* See specification table for refrigerant used in the product.

### ■ Trademark Information

Modbus® is a registered trademark of Schneider Electric, licensed to the Modbus Organization, Inc.