
# Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve

# VXZ Series

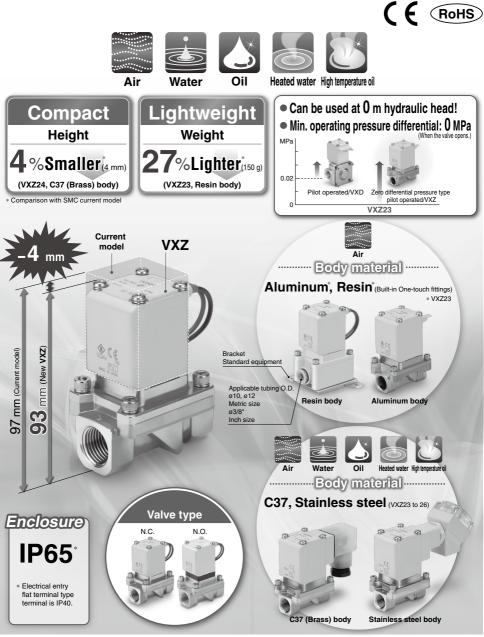

VX2 VXK VXD

VXZ

VXS

**VXB** 

VXE

**VXP** 

**VXR** 

VXH

VXF

VX3

VXA












## **Enclosure IP65**

Flame resistance **UL94V-0** conformed Flame resistant mold coil material

#### Piping variations Thread piping, One-touch fitting

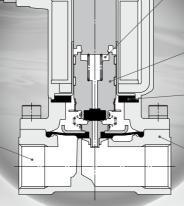

## Clearance

By providing a bumper and clearance, we reduced the collision sound of the core when ON (when the valve is open). Because of the clearance, when using highly viscous fluids such as oil, the armature does not get stuck and the responsiveness when OFF (when the valve is closed) is improved.

# Improved armature durability

#### Low-noise construction

Metal noise reduced by the rubber bumper

# **Body material**

Aluminum, Resin Air (VXZ2A)

C37, Stainless steel

Water/ Oil/Air/ Heated water/

# Built-in full-wave rectifier type (AC specification)

- Improved durability Service life is extended by the special construction. (compared with current AC specification)
- Reduced buzz noise Rectified to DC by the full-wave rectifier, resulting in a buzz noise reduction.
- Improved OFF response Specially constructed to improve the OFF response when operated with a higher viscosity fluid such as oil.
- Low-noise construction Specially constructed to reduce the metal noise during operation.





#### **Variations**

<Fluid>

Mandal	Applicable fluid*				
Model	Air	Water	Oil	Heated water	(Figh temperature of
For Air <b>VXZ2</b> P.176					
For Water <b>VXZ2 2</b> P.179		•			
For Oil <b>VXZ2 3</b> P.182		•	•		
For Heated water VXZ2 5 P.185	•	•		•	
For High temperature oil VXZ2 6 P.188		•	•		•

<body s<="" th=""><th colspan="5"><body size=""></body></th></body>	<body size=""></body>				
Model	Body size	Orifice diameter mmø	Port size	Body material	Fluid
			1/4, 3/8	Aluminum	
VXZ2 <sup>3</sup>	404	40	ø10, ø12, ø3/8"	Resin	Air
VXZ2Ā	10A	10	1/4 2/9	C37	
			1/4, 3/8	Stainless steel	
VXZ24	454	45	1/0	C37	Air Water
VAZZĖ	15A	15	1/2	Stainless steel	
VXZ25	004	00	0/4	C37	Oil Heated water
VAZZČ	20A	20	3/4	Stainless steel	6
VV706		0.5	_	C37	High temperature oil
VXZ2 <sub>D</sub>	25A	25	1	Stainless steel	ingi siipaaace

<sup>\*</sup> For details, refer to pages 209 and 210.

# **INDEX**

# **Zero Differential Pressure Type** Pilot Operated 2 Port Solenoid Valve

**VXZ** Series

VX2 VXK VXD VXZ VXS VXB VXE VXP VXR VXH VXF VX3 VXA



Comn	non Specifications P. 174
Selec	tion Steps P. 175
	For Air Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 176, 177 How to Order
	For Water Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 179, 180 How to Order
	For Oil Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 182, 183 How to Order
	Flow Rate Characteristics, Fluid and Ambient Temperature, Valve LeakageP. 185, 186 How to OrderP. 187
	For High Temperature Oil Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 188, 189 How to OrderP. 190
Other	Special Options P. 192
Const	ructionP. 194
Dimer	nsions
For	Air, Water, Oil
В	ody material: ResinP. 196
For	ody material: Aluminum, C37, Stainless steel P. 198 Heated Water, High Temperature Oil
	ody material: C37, Stainless steelP. 200 cement PartsP. 201
-	ary of Terms P. 202
	oid Valve Flow Rate CharacteristicsP. 203
	Rate Characteristics P. 208
Speci	fic Product Precautions P. 209

# **Common Specifications**

#### Standard Specifications

Valve construction Withstand pressure		tion	Zero differential pressure type pilot operated 2 port diaphragm type	
		sure	2.0 MPa (Resin body type 1.5 MPa)	
Valve	Body material Seal material Enclosure Environment		Aluminum, Resin, C37 (Brass), Stainless steel Note 1)	
specifications			NBR, FKM, EPDM	
			Dust-tight, Water-jet-proof type (equivalent to IP65) Note 2) 4)	
			Location without corrosive or explosive gases	
	AC		100 VAC, 200 VAC, 110 VAC, 230 VAC, (220 VAC, 240 VAC, 48 VAC, 24 VAC) Note 3)	
	Rated voltage	DC	24 VDC, (12 VDC) Note 3)	
Coil	Allowable volta	ge fluctuation	±10% of rated voltage	
specifications	ns Allowable leakage AC (Built-in full-wave rectifier type)		5% or less of rated voltage	
	voltage	DC	2% or less of rated voltage	
	Coil insulation type		Class B (for air, water, oil), Class H (for heated water, high temperature oil)	

Note 1) Body material is aluminum. Resin body is available only for the VXZ23A.

Note 2) Electrical entry flat terminal type terminal is IP40.

Note 3) Voltage in ( ) indicates special voltage. (Refer to page 192.)

Note 4) For enclosure, refer to "Glossary of Terms" on page 202. When using the product in a place which requires water resistance, please contact SMC.

#### ⚠ Be sure to read "Specific Product Precautions" before handling.

⚠ When pressure differential is less than 0.01 MPa, operation may become unstable. Please contact SMC in case of low flow operation. (Refer to page 195.)

#### **Solenoid Coil Specifications**

# Normally Closed (N.C.) DC Specification

#### Class B

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ23, 24	7	55
VXZ25, 26	10.5	65

#### Class H

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ23, 24	12	100
VXZ25, 26	15	100

#### Normally Open (N.O.)

#### DC Specification

#### Class B

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ2A, 2B	8.5	70
VXZ2C, 2D	12.5	70

#### Class H

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2
VXZ2A, 2B	12	100
VXZ2C, 2D	15	100

Note 1) Power consumption, Apparent power: The value at ambient temperature of 20°C and when the rated voltage is applied. (Variation: ±10%)

Note 2) The value at ambient temperature of 20°C and when the rated voltage is applied. The value depends on the ambient environment. This is for reference.

#### Normally Closed (N.C.)

# AC Specification (Built-in Full-wave Rectifier Type) Class B

Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)
VXZ23, 24	9.5	70
VXZ25, 26	12	70

#### Class H

Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)
VXZ23, 24	12	100
VXZ25, 26	15	100

#### Normally Open (N.O.)

# AC Specification (Built-in Full-wave Rectifier Type) Class B

Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) NOTE 3)
VXZ2A, 2B	10	70
VXZ2C, 2D	14	70

#### Class H


Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)
VXZ2A, 2B	12	100
VXZ2C, 2D	15	100

Note 1) Power consumption, Apparent power: The value at ambient temperature of 20°C and when the rated voltage is applied. (Variation: ±10%)
Note 2) There is no difference in the frequency and the inrush and energized apparent power, since a rectifying circuit is used in the AC (Built-in full-wave rectifier type).

Note 3) The value at ambient temperature of 20°C and when the rated voltage is applied. The value depends on the ambient environment. This is for reference.



# VXZ Series Selection Steps

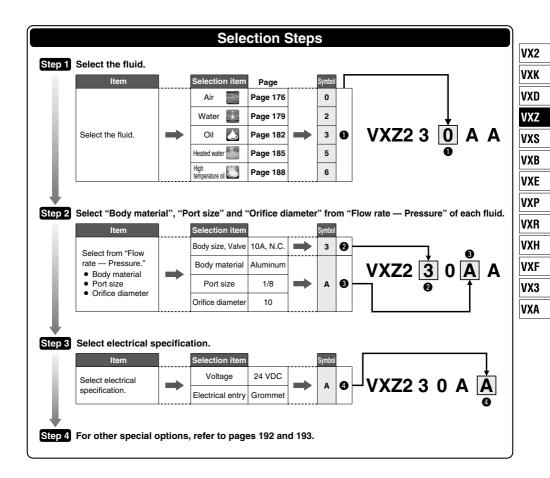

**SMC** 



\* Can be used with low vacuum (up to 133 Pa.abs).

#### Flow Rate Characteristics

N.C.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



#### Normally Closed (N.C.)

Body	Port size (Nominal		diameter			ing pressure Note 3) (MPa)	Flow rate characteristics				Max. system	Note 2) Weight					
material	terial diameter) (mmø)	Model	differential Note 1) (MPa)	AC	DC	C [dm³/(s·bar)]	b	Cv	Effective area (mm²)	ea (MPa)	(g)						
	ø10						6.2		1.7								
Resin	ø3/8"				1.0	1.0		5.3	0.38	0.38 1.2			400				
	ø12	10	VXZ230								0.7	8.0		2.0			
Aluminum	1/4 (8A)			0			85   044   24	1.5	600								
Aluminum	3/8 (10A)						1.0	1.0	1.0	1.0		9.3	0.43	2.6		1.5	600
C37,	1/2 (15A)	15	VXZ240				23.0	0.34	6.0			720					
Stainless	3/4 (20A)	20	VXZ250			1.0	36.0	0.26	9.4			1100					
steel	1 (25A)	25	VXZ260			1.0		_		185		1300					

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orfice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-10 Note) to 60	-20 to 60

Note) Dew point temperature: -10°C or less

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Air) Note 1) 2)
	15 cm <sup>3</sup> /min or less (Aluminum body type)
NBR (FKM) Note 3)	15 cm <sup>3</sup> /min or less (Resin body type)
	1 cm <sup>3</sup> /min or less (Metal body type)

External Leakage

Seal material	Leakage rate (Air) Note 1)
	15 cm <sup>3</sup> /min or less (Aluminum body type)
NBR (FKM) Note 3)	15 cm <sup>3</sup> /min or less (Resin body type)
	1 cm <sup>3</sup> /min or less (Metal body type)

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection.

Note 4) When the product is used with low vacuum (to 133 Pa.abs), give caution to the external leakage outlined above.

For Air

VX2 VXK

VXD

VXZ VXS VXB

VXE

**VXP** 

VXR VXH VXF VX3 VXA

#### Flow Rate Characteristics

N.O.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



nally Open (N O )

	Normai	ıy Open (I	N.O.)														
Rody Port Size Orifice diameter		pressure	Max. operating pressure differential Note 3) (MPa)						Max. system pressure Note 3)	Note 2) Weight							
	material	diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	C [dm³/(s·bar)]	b	Cv	Effective area (mm²)	(MPa)	(g)				
		ø10						6.2		1.7							
	Resin	ø3/8"						5.3	0.38	1.2			430				
		ø12	10	VXZ2A0		1			1				8.0		2.0	]	
	Aluminum	1/4 (8A)			0	0.7	0.7	. 7	0.6	0.6	8.5	0.44 2.4	_	1.5	630		
	Aluminum	3/8 (10A)			0   0	0.7	0.7   0.6	9.3	0.43	2.6		1.5	630				
	C37,	1/2 (15A)	15	VXZ2B0				23.0	0.34	6.0			750				
	Stainless	3/4 (20A)	20	VXZ2C0				36.0	0.26	9.4			1150				
	steel	1 (25A)	25	VXZ2D0				_	_		185		1350				

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-10 Note) to 60	-20 to 60

Note) Dew point temperature: -10°C or less

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Air) Note 1) 2)						
	15 cm <sup>3</sup> /min or less (Aluminum body type)						
NBR (FKM) Note 3)	15 cm <sup>3</sup> /min or less (Resin body type)						
	1 cm <sup>3</sup> /min or less (Metal body type)						

External Leakage

Seal material	Leakage rate (Air) Note 1)					
	15 cm <sup>3</sup> /min or less (Aluminum body type)					
NBR (FKM) Note 3)	15 cm <sup>3</sup> /min or less (Resin body type)					
	1 cm <sup>3</sup> /min or less (Metal body type)					

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection.





D

25A

N.O.

## How to Order (Single Unit)



# VXZ2 3 0 A A 0 For Air

**Common Specifications** 

Seal material	NBR
Coil insulation type	Class B
Thread type	Rc*

\* One-touch fittings are attached to the resin body type.

Size	/Valve ty	ре		Body material/Port size/Orifice diameter					
Symbol	Body size	Valve type		Symbol	Body material	Port size	Orifice diameter		
3	10A	N.C.		Α	Aluminum	1/4			
Α	IUA	N.O.		В	Aluminum	3/8			
		<i>`</i> \	С	D i .	ø10 One-touch fitting	10			
			1	D	Resin (With bracket)	ø3/8" One-touch fitting			
		1	E (Mar Brasies)		ø12 One-touch fitting				
4	15A	N.C.	[	F	C37	1/2	15		
В	ISA	N.O.	l	G Stainless ste		1/2	15		
5		N.C.	г	н	C37				
C	20A I		-	J	Stainless steel	3/4	20		
C N.O.					Starriess steer				
6	054	N.C.	[	K	C37	4	05		

Stainless steel

1

25

١	Voltage/Electrical entry									
Sy	mbol	Voltage	Electric	al entry						
	A 24 VDC		Grommet							
	В	100 VAC	Grommet	^						
	С	110 VAC	( With surge ) voltage							
	D	200 VAC	suppressor							
	E	230 VAC								
	F	24 VDC								
	G	24 VDC	DIN terminal	^						
	Н	100 VAC	/ With surge \ voltage							
	L	110 VAC	suppressor							
	K	200 VAC								
	L	230 VAC								
	М	24 VDC	Conduit terminal							
	Z	100 VAC	With surge voltage suppressor							
	Р	110 VAC								
	Q	200 VAC	]							
	R	230 VAC		~ <b>9</b> 9						
	s	24 VDC	Conduit	_						
	Т	100 VAC	/ With surge voltage							
	C	110 VAC	\suppressor /							
	٧	200 VAC								
,	W	230 VAC								
,	Υ	24 VDC	Flat terminal							
	Z		Other voltages							
	For other enesial entions									

# For other special options,

	. or ourse operations,					
refer to pages 192 and 193.						
	24 VAC					
	48 VAC					
Special voltage	220 VAC					
	240 VAC					
	12 VDC					
DIN terminal with light						
Conduit terminal with light						
Without DIN connector						
Low concentration ozone resistant						
(Seal material: FKN	Λ)					
Seal material: EPD	M					
Oil-free						
G thread						
NPT thread						
With bracket (Stand	dard for resin body)					
Special electrical entry direction						
•						

# Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve VXZ Series



Can be used with air (Up to 133 Pa.abs for vacuum). Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications for air.

#### Flow Rate Characteristics

N.C.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



VXZ

VX2 VXK

VXD

VXS

VXB

VXP

VAF

VXR

VXH

VX3

VXA

Normally Closed (N.C.)

Body	Body Port size Orifice diamet						Flow rate characteristics		Max. system	Weight Note 2)	
material	(Nominal diameter)	(mmø)	Wodei	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)	
	1/4 (8A)	10	VXZ232	0		0.7	1.6	1.9	1.5	600	
C37,	3/8 (10A)	10	VAZZSZ				2.0	2.4			
Stainless	1/2 (15A)	15	VXZ242		1.0		4.6	5.3		720	
steel	3/4 (20A)	20	VXZ252				1.0	7.8	9.2		1100
	1 (25A)	25	VXZ262			1.0	8.7	10.2	] [	1300	
	1 The appetition of the value may be upstabled up to the consolit of the appearance										

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 60	-20 to 60

Note) With no freezing

#### Valve Leakage Rate

Internal Leakage							
Seal material	Leakage rate (Water) Note 1) 2)						
NIDID (FIZM) Note 3)	0.1 am3/min av laga						

#### External Leakage

External Ecakage	
Seal material	Leakage rate (Water) Note 1)
NBR (FKM) Note 3)	0.1 cm <sup>3</sup> /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection.





#### Flow Rate Characteristics

N.O.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



#### Normally Open (N.O.)

Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure differential Note 3) (MPa)		Flow rate characteristics		Max. system	Weight Note 2)
material	(Nominal diameter)	(mmø)	Wodel	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)
	1/4 (8A)	10	10 VXZ2A2		0.7	0.6	1.6	1.9		630
C37,	3/8 (10A)	10		0			2.0	2.4		
Stainless	1/2 (15A)	15	VXZ2B2				4.6	5.3	1.5	750
steel	3/4 (20A)	20	VXZ2C2				7.8	9.2		1150
	1 (25A)	25	VXZ2D2				8.7	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 60	-20 to 60

Note) With no freezing

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Water) Note 1) 2)
NBR (FKM) Note 3)	0.1 cm <sup>3</sup> /min or less

#### External Leakage

External Leakage	
Seal material	Leakage rate (Water) Note 1)
NRR (FKM) Note 3)	0.1 cm <sup>3</sup> /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection

# Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve







#### How to Order (Single Unit)

Orifice diameter

10

15

20

25



Body material/Port size/Orifice diameter

Port size

3/8

1/4

3/8

1/2

3/4

1

Symbol Body material

C37

Stainless steel

C37

Stainless steel

C37

Stainless steel

C37

Stainless steel

Α

В

С

D

F

G

Н

K

L

# **Common Specifications**

Seal material	NBR
Coil insulation type	Class B
Thread type	Rc

VX2

VXK

VXD

VXZ

VXS

VXB

VXE

VXP

VXR

VXH VXF VX3 VXA

Voltage/Electrical entry

	Symbol	Voltage	Electrical entry
	A	24 VDC	Grommet
	В	100 VAC	Grommet
	С	110 VAC	( With surge ) voltage
	D	200 VAC	suppressor
	E	230 VAC	
	F	24 VDC	
	G	24 VDC	DIN terminal
	Н	100 VAC	(With surge voltage
	J	110 VAC	suppressor
	K	200 VAC	
	L	230 VAC	
	M	24 VDC	Conduit terminal
	N	100 VAC	With surge voltage
	Р	110 VAC	suppressor / suppressor /
1	Q	200 VAC	
\	R	230 VAC	
	S	24 VDC	Conduit
1	Т	100 VAC	With surge voltage
	U	110 VAC	suppressor
Ì	٧	200 VAC	
Ì	W	230 VAC	
	Y	24 VDC	Flat terminal
	7		Other veltages

	Symbol	Voltage	Electrical entry
	A	24 VDC	Grommet
	В	100 VAC	Grommet
	ပ	110 VAC	(With surge voltage
	D	200 VAC	suppressor
	Е	230 VAC	
	F	24 VDC	•
	G	24 VDC	DIN terminal
	Н	100 VAC	(With surge voltage
	J	110 VAC	suppressor
	K	200 VAC	
	L	230 VAC	
	М	24 VDC	Conduit terminal
	N	100 VAC	With surge voltage
	Р	110 VAC	suppressor
	Q	200 VAC	
1	R	230 VAC	
}	S	24 VDC	Conduit
1	Т	100 VAC	(With surge voltage
	C	110 VAC	suppressor /
	V	200 VAC	
Ì	W	230 VAC	
	Y	24 VDC	Flat terminal
	Z		Other voltages

For other special options, refer to pages 192 and 193.						
	24 VAC					
	48 VAC					
Special voltage	220 VAC					
' "	240 VAC					
	12 VDC					
DIN terminal with light						
Conduit terminal with light						
Without DIN conne	ctor					
Applicable to deion (Seal material: FKN						
Seal material: EPD	M					
Oil-free						
G thread						
NPT thread With bracket						
					Special electrical entry direction	

Dimensions → Page 198 and after

Size/Valve type

10A

15A

20A

25A

Valve type

N.C.

N.O.

N.C.

N.O.

N.C.

N.O.

N.C.

N.O.

Symbol Body size

3

Α

4

В

5

С

6

D





Can be used with air and water.

Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications of the fluid used

# ↑ When the fluid is oil.-

The kinematic viscosity must not exceed 50 mm<sup>2</sup>/s. The special construction of the armature adopted in the built-in full-wave rectifier type gives an improvement in OFF response by providing clearance on the absorbed surface when it is switched ON.

#### Flow Rate Characteristics

N.C.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.





Normally Closed (N.C.)

Body	Port size	Orifice diameter	Model	Min. operating pressure	Min. operating pressure Max. operating pressu		Flow rate ch	aracteristics	Max. system	Weight Note 2)
material	(Nominal diameter)	(mmø)	Wodei	differential Note 1) (MPa)		DC	Kv	Cv	pressure Note 3) (MPa)	(g)
	1/4 (8A)	10	VXZ233				1.6	1.9		000
C37,	3/8 (10A)	10 <b>VXZ</b>	VAZZSS				2.0	2.4		600
Stainless	1/2 (15A)	15	VXZ243	0	0	.7	4.6	5.3	1.5	720
steel	3/4 (20A)	20	VXZ253					9.2		1100
	1 (25A)	25	VXZ263				8.7	10.2		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-5 Note) to 60	-20 to 60

Note) Kinematic viscosity: 50 mm<sup>2</sup>/s or less

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Oil) Note 1) 2)
FKM	0.1 cm <sup>3</sup> /min or less

#### **External Leakage**

Seal material	Leakage rate (Oil) Note 1)
FKM	0.1 cm <sup>3</sup> /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

# Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve VXZ Series





N.O.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



Normally Open (NO)

	ny Open (iv	,								
Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure	differential <sup>Note 3)</sup> (MPa)	Flow rate ch	aracteristics	Max. system	Weight Note 2)
material	(Nominal diameter)	(mmø)	Wodel	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)
	1/4 (8A)	10	VXZ2A3	0	0.7	0.6	1.6	1.9		630
C37.	3/8 (10A)	10					2.0	2.4		030
Stainless	1/2 (15A)	15	VXZ2B3				4.6	5.3	1.5	750
steel	3/4 (20A)	20	VXZ2C3				7.8	9.2		1150
	1 (25A)	25	VXZ2D3				8.7	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
5 Note) to 60	-20 to 60

Note) Kinematic viscosity: 50 mm<sup>2</sup>/s or less

#### Valve Leakage Rate

		1		
Interna	31 L	ea	ка	ae

Seal material	Leakage rate (Oil) Note 1) 2)
FKM	0.1 cm <sup>3</sup> /min or less

#### External Leakage

Seal material	Leakage rate (Oil) Note 1)
FKM	0.1 cm <sup>3</sup> /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

VX2

VXK

VXD VXZ

VXS

VXB

VXE

**VXP** 

VXR

VXH

VXF VX3

VXA





5

С

6

D

20A

25A

#### How to Order (Single Unit)





Common	Considiention

Common opecinications									
Seal material	FKM								
Coil insulation type	Class B								
Thread type	Rc								

Size/Valve type						♦ E	◆Body material/Port size/Orifice diameter												
						T	Τ.		Ι.							Т.			

- олдо, галто туро					,a.oa., .	o. <u>=</u> 0, o	
Symbol	Body size	Valve type		Symbol	Body material	Port size	Orifice diameter
3	10A	N.C.	Ī	Α	C37	1/4	
Α	IUA	N.O.		В	U37	3/8	10
			``\.	С	Stainless steel	1/4	10
				D	Stall liess steel	3/8	
4		N.C.	Τ	F	C37		
В	15A	N.O.	1	Ġ	Stainless steel	1/2	15
D		IN.O.	l	G	Stairtiess steet		

Н

Κ

L

C37

Stainless steel

C37

Stainless steel

3/4

1

20

25

N.C.

N.O.

N.C.

N.O.

	• Volt	Voltage/Electrical entry					
	Symbol	Voltage	Electrical entry				
	A	24 VDC	Grommet				
	В	100 VAC	Grommet				
	С	110 VAC	/ With surge voltage	Ì			
	D	200 VAC	suppressor /				
	E	230 VAC		¥			
	F	24 VDC					
	G	24 VDC	DIN terminal				
	Н	100 VAC	With surge voltage	]			
	7	110 VAC	suppressor				
	K	200 VAC		•			
	L	230 VAC					
	М	24 VDC	Conduit terminal				
	N	100 VAC	With surge voltage	ì			
	Р	110 VAC	\suppressor /				
	Q	200 VAC		g.			
	R	230 VAC					
	S	24 VDC	Conduit				
	Т	100 VAC	With surge voltage	1			
	U	110 VAC	\suppressor /				
	٧	200 VAC		9)			
	W	230 VAC					
	Y	24 VDC	Flat terminal				
	z		Other voltages				

For other special options,					
refer to pages 192 and 193.					
	24 VAC				
Special voltage	48 VAC				
	220 VAC				
	240 VAC				
	12 VDC				
DIN terminal with light					
Conduit terminal with light					
Without DIN connector					
Oil-free					
G thread					
NPT thread	NPT thread				
With bracket					
Special electrical entry direction					

Dimensions → Page 198 and after

# Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve VXZ Series



# For Heated Water

• Can be used with air (up to 99°C) and water. Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications of the fluid used.

#### Flow Rate Characteristics

N.C.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



Normally Closed (N.C.)

	any Ciosca	(											
Body	Port size	Orifice diameter	Model	Min. operating pressure		Max. operating pressure differential Note 3) (MPa)		Flow rate characteristics		Weight Note 2)			
materia	I (Nominal diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)			
	1/4 (8A)	10	VXZ235	0	35	7005			1.6	1.9		600	
C37,	3/8 (10A)	10	V AZZ33							0.7	2.0	2.4	
Stainles	s 1/2 (15A)	15	VXZ245		1.0		4.6	5.3	1.5	720			
steel	3/4 (20A)	20	VXZ255				1.0	7.8	9.2		1100		
	1 (25A)	25	VXZ265			1.0	8.7	10.2		1300			

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

## Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 99	-20 to 60

Note) With no freezing

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Water) Note 1) 2)
EPDM	0.1 cm <sup>3</sup> /min or less

#### External Leakage

Seal material	Leakage rate (Water) Note 1)				
EPDM	0.1 cm <sup>3</sup> /min or less				

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

VX2

VXK

VXD VXZ

VXS

VXB

VXE

VXP

VXR

VXH

VXF VX3

VXA





#### Flow Rate Characteristics

N.O.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



#### Normally Open (N.O.)

Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure	e differential <sup>Note 3)</sup> (MPa)	Flow rate ch	aracteristics	Max. system	Weight Note 2)		
material	(Nominal diameter)	(mmø)	Wodel	differential Note 1) (MPa)		DC	Kv	Cv	pressure Note 3) (MPa)	(g)		
	1/4 (8A)	10 VXZ2A5	VVZOAE	V/V70AF		-			1.6	1.9		000
C37,	3/8 (10A)	10	VAZZAS				2.0	2.4		630		
Stainless	1/2 (15A)	15	VXZ2B5	0	0.7	0.6	4.6	5.3	1.5	750		
steel	3/4 (20A)	20	VXZ2C5						7.8	9.2		1150
	1 (25A)	25	VXZ2D5				8.7	10.2		1350		

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orfice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 99	-20 to 60

Note) With no freezing

#### Valve Leakage Rate

#### Internal I eakage

miteriai Ecakage	
Seal material	Leakage rate (Water) Note 1) 2)
EPDM	0.1 cm <sup>3</sup> /min or less

#### External Leakage

External Leakage					
Seal material	Leakage rate (Water) Note 1)				
FPDM	0.1 cm <sup>3</sup> /min or less				

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

#### Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve





#### How to Order (Single Unit)



VX2

VXK

VXD

VXZ

VXS

VXB

VXE

**VXP** 


VXR

VXH

VXF

VX3

VXA

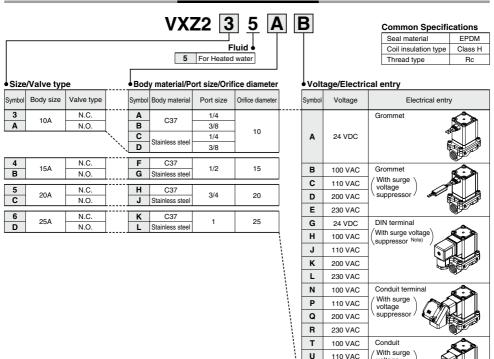

Note) For the class H type DIN terminal, use it in combination with the connector provided.

voltage

suppressor

٧

w

z

200 VAC

230 VAC

# For other special options,

Other voltages

refer to pages 192 and 193.			
	24 VAC		
Special voltage	48 VAC		
Special voltage	220 VAC		
	240 VAC		
DIN terminal with li	ght		
Conduit terminal wi	th light		
Oil-free			
G thread			
NPT thread With bracket Special electrical entry direction			

Dimensions → Page 200



# For High Temperature Oil

Can be used with air (up to 99°C), water (up to 99°C) and oil. Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications of the fluid used.

#### ↑ When the fluid is oil. -

The kinematic viscosity must not exceed 50 mm²/s. The special construction of the armature adopted in the built-in full-wave rectifier type gives an improvement in OFF response by providing clearance on the absorbed surface when it is switched ON.

#### Flow Rate Characteristics

N.C.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



#### Normally Closed (N.C.)

Body	Port size	Orifice diameter	Model	Min. operating pressure		e differential Note 3) (MPa)	Flow rate ch	aracteristics	Max. system	Weight Note 2)			
material	(Nominal diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)			
	1/4 (8A)	10	VXZ236				1.6	1.9		600			
C37,	3/8 (10A)	] 10	VAZ236			2.0	2.4		600				
Stainless	ainless 1/2 (15A) 15 <b>VXZ246</b> 0	0	0 0.7	4.6	5.3	1.5	720						
steel	3/4 (20A)	20	VXZ256			ı	ı			7.8	9.2		1100
	1 (25A)	25	VXZ266	1			8.7	10.2		1300			

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-5 Note) to 100	-20 to 60

Note) Kinematic viscosity: 50 mm<sup>2</sup>/s or less

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Oil) Note 1) 2)	
FKM	0.1 cm <sup>3</sup> /min or less	

#### External Leakage

Seal material	Leakage rate (Oil) Note 1)
FKM	0.1 cm <sup>3</sup> /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

#### **Zero Differential Pressure Type** Pilot Operated 2 Port Solenoid Valve



VX2 VXK


VXD

VXZ VXS VXB

VXE

VXP

VXF VX3 VXA



#### Flow Rate Characteristics

N.O.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normally Open (N.O.)

tornary open (tt.o.)								
e Orifice diameter	meter Model	Min. operating pressure	Max. operating pressure differential Note 3 (MPa)		Flow rate characteristics		Max. system	Weight Note 2)
neter) (mmø)	Wodel	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)
.)	WYZOAG	0	0.7	0.6	1.6	1.9		630
A) 10	VAZZAO				2.0	2.4		
A) 15	VXZ2B6				4.6	5.3	1.5	750
A) 20	VXZ2C6				7.8	9.2		1150
) 25	VXZ2D6				8.7	10.2		1350
/ /	ze   Orifice diameter (mmø)	Zea	ze meter (mme)         Orifice diameter (mme)         Model         Min. operating pressure differential Note 1) (MPa)           A)         10         VXZ2A6           A)         15         VXZ2B6           A)         20         VXZ2C6	Note   Orifice diameter (mme)   Model   Min. operating pressure differential Nose 1\(MPa\)   Model   Model   Min. operating pressure differential Nose 1\(MPa\)   Model   Mo	Zee	Zee	Zee	No.   No.

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. Please contact SMC for the compatibility of the circuit flow and valve size. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
_5 Note) to 100	-20 to 60

Note) Kinematic viscosity: 50 mm<sup>2</sup>/s or less

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Oil) Note 1) 2)
FKM	0.1 cm <sup>3</sup> /min or less

#### External Leakage

Seal material	Leakage rate (Oil) Note 1)			
FKM	0.1 cm <sup>3</sup> /min or less			

Note 1) Leakage is the value at ambient temperature 20°C.


Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.





#### How to Order (Single Unit)



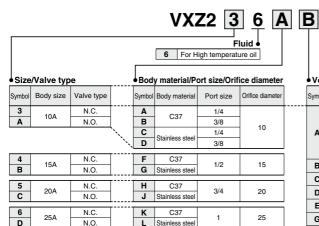

(	Common	Specifications

Common Specifications			
Seal material	FKM		
Coil insulation type	Class H		
Thread type	Rc		

	<ul><li>Volt</li></ul>	Voltage/Electrical entry				
	Symbol	Voltage	Electrical entry			
	A	24 VDC	Grommet			
	В	100 VAC	Grommet			
	С	110 VAC	With surge voltage			
	D	200 VAC	\suppressor /			
	E	230 VAC				
	G	24 VDC	DIN terminal			
	Н	100 VAC	(With surge voltage suppressor Note)			
	J	110 VAC				
	K	200 VAC				
`,	L	230 VAC				
	N	100 VAC	Conduit terminal			
	Р	110 VAC	With surge voltage			
	Q	200 VAC	\suppressor /			
	R	230 VAC				
	Т	100 VAC	Conduit			
	U	110 VAC	With surge voltage			
	٧	200 VAC	\suppressor /			
	W	230 VAC				
	Z		Other voltages			


Note) For the class H type DIN terminal, use it in combination with the connector provided.

# For other special options,

refer to pages 192 and 193.							
	24 VAC						
Special voltage	48 VAC						
Special voltage	220 VAC						
	240 VAC						
DIN terminal with lig	ght						
Conduit terminal wi	th light						
Oil-free							
G thread							
NPT thread							
With bracket							
Special electrical entry direction							

# VXZ Series **Other Special Options**

#### **Electrical Options**



			ona ji ziooa ioa. opaon o
Symbol	Class H*	Voltage	Electrical entry
1A		48 VAC	
1B		220 VAC	Grommet
1C		240 VAC	(With surge voltage suppressor)
1U		24 VAC	
1D	_	12 VDC	Grommet
15		12 VDC	Grommet
			(With surge voltage suppressor)
	•		
	•	220 VAC	DIN terminal
1H		240 VAC	(With surge voltage suppressor)
17		24 VAC	(with surge voltage suppressor)
1J	_	12 VDC	
1K		48 VAC	
1L		220 VAC	Conduit terminal
1M	•	240 VAC	
1W	•	24 VAC	(With surge voltage suppressor)
1N	_	12 VDC	
1P	•	48 VAC	
1Q		220 VAC	Conduit
1R	•	240 VAC	
1Y	•	24 VAC	(With surge voltage suppressor)
15	_	12 VDC	]
1T	_	12 VDC	Flat terminal
	1A 1B 1C 1U 1D 1E 1F 1G 1H 1V 1J 1K 1L 1M 1W 1N 1P 1Q 1R 1Y 1S	1B	1A

			12 100	i iai terriiriai
	2A		24 VDC	
With light	2B		100 VAC	
	2C		110 VAC	
	2D		200 VAC	
	2E	•	230 VAC	DIN terminal
	2F		48 VAC	(With surge voltage suppressor)
	2G		220 VAC	
	2H	•	240 VAC	
	2V		24 VAC	
	2J	_	12 VDC	
	2K	_	24 VDC	
	2L		100 VAC	
	2M		110 VAC	
	2N	•	200 VAC	
	2P		230 VAC	Conduit terminal
	2Q		48 VAC	(With surge voltage suppressor)
	2R		220 VAC	
	2S		240 VAC	
	2W	•	24 VAC	
	2T		12 VDC	

	21		12 000	
	3A	_	24 VDC	
ţ	3B	_	100 VAC	
Without DIN connector	3C -	_	110 VAC	
	3D	_	200 VAC	
	3E	_	230 VAC	DIN terminal
6	3F	_	48 VAC	(With surge voltage suppressor)
Ħ	3G	_	220 VAC	
٩	3H	_	240 VAC	
ž.	3V	_	24 VAC	
-	3J	_	12 VDC	

●: Also applicable to Class "H" coil. Options marked with ● are available for Class "H" coil. Applicable for all when the coil insulation class is Class "B".

#### **Other Options**

Low concentration ozone resistant and applicable to deionized water Oil-free Port thread

Other option

VX2

VXK

VXD

VXZ

VXS

VXB

VXE VXP

VXF VX3 VXA

VXZ2 3 Enter standard product number.

Low concentration ozone resistant and applicable to deionized water/Oil-free/Port thread


Symbol	Low concentration ozone resistant and applicable to deionized water *1, *3 (Seal material: FKM)	Oil-free	Port thread				
Nil		_	Rc, One-touch fitting*2				
Α			G*4				
В	_	_	NPT				
С	0	<ul> <li>Rc, One-touch fitting</li> </ul>					
D			G*4				
E	<u> </u>		NPT				
F	0		G*4				
G			NPT				
Н			Rc, One-touch fitting*2				
K	0		G*4				
L			NPT				
Z	_	0	Rc, One-touch fitting*2				
*1 Applie	cable to air (VXZ2□0) and wa	ter (VX	72 [2]				

- \*2 When the body is resin, One-touch fittings are equipped as standard. \*3 When using deionized water or any other fluid that may corrode C37
- (brass), select a stainless steel body. \*4 For connection, prepare a fitting compliant with ISO 16030 and JIS B

#### Made to Order

#### <Special lead wire length>


Produced upon receipt of order. Please contact SMC for lead times.



Enter symbols in the order below when ordering a combination of electrical option, other option, etc. Example) VXZ2 3 2 A Z 1A Z XB A Electrical option Special electrical entry direction With bracket Other option


# Installation Options (Mounting Option/Special Electrical Entry Direction)


The following shows combinations that can be selected using installation options.





#### **Special Electrical Entry Direction**



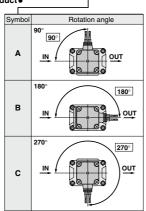


\* Available for the VXZ2A to 2D.




VXZ2 XBA

number.

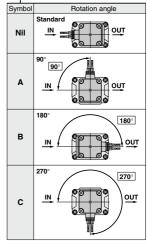

- \*1 Available for the VXZ2A to 2D.
- \*2 Bracket is attached as standard with the resin body type (VXZ2<sup>3</sup><sub>A</sub>0<sup>D</sup><sub>E</sub>), so it is no necessary to add XB to the part number.
- \*3 Bracket is packed in the same container as the main body.

#### VXZ Bracket mounting dimensions



Other option

With bracket


<sup>\*</sup> Enter symbols in the order below when ordering a combination of electrical option, other option, etc.

Example) VXZ2 3 2 A Z 1A Z XB A

Electrical option 
Special electrical entry direction

# Installation Options

(Mounting Option/Special Electrical Entry Direction)



With bracket/Special electrical entry direction

Seal material: EPDM

ı	in bracker/Special electrical entry direction •									
	Cumbal	Specifications								
	Symbol	Electrical entry direction	Bracket							
	Nil	IN side (Standard)								
	Α	90°	None							
	В	180°	None							
	C	270°								
	D	IN side (Standard)								
	E	90°	With bracket*1							
	F	180°	with bracket							
	G	270°								

- \*1 Not available for resin body type of the VXZ2A
- \*2 "Other options", which can be combined, are Nil, A, B, D, E, Z (Oil-free, G thread specifications, NPT thread specifications).
- \*3 Available for air and water.

**Electrical entry direction** 

Symbol	VXZ2 to VXZ2 6	Symbol	VXZ2 <sup>3</sup> to VXZ2 <sup>6</sup>
Nil	Standard	Α	90°
Ď	OUT	Ė	IN / PP OUT
В	180° IN ¶₽⊤¶¶ OUT	_	270° IN ₹₽Т% OUT
F	1001	Ģ	<u> </u>

\* Enter symbols in the order below when ordering a combination of electrical option, other option, seal material: EPDM, with bracket, mounting holes on the bottom side of the body and special electrical entry direction.

Electrical option Other O

VX2

VXK

VXD VXZ

VXS

VXB

VXE

VXR

VXH


VXF VX3

VXA

# VXZ Series Construction

#### Normally Closed (N.C.)


#### Body material: Aluminum, C37, Stainless steel

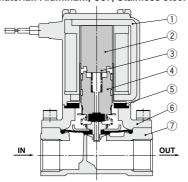

#### **Component Parts**

ĺ	No.	Description	Material					
	1	Solenoid coil	Cu + Fe + Resin					
	2	Tube assembly	Stainless steel					
ľ	3	Return spring	Stainless steel					
	4	Armature/Diaphragm assembly	Stainless steel, NBR, FKM, EPDM					
	5	Stopper	NBR, FKM, EPDM					
ľ	6	Bonnet	C37, Stainless steel, Aluminum					
	7	Body	C37, Stainless steel, Aluminum					

#### Body material: Resin

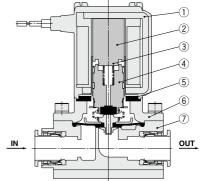


#### **Component Parts**

No.	Description	Material				
1	Solenoid coil	Cu + Fe + Resin				
2	Tube assembly	Stainless steel				
3	Return spring	Stainless steel				
4	Armature/Diaphragm assembly	Stainless steel, NBR, FKM				
5	Stopper	NBR, FKM				
6	Bonnet	Aluminum				
7	Body	Resin (PBT)				

# Normally Open (N.O.)


#### Body material: Aluminum, C37, Stainless steel

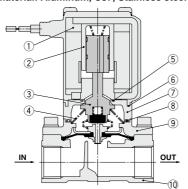

#### **Component Parts**

No.	Description	Material					
1	Solenoid coil	Cu + Fe + Resin					
2	Sleeve assembly	Stainless steel, Resin (PPS)					
3	Push rod/Diaphragm assembly	Stainless steel, NBR, FKM, EPDM					
4	Spring	Stainless steel					
5	O-ring A	NBR, FKM, EPDM					
6	O-ring B	NBR, FKM, EPDM					
7	Adapter	Resin (PPS)					
8	O-ring C	NBR, FKM, EPDM					
9	Bonnet	Aluminum, C37, Stainless steel					
10	Body	Aluminum, C37, Stainless steel					

#### **Body material: Resin**

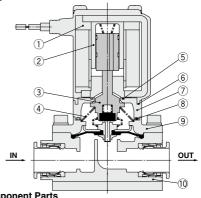

Component Parts

No.	Description	Material					
1	Solenoid coil	Cu + Fe + Resin					
2	Sleeve assembly	Stainless steel, Resin (PPS)					
3	Push rod/Diaphragm assembly	Stainless steel, NBR, FKM					
4	Spring	Stainless steel					
5	O-ring A	NBR, FKM					
6	O-ring B	NBR, FKM					
7	Adapter	Resin (PPS)					
8	O-ring C	NBR, FKM					
9	Bonnet	Aluminum					
10	Body	Resin (PBT)					

#### **Working Principle**

#### De-energized

The fluid enters from the IN goes through the supply orifice to fill the pressure action chamber. Main valve is closed by the pressure in the pressure action chamber and the reaction force of the return spring.

#### Energized (Pilot valve open)

When the coil is energized, the armature is attracted causing the pilot orifice to opening. The fluid filling the pressure action chamber flows to the OUT side through the pilot orifice.

#### Energized (Main valve open)

The pressure in the pressure action chamber decreases by discharging fluid through the pilot orifice. Because the force which pushes down the valve is reduced by the discharge of the fluid, the force that pushes up the main valve overcomes the push down force and opens the main valve. The main valve opens by the lift spring reaction force even if pressure on the IN side is 0 MPa or very low pressure.



VXK

VXD VXZ

VXS

VXB

VXE


VXP

VXR

VXF

VX3

VXA

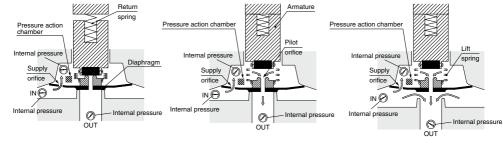


# **∧** Warning

Unstable flow may occur with the product under the following conditions: • low flow from the pump or compressor, etc. • use of several elbows or tees in the circuit, or • thin nozzles installed at the end of the piping etc. This can cause valve opening/closing failure, or oscillation, and cause a valve malfunction. If products are used with vacuum, then the vacuum level can be unstable due to these conditions. Please contact SMC to check if the valve can be used in the application by providing the relevant fluid circuit.




#### **Dimensions/Body Material: Resin (One-touch Fitting Type)**

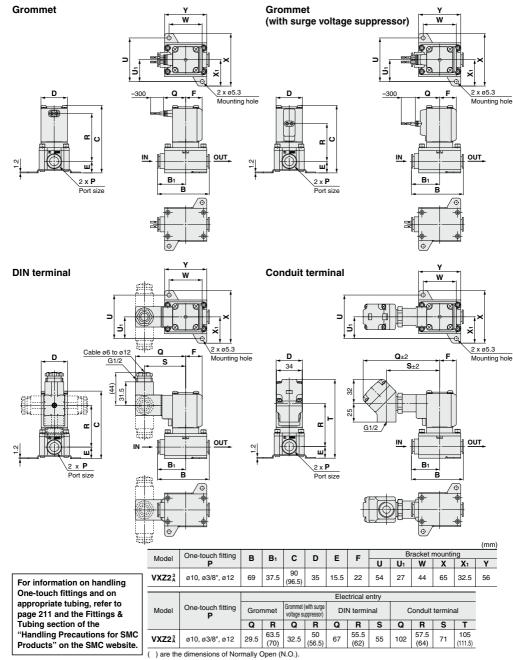





#### **Dimensions/Body Material: Resin (One-touch Fitting Type)**

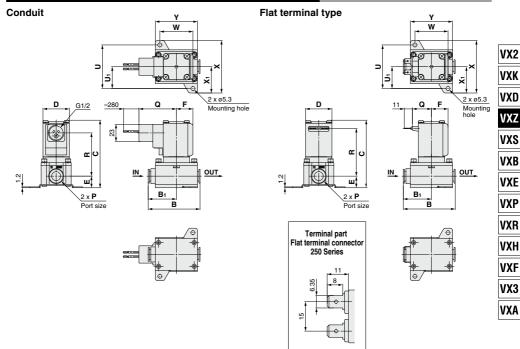

													(mm)
Model	One-touch fitting P	В	B <sub>1</sub>	С	п	D E	E F	Bracket mounting					
		-			ט			U	U₁	w	X	<b>X</b> 1	Y
VXZ2¾	ø10, ø3/8", ø12	69	37.5	90 (96.5)	35	15.5	22	54	27	44	65	32.5	56

			Electric	al entry		
Model	One-touch fitting	Con	duit	duit Flat te		
	Р	Q	R	Q	R	
VXZ2¾	VXZ2 8 Ø10, Ø3/8", Ø12	50	57.5	25.5	63.5	
VAZZA	010, 03/0, 012	30	(64)	25.5	(70)	

<sup>( )</sup> are the dimensions of Normally Open (N.O.).










#### Dimensions/Body Material: Aluminum, C37, Stainless Steel

#### Grommet


#### Grommet (with surge voltage suppressor)




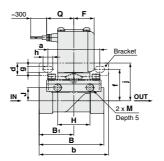

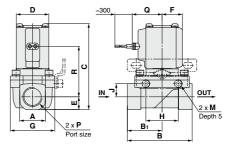

#### **DIN terminal**

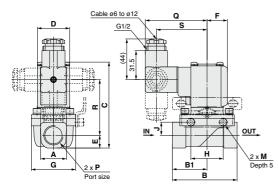



												(mm)
Model	Port size	A	В	B <sub>1</sub>	С	D	E	F	G	н	J	М
VXZ2 <sup>3</sup>	1/4, 3/8	21 <22>	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ25	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2 <sup>6</sup>	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size				Bracket mounting							
wodei	P	а	a1Note)	b	d	е	f	g	h	i	j	
VXZ2 <sup>3</sup>	1/4, 3/8	56	52	75		2.3	30	6.5	10.5	31	37	
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	56	60	75	13.5	2.3	34.5	6.5	10.5	35	41	
VXZ2 <sup>5</sup> c	3/4	70.5	68	92	13.5	2.3	39	6.5	10.5	43	46	
VXZ28	1	70.5	73	92	1	2.3	41	6.5	10.5	45	48	

				E	Electrical entry	/		
Model	Port size	G	Frommet		net (with surge e suppressor)		DIN terminal	
		Q R		Q	R	Q	R	S
VXZ2 <sup>3</sup>	1/4, 3/8	29.5	63.5 (70)	32.5	50 (56.5)	67	55.5 (62)	55
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	29.5			55 (61)	67	60.5 (66.5)	55
VXZ25	3/4	32 76.5 (83)		35	63 (69.5)	69.5	68.5 (75)	57.5
VXZ28	1	32 79.5 (85)		35	66 (71.5)	69.5	71.5 (77)	57.5

<sup>( )</sup> are the dimensions of Normally Open (N.O.). < > are the dimensions of aluminum body. Note) Old VXZ bracket mounting hole center position





VXR

VXH VXF


VX3

VXA


#### Dimensions/Body Material: Aluminum, C37, Stainless Steel


#### Conduit terminal


#### Conduit

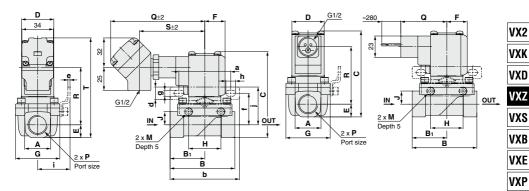


#### Flat terminal type



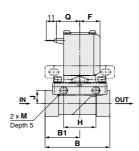



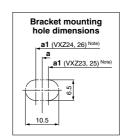

												(mm)
Model	Port size	A	В	B <sub>1</sub>	С	D	E	F	G	н	J	М
VXZ2 <sup>3</sup>	1/4, 3/8	21 <22>	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ25	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2 <sup>6</sup> <sub>D</sub>	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size				Bı	racket i	mountir	ng			
Model	Р	а	a1 Note)	b	d	е	f	g	h	i	j
VXZ2 <sup>3</sup>	1/4, 3/8	56	52	75		2.3	30	6.5	10.5	31	37
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	56	60	75	13.5	2.3	34.5	6.5	10.5	35	41
VXZ2 <sup>5</sup> <sub>C</sub>	3/4	70.5	68	92	13.5	2.3	39	6.5	10.5	43	46
VXZ28	1	70.5	73	92	]	2.3	41	6.5	10.5	45	48

Model	Port size		Conduit	Conduit	Flat terminal				
	P	Q	R	S	Т	Q	R	Q	R
VXZ2 <sup>3</sup>	1/4, 3/8	102	57.5 (64)	71	100 (106.5)	50	57.5 (64)	25.5	63.5 (70)
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	102	62.5 (68.5)	71	108 (114.5)	50	62.5 (68.5)	25.5	68.5 (74.5)
VXZ2 <sup>5</sup> <sub>C</sub>	3/4	104.5	70.5 (77)	73.5	119 (126)	52.5	70.5 (77)	28	76.5 (82.5)
VXZ25	1	104.5	73.5 (79)	73.5	125 (131)	52.5	73.5 (79)	28	79.5 (85)

<sup>)</sup> are the dimensions of Normally Open (N.O.). < > are the dimensions of aluminum body. Note) Old VXZ bracket mounting hole center position






# For Heated Water, High Temperature Oil

#### **Dimensions/Body Material: C37, Stainless Steel**


#### Grommet

#### Conduit terminal

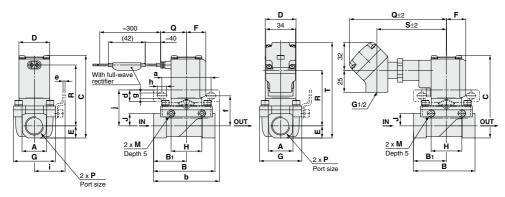

#### **DIN terminal**



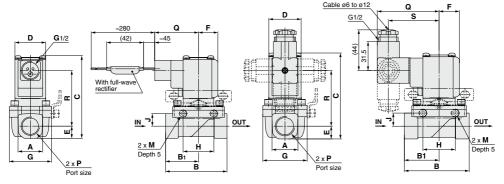

												(mm)
Model	Port size	Α	В	B <sub>1</sub>	С	D	E	F	G	н	J	M
VXZ2 <sup>3</sup>	1/4, 3/8	21	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ2 <sup>5</sup> <sub>C</sub>	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ25	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size				Ві	acket i	mountir	ng			
wodei	P	а	a1Note)	b	d	е	f	g	h	i	j
VXZ2 <sup>3</sup>	1/4, 3/8	56	52	75		2.3	30	6.5	10.5	31	37
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	56	60	75	13.5	2.3	34.5	6.5	10.5	35	41
VXZ2 <sup>5</sup>	3/4	70.5	68	92	13.5	2.3	39	6.5	10.5	43	46
VXZ2 <sup>6</sup> <sub>D</sub>	1	70.5	73	92		2.3	41	6.5	10.5	45	48

Bracket mount hole dimensio	
a1 (VXZ24, 26) N	lote)
a1 (VXZ23,	25) <sup>Note)</sup>

	Port size		Electrical entry									
Model	POILSIZE	(	Grommet		Conduit	termina	al		Conduit	DIN terminal		
		Q	R	Ø	R	S	Т	Q	R	Q	R	S
VXZ2 <sup>3</sup>	1/4, 3/8	29.5	63.5 (70)	110.5	57.5 (64)	79.5	100 (106.5)	50	57.5 (64)	67	55.5 (62)	55
VXZ2 <sup>4</sup> <sub>B</sub>	1/2	29.5	68.5 (74.5)	110.5	62.5 (68.5)	79.5	108 (114.5)	50	62.5 (68.5)	67	60.5 (66.5)	55
VXZ2 <sup>5</sup>	3/4	32	76.5 (83)	113	70.5 (77)	82	119 (126)	52.5	70.5 (77)	69.5	68.5 (75)	57.5
VXZ25	1	32	79.5 (85)	113	73.5 (79)	82	125 (131)	52.5	73.5 (79)	69.5	71.5 (77)	57.5

<sup>( )</sup> are the dimensions of Normally Open (N.O.). Note) Old VXZ bracket mounting hole center position

#### **Zero Differential Pressure Type** Pilot Operated 2 Port Solenoid Valve



#### **Replacement Parts**

DIN Connector Part No.



COII IIISUIAI	lon rype/r	OI Class D>
Electrical option	Rated voltage	Connector part
	24 VDC	

Electrical option	Rated voltage	Connector part no.
	24 VDC	
	12 VDC	
	100 VAC	
	110 VAC	
None	200 VAC	GDM2A-G
None	220 VAC	GDIVIZA-G
	230 VAC	
	240 VAC	
	24 VAC	
	48 VAC	
	24 VDC	GDM2A-L5
	12 VDC	GDM2A-L6
	100 VAC	GDM2A-L1
	110 VAC	GDM2A-L1
Mith limbt	200 VAC	GDM2A-L2
With light	220 VAC	GDM2A-L2
	230 VAC	GDM2A-L2
	240 VAC	GDM2A-L2
	24 VAC	GDM2A-L5
	48 VAC	GDM2A-L15

<Coil Insulation Type/For Class H>

Electrical option	Rated voltage	Connector part no.
	24 VDC	GDM2A-G-S5
	100 VAC	
	110 VAC	
	200 VAC	
None	220 VAC	GDM2A-R
	230 VAC	GDIVIZA-N
	240 VAC	
	24 VAC	
	48 VAC	
	24 VDC	GDM2A-G-Z5
	100 VAC	GDM2A-R-L1
	110 VAC	GDM2A-R-L1
	200 VAC	GDM2A-R-L2
With light	220 VAC	GDM2A-R-L2
	230 VAC	GDM2A-R-L2
	240 VAC	GDM2A-R-L2
	24 VAC	GDM2A-R-L5
	48 VAC	GDM2A-R-L5

VXD VXZ

VXS

VX2 VXK

VXB

VXE

VXP VXR

VXH

VXF

VX3

VXA

Gasket Part No. for DIN Connector

VCW20-1-29-1 (For Class B) VCW20-1-29-1-F (For Class H)

• Lead Wire Assembly for Flat Terminal (Set of 2 pcs.)

VX021S-1-16FB

Bracket Assembly Part No. (for Metal Body)

<sup>\* 2</sup> mounting screws are shipped together with the bracket assembly.

# **Glossary of Terms**

#### **Pressure Terminology**

#### 1. Maximum operating pressure differential

The maximum pressure differential (the difference between the inlet and outlet pressure) which is allowed for operation. When the outlet pressure is 0 MPa, this becomes the maximum operating pressure.

#### 2. Minimum operating pressure differential

The minimum pressure differential (the difference between the inlet pressure and outlet pressure) required to keep the main valve fully opened.

#### 3. Maximum system pressure

The maximum pressure that can be applied inside the pipelines (line pressure).

[The pressure differential of the solenoid valve portion must be less than the maximum operating pressure differential.]

#### 4. Withstand pressure

The pressure in which the valve must be withstood without a drop in performance after holding for one minute under prescribed pressure and returning to the operating pressure range. [value under the prescribed conditions]

#### **Electrical Terminology**


#### 1. Surge voltage

A high voltage which is momentarily generated by shutting off the power in the shut-off area.

#### 2. Degree of protection

A degree defined in the "JIS C 0920: Waterproof test of electric machinery/appliance and the degree of protection against the intrusion of solid foreign objects."

Verify the degree of protection for each product.



#### ●First Characteristics:

Degrees of protection against solid foreign objects

	•							•		
0	Non-protec	ted								
1	Protected a	against	solid t	foreign	objects	of 50	mmø	and	greater	
2	Protected a	against:	solid t	foreign	objects	of 12	mmø	and	greater	
3	Protected a	against	solid f	foreign	objects	of 2.5	mmø	and	d greate	r
4	Protected a	against	solid t	foreign	objects	of 1.0	mmø	and	d greate	r
5	Dust-prote	cted								
6	Dust-tight									

#### **Electrical Terminology**

## Second Characteristics: Degrees of protection against water

Degrees of protection against water				
0	Non-protected	_		
1	Protected against vertically falling water drops	Dripproof type 1		
2	Protected against vertically falling water drops when enclosure tilted up to $15^{\circ}$	Dripproof type 2		
3	Protected against rainfall when enclosure tilted up to 60°	Rainproof type		
4	Protected against splashing water	Splashproof type		
5	Protected against water jets	Water-jet-proof type		
6	Protected against powerful water jets	Powerful water-jet-proof type		
7	Protected against the effects of temporary immersion in water	Immersible type		
8	Protected against the effects of continuous immersion in water	Submersible type		

#### Example) IP65: Dust-tight, Water-jet-proof type

"Water-jet-proof type" means that no water intrudes inside an equipment that could hinder from operating normally by means of applying water for 3 minutes in the prescribed manner. Take appropriate protection measures, since a device is not usable in an environment where a droplet of water is splashed constantly.

#### Others

#### 1. Material

NBR: Nitrile rubber

FKM: Fluoro rubber

EPDM: Ethylene propylene rubber

#### 2. Oil-free treatment


The degreasing and washing of wetted parts

#### 3. Symbol

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

#### **Flat Terminal**

# Flat terminal/Electrical connection size of molded coil





# **Solenoid Valve Flow Rate Characteristics** (How to indicate flow rate characteristics)

1. Indication of flow rate characteristics

The flow rate characteristics in equipment such as a solenoid valve, etc. are indicated in their specifications as shown in Table (1).

Table (1) Indication of Flow Rate Characteristics

Corresponding equipment	Indication by international standard	Other indications	Conformed standard
B	C, b	_	ISO 6358: 1989 JIS B 8390: 2000
Pneumatic equipment	_	s	JIS B 8390: 2000 Equipment: JIS B 8379, 8381-1, 8381-2
		Cv	ANSI/(NFPA)T3.21.3 R1-2008
Process fluid control	Kv	_	IEC60534-1: 2005 IEC60534-2-3: 1997 JIS B 2005-1: 2012
equipment	equipment	Cv	JIS B 2005-1: 2012 JIS B 2005-2-3: 2004 Equipment: JIS B 8471, 8472, 8473

#### 2. Pneumatic equipment

2.1 Indication according to the international standards

(1) Conformed standard

ISO 6358: 1989 : Pneumatic fluid power—Components using compressible fluids—

Determination of flow rate characteristics

JIS B 8390: 2000 : Pneumatic fluid power—Components using compressible fluids—

How to test flow rate characteristics

(2) Definition of flow rate characteristics

The flow rate characteristics are indicated as a result of a comparison between sonic conductance C and critical pressure ratio b.

Sonic conductance C: Value which divides the passing mass flow rate of an equipment in a choked flow condition by the product of the upstream absolute pressure and the density in a standard condition.

Critical pressure ratio **b**: Pressure ratio (downstream pressure/upstream pressure) which will turn to a choked

flow when the value is smaller than this ratio.

Choked flow

: The flow in which the upstream pressure is higher than the downstream pressure and where sonic speed in a certain part of an equipment is reached.

Gaseous mass flow rate is in proportion to the upstream pressure and not dependent

on the downstream pressure.

Subsonic flow : Flow greater than the critical pressure ratio

Standard condition

: Air in a temperature state of 20°C, absolute pressure 0.1 MPa (= 100 kPa = 1 bar),

relative humidity 65%.

It is stipulated by adding the "(ANR)" after the unit depicting air volume.

(standard reference atmosphere)

Conformed standard: ISO 8778: 1990 Pneumatic fluid power—Standard reference atmosphere, JIS B 8393: 2000: Pneumatic fluid power—Standard reference atmosphere

(3) Formula for flow rate

It is described by the practical units as following.

When

$$\frac{\mathbf{\textit{P}}_{2} + 0.1}{\mathbf{\textit{P}}_{1} + 0.1} \le \mathbf{\textit{b}}, \text{ choked flow}$$

$$Q = 600 \times C (P_1 + 0.1) \sqrt{\frac{293}{273 + T}}$$
 .....(1)

When

$$\frac{P_{2}+0.1}{P_{1}+0.1} > b$$
, subsonic flow

$$\mathbf{Q} = 600 \times \mathbf{C} (\mathbf{P}_1 + 0.1) \sqrt{1 - \left[ \frac{\mathbf{P}_2 + 0.1}{\mathbf{P}_1 + 0.1} - \mathbf{b} \right]^2 \sqrt{\frac{293}{273 + \mathbf{T}}}}$$
 .....(2)

VX2

VXK VXD

VXZ

VXS VXB

VXE

VXP

VXR

VXH

VXF

VX3

VXA

Q: Air flow rate [L/min (ANR)]

C: Sonic conductance [dm3/(s-bar)], dm3 (Cubic decimeter) of SI = L (liter).

**b**: Critical pressure ratio [—]

P1: Upstream pressure [MPa]

P2: Downstream pressure [MPa]

T : Temperature [°C]

Note) Formula of subsonic flow is the elliptic analogous curve.

Flow rate characteristics are shown in Graph (1) For details, please use the calculation software available from SMC website.

#### Example


(4) Test method

Obtain the air flow rate for  $P_1 = 0.4$  [MPa],  $P_2 = 0.3$  [MPa], T = 20 [°C] when a solenoid valve is performed in C = 2 [dm³/(s·bar)] and D = 0.3.

According to formula 1, the maximum flow rate =  $600 \times 2 \times (0.4 + 0.1) \times \sqrt{\frac{293}{273 + 20}} = 600 \text{ [L/min (ANR)]}$ 

Pressure ratio = 
$$\frac{0.3 + 0.1}{0.4 + 0.1} = 0.8$$

Based on Graph (1), it is going to be 0.7 if it is read by the pressure ratio as 0.8 and the flow ratio to be  $\boldsymbol{b} = 0.3$ . Hence, flow rate = Max. flow x flow ratio =  $600 \times 0.7 = 420$  [L/min (ANR)]

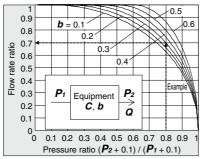

Graph (1) Flow rate characteristics

Attach a test equipment with the test circuit shown in Fig. (1) while maintaining the upstream pressure to a certain level which does not go below 0.3 MPa. Next, measure the maximum flow to be saturated in the first place, then measure this flow rate at 80%, 60%, 40%, 20% and the upstream and downstream pressure. And then, obtain the sonic conductance C from this maximum flow rate. In addition, calculate b using each data of others and the subsonic flow formula, and then obtain the critical pressure ratio b from that average.

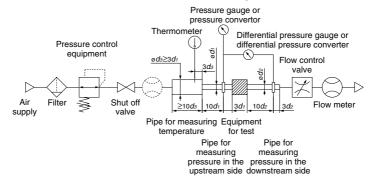


Fig. (1) Test circuit based on ISO 6358: 1989, JIS B 8390: 2000

#### 2.2 Effective area S

(1) Conformed standard

JIS B 8390: 2000: Pneumatic fluid power—Components using compressible fluids—

Determination of flow rate characteristics

Equipment standards: JIS B 8373: Solenoid valve for pneumatics

JIS B 8379: Silencer for pneumatics

JIS B 8381-1: Fittings for pneumatics—Part 1: Push-in fittings for thermoplastic resin tubing JIS B 8381-2: Fittings for pneumatics—Part 2: Compression fittings for thermoplastic resin tubing

(2) Definition of flow rate characteristics

Effective area S: The cross-sectional area having an ideal throttle without friction deduced from the calculation of the pressure changes inside an air tank or without reduced flow when discharging the compressed air in a choked flow, from an equipment attached to the air tank. This is the same concept representing the "easy to run through" as sonic conductance C.

(3) Formula for flow rate

When

$$\frac{P_{2} + 0.1}{P_{1} + 0.1}$$
 0.5, choked flow

$$Q = 120 \times S(P_1 + 0.1) \sqrt{\frac{293}{273 + T}}$$
 .....(3

When

$$\frac{P_{2} + 0.1}{P_{1} + 0.1} > 0.5$$
, subsonic flow

$$P_1 + 0.1$$

$$\mathbf{Q} = 240 \times \mathbf{S} \sqrt{(\mathbf{P}_2 + 0.1) (\mathbf{P}_1 - \mathbf{P}_2)} \sqrt{\frac{293}{273 + \mathbf{T}}}$$
 ....(4)

Conversion with sonic conductance C:

Q : Air flow rate[L/min(ANR)]

S : Effective area [mm²]

P1: Upstream pressure [MPa]

P2: Downstream pressure [MPa]

T: Temperature [°C]

Note) Formula for subsonic flow (4) is only applicable when the critical pressure ratio  $\boldsymbol{b}$  is the unknown equipment. In the formula (2) by the sonic conductance  $\boldsymbol{C}$ , it is the same formula as when  $\boldsymbol{b} = 0.5$ .

#### (4) Test method

Attach a test equipment with the test circuit shown in Fig. (2) in order to discharge air into the atmosphere until the pressure inside the air tank goes down to 0.25 MPa (0.2 MPa) from an air tank filled with the compressed air at a certain pressure level (0.5 MPa) which does not go below 0.6 MPa. At this time, measure the discharging time and the residual pressure inside the air tank which had been left until it turned to be the normal values to determine the effective area S, using the following formula. The volume of an air tank should be selected within the specified range by corresponding to the effective area of an equipment for test. In the case of JIS B 8379, the pressure values are in parentheses and the coefficient of the formula is 12.9.

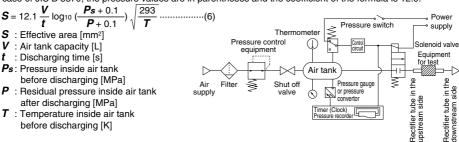


Fig. (2) Test circuit based on JIS B 8390: 2000

VX2

VXK VXD

VXZ

VXS

VXB VXE

VXP

VXR

VXH

VXF

VX3

VXA

#### 2.3 Flow coefficient CV factor

The United States Standard ANSI/(NFPA)T3.21.3: R1-2008R: Pneumatic fluid power—Flow rating test procedure and reporting method for fixed orifice components

This standard defines the *Cv* factor of the flow coefficient by the following formula that is based on the test conducted by the test circuit analogous to ISO 6358.

$$Cv = \frac{Q}{114.5\sqrt{\frac{\Delta P (P_2 + P_a)}{T_1}}}$$
(7)

 $\Delta P$ : Pressure drop between the static pressure tapping ports [bar]

**P**<sub>1</sub>: Pressure of the upstream tapping port [bar gauge]

 $P_2$ : Pressure of the downstream tapping port [bar gauge]:  $P_2 = P_1 - \Delta P$ 

**Q**: Flow rate [L/s standard condition]

Pa: Atmospheric pressure [bar absolute]

T<sub>1</sub>: Upstream absolute temperature [K]

Test conditions are  $< P_1 + P_2 = 6.5 \pm 0.2$  bar absolute,  $T_1 = 297 \pm 5$ K, 0.07 bar  $\le \Delta P$  0.14 bar.

This is the same concept as effective area **A** which ISO 6358 stipulates as being applicable only when the pressure drop is smaller than the upstream pressure and the compression of air does not become a problem.

#### 3. Process fluid control equipment

(1) Conformed standard

IEC60534-1: 2005: Industrial-process control valves. Part 1: control valve terminology and general considerations

IEC60534-2-3: 1997: Industrial-process control valves. Part 2: Flow capacity, Section Three-Test procedures

JIS B 2005-1: 2012: Industrial-process control valves – Part 1: Control valve terminology and general considerations JIS B 2005-2-3: 2004: Industrial-process control valves – Part 2: Flow capacity – Section 3: Test procedures Equipment standards: JIS B 8471: Solenoid valve for water

JIS B 8472: Solenoid valve for steam JIS B 8473: Solenoid valve for fuel oil

(2) Definition of flow rate characteristics

Kv factor: Value of the clean water flow rate represented by m³/h that runs through the valve (equipment for test) at 5 to 40°C, when the pressure difference is 1 x 105 Pa (1 bar). It is calculated using the following formula:

$$\mathbf{K}\mathbf{v} = \mathbf{Q}\sqrt{\frac{1\times10^5}{\Delta\mathbf{P}}\cdot\frac{\rho}{1000}}$$
....(8)

Kv: Flow coefficient [m3/h]

Q: Flow rate [m3/h]

△P: Pressure difference [Pa]

 $\rho$ : Density of fluid [kg/m<sup>3</sup>]

(3) Formula of flow rate

It is described by the practical units. Also, the flow rate characteristics are shown in Graph (2).

In the case of liquid:

$$Q = 53Kv\sqrt{\frac{\Delta P}{G}}$$
 (9)

**Q**: Flow rate [L/min]

Kv: Flow coefficient [m3/h]

ΔP: Pressure difference [MPa]

G: Relative density [water = 1]

In the case of saturated aqueous vapor:

$$Q = 232 Kv \sqrt{\Delta P(P_2 + 0.1)}$$
 .....(10)

Q: Flow rate [kg/h]

Kv: Flow coefficient [m3/h]

Δ**P**: Pressure difference [MPa]

 $P_1$ : Upstream pressure [MPa]:  $\Delta P = P_1 - P_2$ 

P2: Downstream pressure [MPa]

VX2

VXK

VXD

VXZ

VXS

**VXB** 

VXE

VXP

VXR

VXH

VXF

VX3

VXA

Conversion of flow coefficient:

Kv = 0.865 Cv .....(11)

Here.

CV factor: Value of the clean water flow rate represented by US gal/min that runs through the valve at 40 to 100°F, when the pressure difference is 1 lbf/in<sup>2</sup> (psi)

Value is different from **Kv** and **Cv** factors for pneumatic purpose due to different test method.

#### (4) Test method

Connect the equipment for the test to the test circuit shown in Fig. (3), and run water at 5 to 40°C. Then, measure the flow rate with a pressure difference where vaporization does not occur in a turbulent flow (pressure difference of 0.035 MPa to 0.075 MPa when the inlet pressure is within 0.15 MPa to 0.6 MPa). However, as the turbulent flow is definitely caused, the pressure difference needs to be set with a large enough difference so that the Reynolds number does not fall below 1 x 105, and the inlet pressure needs to be set slightly higher to prevent vaporization of the liquid. Substitute the measurement results in formula (8) to calculate Kv.


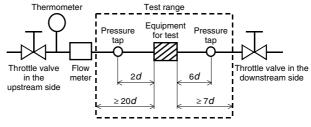


Fig. (3) Test circuit based on IEC60534-2-3, JIS B 2005-2-3

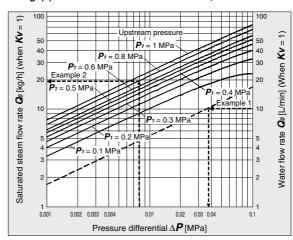

#### Graph (2) Flow rate characteristics

Example 1) Obtain the pressure difference when water [15 L/min] runs through the solenoid valve with a  $Kv = 1.5 \text{ m}^3/\text{h}$ . As the flow rate when Kv = 1 is calculated as the formula:  $Q_0 = 15 \times 1/1.5 = 10$  [L/min], read off  $\Delta P$  when  $Q_0$  is 10 [L/min] in Graph (2). The reading is 0.036 [MPa].


#### Example 2)

Obtain the saturated steam flow rate when  $P_1 = 0.8$  [MPa] and  $\Delta P = 0.008$  [MPa] with a solenoid valve with a Kv = 0.05 [m<sup>3</sup>/h]. Read off  $Q_0$  when  $P_1$  is 0.8 and  $\Delta P$  is 0.008 in Graph (2), the reading is 20 kg/h. Therefore, the flow rate is calculated as the formula:  $\mathbf{Q} = 0.05/1 \times 20 = 1 \text{ [kg/h]}$ .

# **Flow Rate Characteristics**

Note) Use this graph as a guide. In the case of obtaining an accurate flow rate, refer to pages 203 through to 207.

## For Air

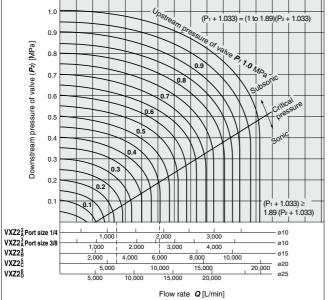


#### How to read the graph

The sonic range pressure to generate a flow of 6,000 L/min (ANR) is  $P_1 \approx 0.47$  MPa for a ø15 orifice (VXZ2 $\frac{4}{5}$ ) and  $P_1 \approx 0.23$  MPa for a ø20 orifice (VXZ2 $\frac{5}{5}$ ).

The optimum size for an upstream pressure  $P_1$  = 0.45 MPa and a flow of 6,000 L/min will be the VXZ2 $_6^4$  (ø15 orifice, port size 1/2).

#### For Water

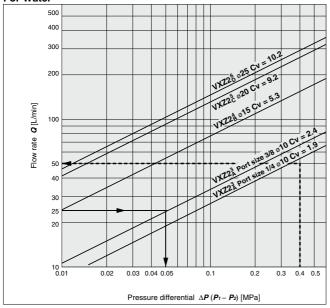

#### How to read the graph

The pressure differential for a ø10 orifice to supply a flow of 25 L/min (VXZ2 $^3_{A}$ , port size 3/8) will be  $\Delta P \approx 0.05$  MPa.

The optimum size for a pressure differential of  $\Delta P \approx 0.4$  MPa and a flow of 50 L/min will be the VXZ2 $_{\rm A}^3$  (ø10 orifice, port size 1/4).



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Design

# **⚠** Warning

1. Cannot be used as an emergency shutoff valve etc.

The valves presented in this catalog are not designed for safety applications such as an emergency shutoff valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

#### 2. Extended periods of continuous energization

The solenoid coil will generate heat when continuously energized. Avoid using in a tightly shut container. Install it in a well ventilated area. Furthermore, do not touch it while it is being energized or right after it is energized.

#### 3. Closed liquid circuit

In a closed circuit, when liquid is static, pressure could rise due to changes in temperature. This pressure rise could cause malfunction and damage to components such as valves. To prevent this, install a relief valve in the system.

#### 4. Actuator drive

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

#### 5. Pressure (including vacuum) holding

It is not usable for an application such as holding the pressure (including vacuum) inside of a pressure vessel because air leakage is entailed in a valve.

- 6. When the conduit type is used as equivalent to an IP65 enclosure, install a wiring conduit etc.
- When an impact, such as water hammer etc., caused by the rapid pressure fluctuation is applied, the solenoid valve may be damaged. Give an attention to it.

#### Selection

# **⚠Warning**

#### 1. Usage with low flow

Unstable flow may occur with the product under the following conditions: • low flow from the pump or compressor, etc. • use of several elbows or tees in the circuit, or • thin nozzles installed at the end of the piping etc. This can cause valve opening/closing failure, or oscillation, and cause a valve malfunction.

Please check the pressure differential and flow to select the appropriate size of the valve referring to the Flow rate Characteristics on page 208. Ensure that pressure differential does not become lower than 0.01 MPa during ON (N.C.: Valve open).

#### Selection

VX2

VXK

מצע

VXZ

VXS

VXB

VXE

VXP

VXR

VXH

VXF

VX3

VXA

# **⚠** Warning

#### 2. Fluid

#### 1) Type of fluid

Select an appropriate valve with reference to the table below for the general fluid. Before using a fluid, check whether it is compatible with the materials of each model by referring to the fluids listed in this catalog. Use a fluid with a kinematic viscosity of 50 mm²/s or less.

If there is something you do not know, please contact SMC.

#### Applicable Fluid

For Air	Air
For Water	Air, Water
For Oil	Air, Water, Oil
For Heated water	Air(up to 99°C), Water, Heated water
For High temperature oil	Air(up to 99°C), Water, Oil, High temperature oil
	· · · · · · · · · · · · · · · · · · ·

#### 2) Flammable oil, Gas

Do not use the product with combustion-supporting or flammable fluids.

#### 3) Corrosive gas

Cannot be used since it will lead to cracks by stress corrosion or result in other incidents.

- 4) When a brass body is used, then depending on water quality, corrosion and internal leakage may occur. If such abnormalities occur, exchange the product for a stainless steel body.
- Use an oil-free specification when any oily particle must not enter the passage.
- 6) Applicable fluid on the list may not be used depending on the operating condition. Give adequate confirmation, and then determine a model, just because the compatibility list shows the general case.

#### 3. Air quality

#### <Air>

#### 1) Use clean air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

#### 2) Install an air filter.

Install air filters close to valves at their upstream side. filtration degree of 5 µm or less should be selected.

#### 3) Install an aftercooler or air dryer, etc.

Compressed air that contains excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an aftercooler or air dryer, etc.

 If excessive carbon powder is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon powder is generated by the compressor, it may adhere to the inside of the valves and cause a malfunction

Refer to Best Pneumatics No.5 for further details on compressed air quality.



# $\triangle$

# VXZ Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Selection

# ⚠Warning

#### <Water>

The use of a fluid that contains foreign objects can cause problems such as malfunction and seal failure by promoting wear of the valve seat and armature, and by sticking to the sliding parts of the armature etc. Install a suitable filter (strainer) immediately upstream from the valve. As a general rule, use 100 mesh.

The supply water includes materials that create a hard sediment or sludge such as calcium and magnesium. Since this scale and sludge can cause the valve to malfunction, install water softening equipment, and a filter (strainer) directly upstream from the valve to remove these substances.

#### Tap water pressure:

The water pressure for tap water is normally 0.4 MPa or less. However, in places like a high-rise building, the pressure may be 1.0 MPa. When selecting tap water, be careful of the maximum operating pressure differential.

When using water or heated water, poor operation or leaks may be caused by dezincification, erosion, corrosion, etc.

The brass (C37) body of this product uses dezincification resistant material as a standard. We also offer a stainless steel body type with improved corrosion resistance. Please use the one that fits your needs.


#### <0il>

Generally, FKM is used as seal material, as it is resistant to oil. The resistance of the seal material may deteriorate depending on the type of oil, manufacturer or additives.

Check the resistance before using.

#### <Vacuum>

Please be aware that there is a range of pressure that can be used.

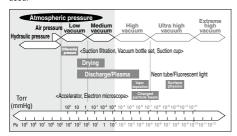

Vacuum piping direction: if the system uses a vacuum pump, we ask that you install the vacuum pump on the secondary side.

Also, install a filter on the primary side, and be careful that no foreign object is picked up.

Please replace the valve after operating the device approximately 300,000 times.

# **⚠Warning**

#### 4. Ambient environment

Use within the operable ambient temperature range. Check the compatibility between the product's composition materials and the ambient atmosphere. Be certain that the fluid used does not touch the external surface of the product.


#### 5. Countermeasures against static electricity

Take measures to prevent static electricity since some fluids can cause static electricity.

#### **⚠** Caution

#### 1. Leakage voltage

When the solenoid valve is operated using the controller, etc., the leakage voltage should be the product allowable leakage voltage or less. Particularly when using a resistor in parallel with a switching element and using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the resistor, C-R element, etc., creating a possible danger that the valve may not turn off.



AC coil: 5% or less of rated voltage DC coil: 2% or less of rated voltage

#### 2. Selecting model

Material depends on fluid. Select optimal models for the fluid.

#### 3. When the fluid is oil.

The kinematic viscosity must not exceed 50 mm<sup>2</sup>/s.

#### Mounting

# 

 If air leakage increases or equipment does not operate properly, stop operation.

After mounting is completed, confirm that it has been done correctly by performing a suitable function test.

#### 2. Do not apply external force to the coil section.

When tightening is performed, apply a wrench or other tool to the outside of the piping connection parts.

#### Mount a valve with its coil position upward, not downward.

When mounting a valve with its coil positioned downward, foreign objects in the fluid will adhere to the iron core leading to a malfunction

# 4. Do not warm the coil assembly with a heat insulator etc. Use tape, heaters, etc., for freeze prevention on the piping and

body only. They can cause the coil to burn out.

5. Secure with brackets, except in the case of steel

b. Secure with brackets, except in the case of steel piping and copper fittings.



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Mounting

# **⚠** Warning

Avoid sources of vibration, or adjust the arm from the body to the minimum length so that resonance will not occur.

#### 7. Painting and coating

Warnings or specifications printed or labeled on the product should not be erased, removed or covered up.

#### Disassembly/Assembly Procedures

#### **∧** Caution

 Before starting the disassembly work, be sure to shut off the power supply and pressure supply, and then release the residual pressure.

#### Disassembly

#### <N.C.>

1) Loosen the mounting screws.

The coil assembly, stopper, return spring and body assembly can be removed

#### <N.O.>

1) Loosen the mounting screws.


The coil assembly, O-rings, adapter and body assembly can be removed.

#### Assembly

#### <Common to N.C. and N.O.>

- Mount the components on the body in the reverse order of disassembly.
- When changing the electrical entry direction, turn the coil assembly in a desired direction to mount it.
- 3) Push the coil assembly against the body and tighten the screws two or more rounds diagonally (Fig. 2) in the status that there are no gaps between the coil assembly and body (Fig. 1). Proper tightening torque: 0.7 N·m

Tighten the screws in the order of "1  $\rightarrow$  2  $\rightarrow$  3  $\rightarrow$  4  $\rightarrow$  1  $\rightarrow$  2  $\rightarrow$  3  $\rightarrow$  4"

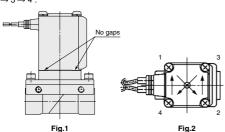

- After tightening the screws, make sure that there are no gaps between the coil and body (Fig. 1).
- After the disassembly and assembly have been completed, make sure that no leak occurs from the seal. Additionally, when restarting the valve, make sure that the valve operates correctly after checking the safety.

# N.C.> Mounting screw Coil assembly Stopper Return spring O-ring A Adapter O-ring C Body assembly

Disassembly/Assembly Procedures

VX2

VXK

מצע

VXZ

VXS

VXB

VXE

VXP

VXR

VXH

VXF

VX3

VXA





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

Tubing size

ø1/8'

ø6

a 1/4

ø8

ø10

ø12

168 or more

#### **Piping**

# **∧** Warning

 During use, deterioration of the tube or damage to the fittings could cause tubes to come loose from their fittings and thrash about.

To prevent uncontrolled tube movement, install protective covers or fasten tubes securely in place.

For piping the tube, fix the product securely using the mounting holes so that the product is not in the air.

#### **⚠** Caution

#### 1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe. Avoid pulling, compressing, or bending the valve body when piping.

- 2. Avoid connecting ground lines to piping, as this may cause electric corrosion of the system.
- Always tighten threads with the proper tightening torque.When attaching fittings to valves, tighten with the proper tightening torque shown below.

Lower tightening torque will lead into fluid leakage.

#### **Tightening Torque for Piping**

Connection threads	Proper tightening torque N·m		
Rc1/8	7 to 9		
Rc1/4	12 to 14		
Rc3/8	22 to 24		
Rc1/2	00.4- 00		
Rc3/4	28 to 32		
Rc1	36 to 38		

#### 4. Connection of piping to products

When connecting piping to a product, avoid mistakes regarding the supply port etc.

#### 5. Winding of sealant tape

When connecting pipes, fittings, etc., be sure that chips from the pipe threads and sealing material do not enter the valve.

Furthermore, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



- If a regulator and valve are connected directly, they may vibrate together and cause chattering. Do not connect directly.
- 7. If the cross-sectional area of piping for the fluid supply side is restricted, operation will become unstable due to inadequate pressure differential during valve operation. Use piping size for the fluid supply side that is suited to the port size.

#### **Recommended Piping Conditions**

 When connecting tubes using One-touch fittings, provide some spare tube length shown in Fig. 1, recommended piping configuration.

Also, do not apply external force to the fittings when binding tubes with bands etc. (see Fig. 2.)




Fig. 1 Recommended piping configuration

82 or more

			Unit: mm
N	Straight portion		
Nylon tubing	Soft nylon tubing	Polyurethane tubing	length
44 or more	29 or more	25 or more	16 or more
84 or more	39 or more	39 or more	30 or more
89 or more	56 or more	57 or more	32 or more
112 or more	58 or more	52 or more	40 or more
140 or more	70 or more	69 or more	50 or more

88 or more

60 or more




Fig. 2 Binding tubes with bands





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Wiring

# **⚠** Warning

 The solenoid valve is an electrical product. For safety, install an appropriate fuse and circuit breaker before use.

When using multiple solenoid valves, it is not sufficient to merely install one fuse on the inlet side. In order to ensure the safety of the devices, select and install a fuse for each circuit.

Do not apply AC voltage to Class "H" coil AC type unless it is built in full-wave rectifier, or the coil will be damaged.

## 

- As a rule, use electrical wire with a cross sectional area of 0.5 to 1.25 mm² for wiring.
   Furthermore, do not allow excessive force to be applied to the lines.
- 2. Use electrical circuits which do not generate chattering in their contacts.
- 3. Use voltage which is within  $\pm 10\%$  of the rated voltage. In cases with a DC power supply where importance is placed on responsiveness, stay within  $\pm 5\%$  of the rated value. The voltage drop is the value in the lead wire section connecting the coil.
- 4. When a surge from the solenoid affects the electrical circuitry, install a surge voltage suppressor etc., in parallel with the solenoid. Or, adopt an option that comes with the surge voltage protection circuit. (However, a surge voltage occurs even if the surge voltage protection circuit is used. For details, please consult with SMC.)

#### **Operating Environment**

## **⚠** Warning

- Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.
- 2. Do not use in explosive atmospheres.
- 3. Do not use in locations subject to vibration or impact.
- 4. Do not use in locations where radiated heat will be received from nearby heat sources.
- Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.

#### Maintenance

# **⚠** Warning

#### 1. Removing the product

The valve will reach a high temperature when used with high temperature fluids. Confirm that the valve temperature has dropped sufficiently before performing work. If touched inadvertently, there is a danger of being burned.

- Shut off the fluid supply and release the fluid pressure in the system.
- 2) Shut off the power supply.
- 3) Dismount the product.

#### 2. Low frequency operation

Switch valves at least once every 30 days to prevent malfunction. Also, in order to use it under the optimum state, conduct a regular inspection once a half year.

#### **⚠** Caution

#### 1. Filters and strainers

- 1) Be careful regarding clogging of filters and strainers.
- Replace filter elements after one year of use, or earlier if the pressure drop reaches 0.1 MPa.
- 3) Clean strainers when the pressure drop reaches 0.1 MPa.

#### 2. Lubrication

When using after lubricating, never forget to lubricate continuously.

#### 3. Storage

In case of long term storage after use, thoroughly remove all moisture to prevent rust and deterioration of rubber materials etc.

4. Exhaust the drain from an air filter periodically.

#### Operating Precautions

## **⚠Warning**

- If there is a possibility of reverse pressure being applied to the valve, take countermeasures such as mounting a check valve on the downstream side of the valve.
- When problems are caused by a water hammer, install water hammer relief equipment (accumulator etc.), or use an SMC water hammer relief valve (VXR series). Please consult with SMC for details.
- 3. For pilot type 2-port solenoid valves, when the valve is closed, sudden pressure resulting from the startup of the fluid supply source (pump, compressor, etc.) may cause the valve momentarily to open and leakage to occur, so please exercise caution.
- 4. If the product is used in the conditions in which rapid decrease in the inlet pressure of the valve and rapid increase in the outlet pressure of the valve are repeated, excessive stress will be applied to the diaphragm, which causes the diaphragm to be damaged and dropped, leading to the operation failure of the valve. Check the operating conditions before use.




Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### **Electrical Connections**

## **.** Caution

#### ■ Grommet

Class B coil: AWG20 Insulator O.D. 2.6 mm Class H coil: AWG18 Insulator O.D. 2.1 mm



	Rated voltage	Lead wire color		
		1	2	
	DC	Black	Red	
	100 VAC	Blue	Blue	
	200 VAC	Red	Red	
	Other AC	Gray	Gray	

\* There is no polarity

# ■ DIN terminal Disassembly

- After loosening the binding head screw with flange, then if the housing is pulled in the direction of the arrow, the connector will be removed from the solenoid valve.
- 2. Pull out the binding head screw with flange from the housing.
- There is a cutout on the bottom of the terminal block. Insert a small flat head screwdriver, etc. into this cutout, and remove the terminal block from the housing. (See figure below.)
- 4. Remove the ground nut, and pull out the washer and the rubber seal.

  Wiring
- Pass the cable through the ground nut, washer and rubber seal in this order, and insert these parts into the housing.
- 2. Loosen the binding head screw of the terminal block, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the binding head screw. The binding head screw of the terminal block is M3.


Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m. Note 2) Cable O.D.: Ø6 to Ø12 mm

Note 3) For an outside cable diameter of ø9 to 12 mm, remove the internal parts of the rubber seal before using.

#### Assembly

- Pass the cable through the ground nut, washer, rubber seal and the housing in this order, and connect to the terminal block.
   Then, set the terminal block inside the housing. (Push in the terminal block until it snaps into position.)
- Insert the rubber seal and the washer in this order into the cable entry of the housing, and then tighten the ground nut securely.
- Insert the gasket between the bottom part of the terminal block and the plug attached to the equipment, and then insert the binding head screw with flange from the top of the housing, and tighten it. Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.

Note 2) The orientation of the connector can be changed in steps of 90° by changing the method of assembling the housing and the terminal block.

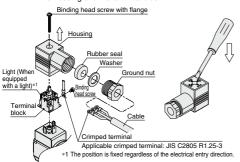

#### **⚠** Caution

Internal connections are as shown below.

Make connections to the power supply accordingly.



Terminal no.	1	2
DIN terminal	+ (-)	- (+)

\* There is no polarity

#### DIN (EN175301-803) Terminal

This DIN terminal corresponds to the Form A DIN connector with an 18 mm terminal pitch, which complies with EN175301-803B.



#### ■ Conduit terminal

#### Disassembly

 Loosen the mounting screw, and remove the terminal cover from the conduit terminal.

#### Wiring

**∂SWC** 

- 1. Insert the cable into the conduit terminal.
- Loosen the screw with UP terminal of the conduit terminal, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the screw with UP terminal. Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.

VX2

VXK

VXD VXZ

VXS

VXB

VXE VXP

VXR

VXH

VXF

VX3



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### **Electrical Connections**

#### **∧** Caution

#### ■ Conduit terminal


#### Assembly

 Insert the gasket into the conduit terminal, and then clamp the terminal cover with the mounting screw.

Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m. Note 2) When changing the orientation of the conduit terminal, carry out the following procedure.


- Apply a tool (monkey wrench, spanner, etc.) to the width across flats of the conduit terminal, and turn the terminal in the counterclockwise direction.
- 2. Loosen the lock nut
- Turn the conduit terminal in the clamping direction (clockwise direction) to about 15° ahead of the desired position.
- Turn the lock nut by hand to the coil side until it is lightly tightened.
- 5. Apply a tool to the width across flats of the conduit terminal, and turn it to the desired position (through an angle of about 15°) so as to clamp the conduit terminal.

Note) When changing the orientation by applying additional tightening force to the conduit terminal from the factory-set position, turn no more than one half a turn.

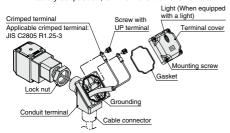

Make connections according to the marks shown below.

- · Use the tightening torques below for each section.
- Properly seal the terminal connection (G1/2) with the special wiring conduit etc.

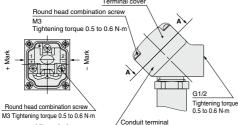

#### View A-A

(Internal connection diagram)

#### ■ Conduit


When used as an IP65 equivalent, use seal to install the wiring conduit. Also, use the tightening torque below for the conduit.

Class B coil: AWG20 Insulator O.D. 2.5 mm

Class H coil: AWG18 Insulator O.D. 2.1 mm

#### **Electrical Connections**

# **⚠** Caution



Detections	Lead wire color		
Rated voltage	1	2	
DC	Black	Red	
100 VAC	Blue	Blue	
200 VAC	Red	Red	
Other AC	Gray	Gray	

\* There is no polarity.


Description	Part no.
Seal	VCW20-15-6

Note) Please order separately.


#### **Electrical Circuits**


#### 

[DC circuit]
Grommet, Flat terminal



Grommet, DIN terminal, Conduit terminal, Conduit





With light/surge voltage suppressor

#### [AC circuit]

Grommet, DIN terminal, Conduit terminal, Conduit



1 o Rectifier element

DIN terminal, Conduit terminal

Without electrical option With light/surge voltage suppressor

# One-touch Fitting

## **⚠** Caution

For information on handling One-touch fittings and on appropriate tubing, refer to page 211 and the Fittings & Tubing section of the "Handling Precautions for SMC Products" on the SMC website.