

# Process Pump (Diaphragm Pump)

# PB Series

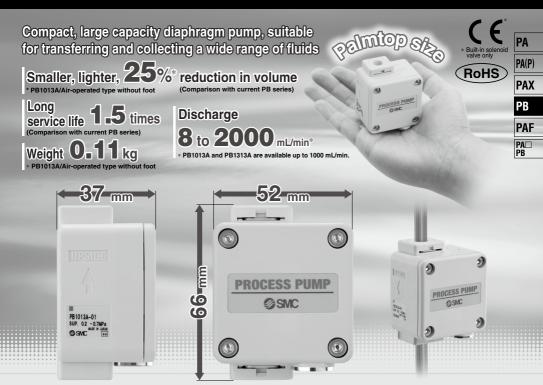

# Space saving (Air operated)

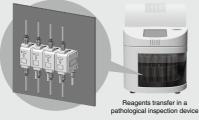

- Low particle generation due to the diaphragm structure
- Flammable fluids can be used. (Air operated)
- Self-priming makes priming unnecessary.
   Sucks the liquid even if the pump is dry.
- Assembled in a clean room. Double packaged (PB1313A).
- Easy to adjust the flow rate by the frequency of ON/OFF of the solenoid valve.

# edgmax2 notacilggA

Car washing machine Water/ detergents supply Printing machine Ink/solutions supply Semiconductor/ LCD equipment DI water/solutions supply, Waste fluid collection Analyzer for medical and biochemistry Reagents supply

Machine tool Oil supply Cleaning device DI water/ hydro-carbonic cleaning liquid supply Devices related to solar cell/ secondary battery Electrolyte/ DI water supply

Body wetted

Polypropylene Stainless steel 316 Wetted materials

Body: New PFA
Diaphragm: PTFE







PB1313A Air operated




# **Process Pump**

# Built-in Solenoid Valve/Air Operated PB1000A Series



# Check valve is resistant against foreign matter.

Flow passage around the check ball is enlarged and improved for better resistance against foreign matter.



Fluid passage area comparison

1.5 times (Comparison with current PB series)



Smaller, lighter, 25% reduction in volume (Air operated/PB1013A)

# Power consumption reduced

 $0.45 \text{ W} \rightarrow 0.35 \text{ W}$ 

CE-compliant

(Built-in solenoid valve/PB1011A)

# Longer life [Life is 1.5 times longer than the current product.]

Longer life is realized by changing PTFE diaphragm to modified PTFE with better resistance.

**RoHS** 

# Mounting Variations Note) Mounting orientation: <FLUID OUT> port on top only





Suction port



# **Series Variations**

Series	Actuation	Discharge	Material			Port size	Made to Order		
Series	Actuation	(mL/min)	Body wetted parts	Diaphragm	Check valve	Liquid contact seals	FUIT SIZE	wade to Order	
PB1011A	Built-in solenoid valve	8 to 2000	Polypropylene (PP) Stainless steel (SUS316)	Polypropylene (PP)	(PP)	PTFE	FIZNA		_
PB1013A	Air operated	8 to 1000		PTFE	PP	FKM	1/8 female thread	Liquid contact seals SF7000 With bracket which is interchangeable with previous type	
PB1313A	Air operated	8 to 1000	New PFA	PTFE	PTFE New PFA	PTFE	1/8 female thread, 1/4" tube extension, With nut (LQ1/LQ3)	_	

PA

PA(P)

PAX

PB

PAF

# Air Operated/Wetted Materials: Fluoropolymer PB1313A Series


# PROCESS PUMP


# Compact pump for DI water/chemical liquids

- For transferring and collecting DI water/chemical liquids\* Wetted Body New PFA

  \* Refer to page 625 for applicable fluids. Diaphragm PTFE
- Assembled in a clean room. Double packaged

Variation on fittings with nut (PB1313A only)

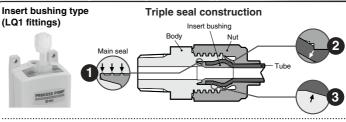

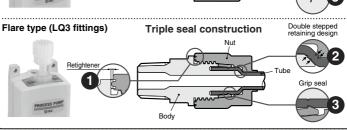






**Application Examples** 







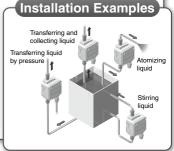

# **Process Pump (Diaphragm Pump)**

Body Wetted Parts: Polypropylene/Stainless Steel Built-in Solenoid Valve/Air Operated (External switching type)

# PB1000A Series

How to Order

\* Built-in solenoid valve only

# Built-in Solenoid Valve PB1011A



Air Operated PB1013A





Actuation	
Actuation	
-in solenoid valve	
Air operated	

Symbol

1 Built

Thread type		
Symbol	Type	
Nil	Rc	
N	NPT	
E G		

01

# Port size Symbol Port size

1/8

Made to Order

made to order.

(For details, refer to page 588.)

	None
	Liquid contact seals SF7000
X47	With bracket which is interchangeable with previous type
	D40404 - in

Option


Symbol	Option	Applicable actuation		
Symbol	Option	Built-in solenoid valve	Air operated	
Nil	None	•	•	
В	With foot	•	•	
N	With silencer **	•	_	

- \* When option is more than one,
- suffix in alphabetical order.


  \*\* For AIR EXH: AN120-M5



#### Symbol



Built-in solenoid valve



# **Specifications**


Model		PB1011A	PB1013A		
Actuation			Built-in solenoid valve	Air operated	
	Main fluid su	ction/discharge port		3 female thread	
Port size	Pilot air	Supply port	Rc, NPT, G 1/8	3 female thread	
	r not an	Exhaust port	M5 x 0.8 female thread	_	
	Body wet	ted parts	Polypropylene (PP), St	ainless steel (SUS316)	
Material	Diaphragi	n	PT	FE	
Wateriai	Check val	ve	PTFE, Polypi	ropylene (PP)	
		ntact seals	Fr	(M	
Discharge	Note 1)		8 to 2000 mL/min	8 to 1000 mL/min Note 2)	
Average of	discharge p	ressure	0 to 0.	6 MPa	
Pilot air p	Pilot air pressure		0.2 to 0.7 MPa		
	Air consumption		40 L/min (ANR) or less		
Suction head Note 1)		Up to 2.5 m (dry state inside the pump)			
Noise			() or less		
		(Option: With silencer AN120-M5)			
Withstand pressure		1.05	MPa		
Diaphragm life (Reference)		30 million			
Fluid tem	perature		0 to 50°C (No freezing, heat cycle not applied)		
	emperature		0 to 50°C (No freezing, heat cycle not applied)		
		ating cycle	1 to 10 Hz		
Pilot air solenoid valve recommended Cv value			0.2 Note 3)		
Weight		0.18 kg 0.11 kg			
Mounting orientation		FLUID OUT port upside			
Packaging		General environment			
	Maximum viscosity		100 mPa⋅s		
	pply voltag	е	24 VDC	_	
Power co	nsumption		0.35 W	_	


- \* Each of the values above are for normal temperatures and clear water.
- \* For related products, refer to pages 622 to 623.
- \* Faulty sealing of the check valves or accumulation of dust may cause operation to stop, so slurry processing is not available.
- \* Refer to page 586 for maintenance parts.
- Note 1) The values given for discharge and suction head are for no piping. Values will depend on piping conditions.
- Note 2) Applicable up to 2000 mL/min by using a solenoid valve with a large Cv value (Cv value of 0.5 or more).
- Note 3) With low operating cycles, even a valve with a small Cv value can be operated.




# Flow Rate Characteristics

# Built-in Solenoid Valve (PB1011A)

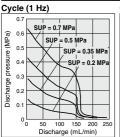



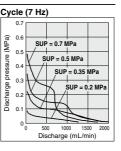

# Selection from Flow Rate Characteristic Graph

#### ■ Required specification example

Find the pilot air pressure for a discharge rate of 600 mL/min and a discharge pressure of 0.15 MPa for builtin solenoid valve type.

PA

PA(P)

PAX

PB

PAF


<The transferred fluid is clear water (viscosity of 1 mPa·s, specific gravity of 1.0) and solenoid valve cycle is 5 Hz.> When the total pump head is required instead of the discharge pressure, a discharge pressure of 0.1 MPa corresponds to a total pump head of 10 m.

#### ■ Selection procedure

- 1. First, mark the intersection point for a discharge rate of 600 mL/min and a discharge pressure of 0.15 MPa.
- 2. Find the pilot air pressure for the marked point. In this case, the point is between the discharge curves for 0.35 MPa and 0.5 MPa, and based on the proportional relationship to these lines, the pilot air pressure for
- this point is approximately 0.4 MPa.

- 1. Flow rate characteristics are for clear water (viscosity of 1 mPa-s, specific gravity of 1.0), no piping for suction and discharge.
- 2. The amount of discharge differs greatly depending on properties (viscosity, specific gravity) of the fluid being transferred and operating conditions (pump head, transfer distance), etc.

# Air Operated (PB1013A)



Air Consumption

consumption (L/min [ANR])

Ā

40


35


30

25

20

10



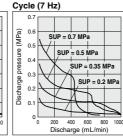

# Air Consumption: Built-in Solenoid Valve/Air Operated

Cycle (5 Hz)

#### Calculation of Air Consumption

Find the air consumption for operation with a 5 Hz switching cycle and pilot air pressure of 0.35 MPa from the air consumption graph.

#### ■ Selection procedure

- 1. Look up from the 5 Hz switching cycle to find the intersection with SUP = 0.35 MPa.
- 2. From the point just found, draw a line to the Y-axis to find the air consumption. The result is approximately 10 L/min (ANR).

#### **⚠** Caution

1. The air consumption differs greatly depending on properties (viscosity, specific gravity) of the transferred fluid and operating conditions (pump head, transfer distance), etc.

# SUP = 0.2 MPa


Cycle (Hz)

SUP = 0.35 MPa

# Viscosity Characteristics: Built-in Solenoid Valve/Air Operated

# **Viscosity Characteristics**

(Flow rate correction for viscous fluids)

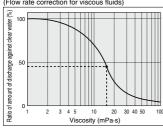

\* Transfer is possible up to about 100 mPa-s.

# Selection from Viscosity Characteristic Graph

#### ■ Required specification example

Find the pilot air pressure and pilot air consumption for a discharge rate of 270 mL/min, discharge pressure of 0.15 MPa, and a viscosity of 15 mPa·s.


#### ■ Selection procedure

- 1. First, find the ratio of the amount of discharge against clear water when viscosity is 15 mPa·s from the graph to the left. It is determined to be 45%.
- 2. Next, the viscosity of 15 mP·s and the discharge rate of 270 mL/min in the required specification example are converted to the amount of discharge for clear water.
- Since 45% of the clear water discharge is equivalent to 270 mL/min in the required specifications, 270 mL/min ∏ 0.45 = approximately 600 mL/min, indicating that a discharge rate of 600 mL/min is required for clear water.
- 3. Finally, find the pilot air pressure and pilot air consumption based on the flow rate characteristic
- Relationship between the kinematic viscosity Kinematic viscosity ν [m²/s] = Viscosity μ [Pa·s]/Density [kg/m³]
  - 1 cP = 1 mPa·s = 10-3Pa·s 1 cSt = 1 mm<sup>2</sup>/s = 10<sup>-6</sup>m<sup>2</sup>/s



# PB1000A Series

# Working Principle: Built-in Solenoid Valve/Air Operated

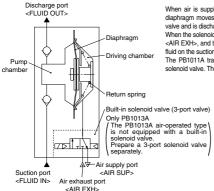

When air is supplied with the built-in solenoid valve turned ON (energized), air enters the driving chamber and the diaphragm moves to the left. Due to this movement, the fluid in the pump chamber passes through the upper check valve and is discharged to the discharge port <FLUID OUTS.

When the solenoid valve is turned OFF (de-energized), the air inside the driving chamber is evacuated to air exhaust port <AIR EXH>, and the diaphragm is moved to the right by the return inforce of the return spring. Due to this movement, the fluid on the suction port <FUIDI IN> passes through the check valve and is sucked into the pump chamber.

The PB1011A transfers the fluid continuously by suction and discharge in turn by repeating ON/OFF of the built-in solenoid valve. The PB1013A air-operated type is operated by the ON/OFF operation of an external solenoid valve.

#### **Maintenance Parts**


 Basically, it is not recommended to disassemble the process pump. However, if this is necessary, be sure to follow the instructions in the maintenance procedure.
 When carrying out this work, wear appropriate protective equipment.

#### PB1000A Series

Description	PB1000A series		
Description	PB1011A	PB1013A	
Diaphragm kit	KT-PB1A-9	KT-PB1A-2	
Check valve kit	KT-PB1A-1		
Port set	KT-PB1A-7□ Note)		
Packing kit	KT-PB1A-4		
Foot kit	KT-PB1-3	KT-PB1A-5	
Solenoid valve kit	SYJ314M-5H-Q	_	

Note) One of Nil, F or N is entered as a thread symbol.

# Piping and Operation: Built-in Solenoid Valve/Air Operated

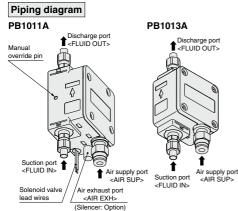

# Recommended Valve (Air operated)

# Circuit example/Built-in solenoid valve ON/OFF signal ON/OFF signal Air supply Air filter Air supply Air filter Air supply Process pump PB1011A Transferred liquid

# **∧** Caution


Be sure that the discharge port <FLUID OUT> is on top when the pump is mounted. Supply clean air that has passed through a filter or mist separator, etc., to the air supply port <AIR SUP>. Air that contains debris or drainage, etc., will have an adverse effect on the built-in solenoid valve, and will cause malfunction of the pump. Maintain the proper tightening torque for fittings or mounting bolts. Looseness can cause problems such as liquid or air leakage, while over-tightening can cause damage to threads or parts, etc.

# Operation

- Connect air piping to the air supply port <AIR SUP>, and connect piping for transferred fluid to the suction port <FLUID IN> and the discharge port <FLUID OUT>.
- Connect the solenoid valve lead wires to a 24 VDC power supply. Red is (+) and Black is (-). (The PB1013A air-operated type must be equipped with a separate 3-port solenoid valve.)
- 3. Using a regulator, set the pilot air pressure within the range of 0.2 to 0.7 MPa. By continuously turning the 24 VDC power ON/OFF, the fluid flows from the suction port <FLUID IN> to the discharge port <FLUID OUT>. The pump performs suction with its own power even without priming, Idle run of the pump shall be 3 minutes or less for the intake of the liquid.
- 4. To stop the pump turn OFF the 24 VDC power. Also, be sure to turn OFF the power when the discharge side is closed. If the pump is stopped for a long time, exhaust the air from the <AIR SUP> port. The manual override pin is used for manual operation when there is no electric power. Each time it is pressed, there is one reciprocal operation.


For the PB1013A air-operated type, stop the 3-port solenoid valve, and be sure to discharge air from the pump. Although the pump can be stopped by closing the throttle installed in the discharge side, avoid stopping operation for a long time. If the valve opens/closes suddenly, surge is generated, shortening the pump life. When the tank for fluid suction side is empty, stop operating the pump imme-


#### Circuit example/Air operated

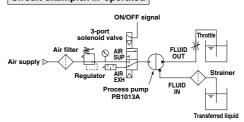

# Process Pump Built-in Solenoid Valve/Air Operated PB1000A Series

#### **Dimensions**

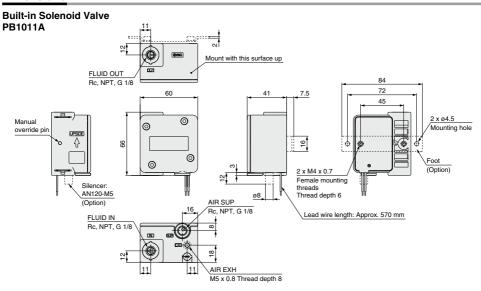

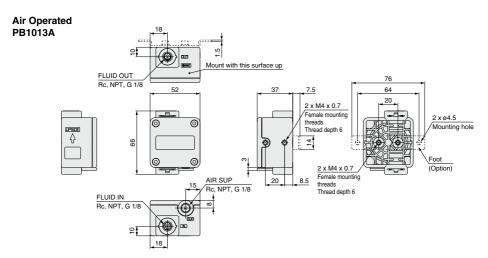

# **⚠** Caution

# 1. Check the mounting orientation of the product.

Mount the product vertically so that the <FLUID OUT> port faces upward.

Also, secure all specified mounting positions when using the product. If the propagation of the vibration of the pump is not acceptable, insert vibro-isolating rubber when mounting.

PA

PA(P)

PAX

PB

PAF

PA□ PB


# PB1000A Series Made to Order

Please contact SMC for detailed dimensions, specifications and lead times.



# 1 Liquid contact seals SF7000 (Perfluoropolyether rubber)


X16

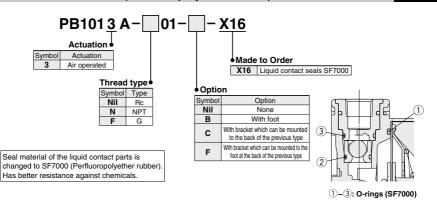


# 2 With bracket which is interchangeable with previous type


Y47

Bracket which is interchangeable with previous PB1000 series is mounted.

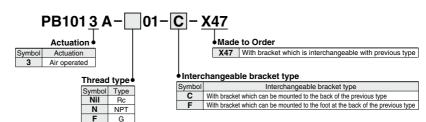



With bracket which can be mounted to the back of the previous type: C

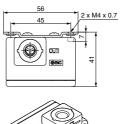



# With bracket which can be mounted to the foot at the back of the previous type: F





# **Process Pump (Diaphragm Pump)**

Wetted Materials: Fluoropolymer

Air Operated (External switching type)

# PB1313A Series

Actuation 6

PB1313A

Actuation

Air operated

Diaphragm material 9

Material

PTFE



How to Order

Port size Symbol

Female thread

01

PA(P) Main fluid Connection size PAX connection size in the air side PB

Rc1/8

G1/8

RoHS

PA

PAF

PA□

PB

N01 NPT1/8 F01

**Tube extension** 1/4" tube P07N NPT1/8 extension P07F G1/8

Female thread Tube extension

> Female thread/ **Tube extension**

when SMC fitting, LQ series, is used.

With nut\* \* The pump with nut is recommended

Symbol

Symbol

PB13 1 3 A S-Connection method Symbol Connection method

s With nut Note) Note) Refer to page 590 for details of the connection of the nut.

Port size

P07

Symbol	connection size	in the air side		
With nut				
1S07	With LQ1	Rc1/8		
1S07N	size 2 nut	NPT1/8		
1S07F	Size 2 Hut	G1/8		
3S07	With LQ3	Rc1/8		
3S07N	size 2 nut	NPT1/8		
3S07F	Size 2 Hut	G1/8		


Main fluid Connection size





With nut (LQ1 fittings)

With nut (LQ3 fittings)



# Specifications

Model		PB1313A	
Actuation		Air operated	
Port size	Main fluid suction/discharge port	Rc, NPT, G 1/8 female thread, 1/4" tube extension, With nut (LQ1/LQ3)	
Port Size	Pilot air supply/exhaust port	Rc, NPT, G 1/8 female thread	
	Body wetted parts	New PFA	
Material	Diaphragm	PTFE	
wateriai	Check valve	PTFE, New PFA	
	Liquid contact seals	PTFE	
Discharge	Note 1)	8 to 1000 mL/min	
Average d	lischarge pressure	0 to 0.4 MPa	
Pilot air pressure		0.2 to 0.5 MPa	
Air consumption		15 L/min (ANR) or less	
Suction head Note 1)		Up to 0.5 m	
Noise		71 dB (A) or less	
Withstand pressure		0.75 MPa	
Diaphragm life (Reference)		50 million cycles	
Fluid temperature		0 to 50°C (No freezing, heat cycle not applied)	
Ambient temperature		0 to 50°C (No freezing, heat cycle not applied)	
Recommended operating cycle		1 to 5 Hz	
Pilot air solenoid valve recommended Cv value		0.2 Note 2)	
Weight		0.3 kg	
Mounting orientation		FLUID OUT port upside	
Packaging	]	Double clean package	
Maximum	viscosity	100 mPa⋅s	

- \* Each of the values above are for normal temperatures and clear water.
- \* For related products, refer to pages 622 to 623.
- \* Faulty sealing of the check valves or accumulation of dust may cause operation to stop, so slurry processing is not available.
  - Refer to page 592 for maintenance parts.
- Note 1) The values given for discharge and suction head are for no piping. Values will depend on piping conditions.


  Note 2) With low operating cycles, even a valve with a small Cv value can be operated.



# How to Order Fittings for Products with Nut (PB1313AS)

Fittings compatible for the process pump with nut/PB1313AS.

Product without nut (insert bushing), 1 piece nut removed, which is not necessary in cases when using the products with nut.

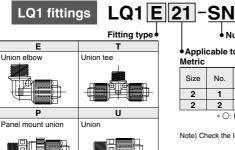

Union tee

Union

m de la composition della comp

# Nut (including insert bushing), 1 location removed

# Applicable tube size

# Metric

Size	No.	Applicable tube size (mm)	Reducing*
2	1	6 x 4	0
2	2	4 x 3	•
* ○: Basic size   : With reducer			

Nut. 1 location removed

Inch Applicable Size Symbol Reducing<sup>3</sup> tube (inch) 1/4" x 5/32" 2 Α 2 В 3/16" x 1/8" 2 1/8" x 0.086'

> \* O: Basic size : With reducer

Note) Check the IN/OUT side fitting size and fitting type for selecting the fitting.

# LQ3 fittings

Union elbow

LQ3 E 2A-SN

# Fitting type

Applicable tube size

Size	Symbol	Applicable tube size (inch)
2	Α	1/4" x 5/32"

Note) Check the IN/OUT side fitting size and fitting type for selecting the fitting.


# 

- 1. For detailed specifications and Specific Product Precautions about fittings (LQ1, LQ3), refer to "Best Pneumatics No. 7."
- 2. Refer to the pamphlet "High-Purity Fluoropolymer Fittings Hyper Fittings/LQ1, 2 series Work Procedure Instructions" (M-E05-1) or "High Purity Fluoropolymer Fittings Hyper Fittings/Flare Type LQ3 series Fitting Procedure" (M-E06-4) for connecting tube. (Downloadable from our website.)





# **Ordering Example**

Panel mount union

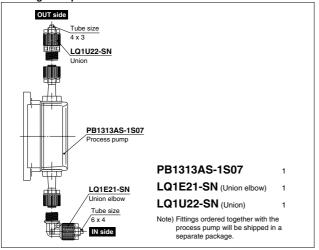


# Flow Rate Characteristics: Air Operated (PB1313A)

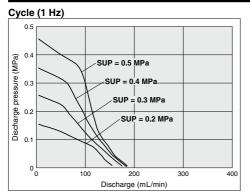

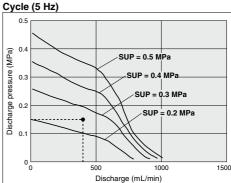


# PA PA(P) PAX PB PAF PAPB

#### Air Consumption

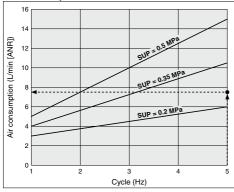

# Viscosity Characteristics (Flow rate correction for viscous fluids)

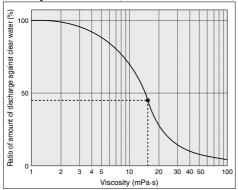

\* Transfer is possible up to about 100 mPa-s

# Selection from Flow Rate Characteristic Graph

### ■ Required specification example

Find the pilot air pressure for a discharge rate of 400 mL/min and a discharge pressure of 0.15 MPa.

- <The transferred fluid is clear water (viscosity 1 mPa·s, specific gravity of 1.0) and solenoid valve cycle is 5 Hz.>
- When the total pump head is required instead of the discharge pressure, a discharge pressure of 0.1 MPa corresponds to a total pump head of 10 m.

#### ■ Selection procedure

- First, mark the intersection point for a discharge rate of 400 mL/min and a discharge pressure of 0.15 MPa.
- Find the pilot air pressure for the marked point. In this case, the point is between the discharge curves for 0.2 MPa and 0.3 MPa, and based on the proportional relationship to these lines, the pilot air pressure for this point is approximately 0.25 MPa.

#### **Calculation of Air Consumption**

Find the air consumption for operation with a 5 Hz switching cycle and pilot air pressure of 0.25 MPa from the air consumption graph.

#### ■ Selection procedure

- Look up from the 5 Hz switching cycle to find the intersection with SUP = 0.25 MPa.
- From the point just found, draw a line to the Y-axis to find the air consumption. The result is approximately 7.5 L/min (ANR).

#### **↑** Caution

- Flow rate characteristics are for clear water (viscosity of 1 mPa·s, specific gravity of 1.0).
- The amount of discharge differs greatly depending on properties (viscosity, specific gravity) of the transferred fluid and operating conditions (pump head, transfer distance), etc.

#### Selection from Viscosity Characteristic Graph

# ■ Required specification example

Find the pilot air pressure and pilot air consumption for a discharge rate of 180 mL/min, discharge pressure of 0.15 MPa, and a viscosity of 15 mPa·s.

# ■ Selection procedure

- First, find the ratio of the amount of discharge against clear water when viscosity is 15 mPa·s from the graph to the left. It is determined to be 45%.
- 2. Next, the viscosity of 15 mP-s and the discharge rate of 180 mL/min in the required specification example are converted to the discharge rate for clear water. Since 45% of the amount of clear water discharge is equivalent to 180 mL/min in the required specifications, 180 mL/min ÷ 0.45 = approximately 400 mL/min, indication that a discharge rate of 400 mL/min is required for clear water.
- Finally, find the pilot air pressure and pilot air consumption based on the flow rate characteristic graphs.


### ■ Relationship between the kinematic viscosity

Kinematic viscosity v [m<sup>2</sup>/s] = Viscosity  $\mu$  [Pa·s]/Density [kg/m<sup>3</sup>]

- · 1 cP = 1 mPa·s = 10-3Pa·s
- · 1 cSt = 1 mm<sup>2</sup>/s = 10<sup>-6</sup>m<sup>2</sup>/s

# PB1313A Series

# Working Principle: Air Operated

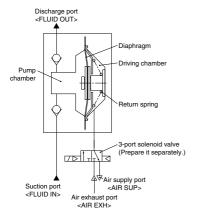

When air is supplied with the external 3-port solenoid valve turned ON (energized), air enters the driving chamber and the diaphragm moves to the left. Due to this movement, the fluid in the pump chamber passes through the upper check valve and is discharged to the discharge port <FLUID OUT>.

When the solenoid valve is turned OFF (de-energized), the air inside the driving chamber is evacuated to air exhaust port <AIR EXH>, and the diaphragm is moved to the right by the return force of the return spring. Due to this movement, the fluid on the suction port <FLUID IN> passes through the check valve and is sucked into the pump chamber.

The fluid is transferred continuously by suction and discharge in turn by repeating ON/OFF of the built-in solenoid valve.

# **Maintenance Parts**

- ♠Basically, it is not recommended to disassemble the process pump. However, if this is necessary, be sure to follow the instructions in the maintenance procedure.
  - When carrying out this work, wear appropriate protective equipment.

### PB1313A Series

Description	PB1313A series	
Check valve kit	KT-PB1A-501	
Diaphragm kit	KT-PB1A-502	

# Piping and Operation: Air Operated

# Piping diagram



# Recommended Valve (Air operated)

			٧٠	Opo.	
PB1313A		SYJ5	]4		

# **⚠** Caution


Be sure that the discharge port <FLUID OUT> is on top when the pump is mounted. Supply clean air that has passed through a mist separator etc., to the air supply port <AIR SUP>. When air needs additional purification, use a mist separator (AM series) and a micro mist separator (AMD series) together.

Maintain the proper tightening torque for fittings or mounting bolts. Looseness can cause problems such as liquid or air leakage, while over-tightening can cause damage to threads or parts, etc.

#### Operation

- Connect air piping to the air supply port <AIR SUP>, and connect piping for transferred fluid to the suction port <FLUID IN> and the discharge port <FLUID OUT>
- 2. Set the pilot air pressure within the range of 0.2 to 0.5 MPa. If air is supplied or discharged intermittently using a 3-port solenoid valve, the pump operates, then after a short time the fluid flows from suction port <FLUID IN> to the discharge port <FLUID OUT>. The pump performs suction with its own power even without priming. Idle run of the pump shall be 3 minutes or less for the intake of the liquid.
- 3. To stop the pump, stop the 3-port solenoid valve, and be sure to discharge air from the pump. Although the pump can be stopped by closing the throttle installed in the discharge side, avoid stopping operation for a long time. If the valve opens/closes suddenly, surge is generated, shortening the pump life. When the tank for fluid suction side is empty, stop operating the pump immediately.


# Circuit example/Air operated



AIR SUP

# **Dimensions**

# Air Operated PB1313A

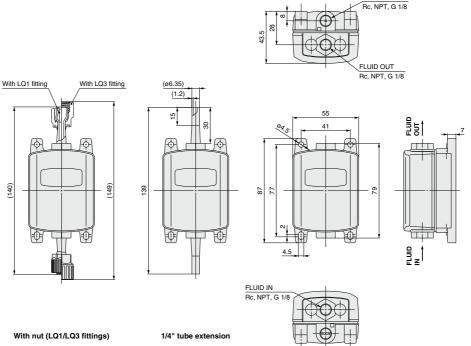

# **⚠** Caution

# 1. Check the mounting orientation of the product.

Mount the product vertically so that the <FLUID OUT> port faces upward.

Also, secure all specified mounting positions when using the product. If the propagation of the vibration of the pump is not acceptable, insert vibro-isolating rubber when mounting.

#### 2. Open the sealed package inside a clean room.

Products specified for clean room (PB1313A) are sealed and double packaged inside a clean room. We recommend that the inner package should be opened inside a clean room or clean environment.

PA

PA(P)

РВ

PAF PA□ PB